


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	MK	KB	2754	10/06/22	First Issue
b	MK	KB	2833	17/11/22	Updated instructions for track nut positions, clicking of side frame onto bars and where to strap onto rack.
c	YZL	KB	3034	12/09/23	Updated instructions to include new black Kamm rack part codes. Changed torque value from 10Nm to 6Nm in step 12.
d	FT	KB	3445	10/03/25	Added Ford Connect 2024-
e					
f					
g					
h					
i					
j					
k					
l					
m					

KD4KR

KammRack

Instructions

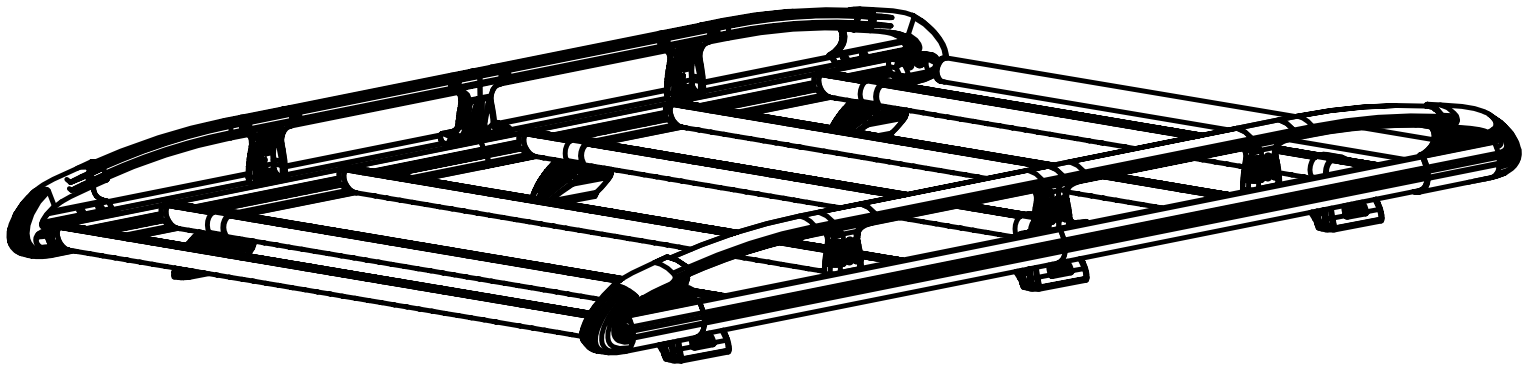



CITY CRASH (✓)

According to ISO/ PAS 11154:2006


KD4KR:

VW Caddy 5, 2020–
Connect, 2024–


Ford

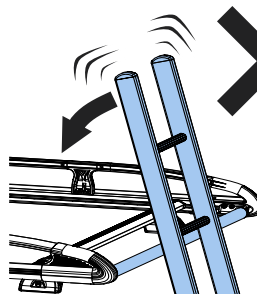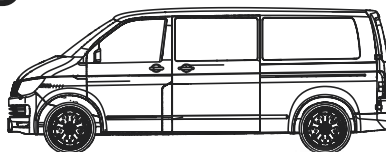


Max
50kg/110lbs

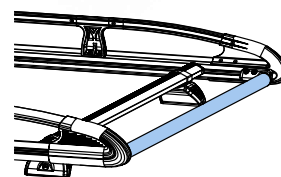


KammRack

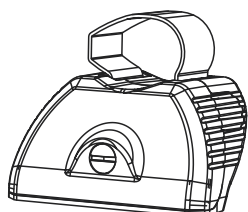

SA397U x 4 ☐

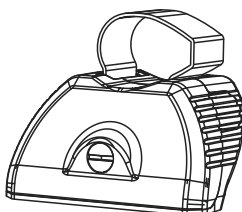

SA398U x 4 ☐

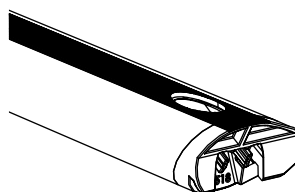


SA428/S
A466 ☐




C04 x 8
*optional

LHS x 2


RHS x 2

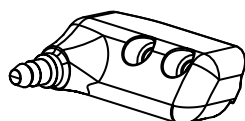



PS519 x 1 ☐

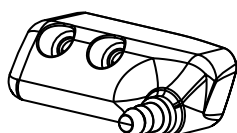


PS520 x 1 ☐

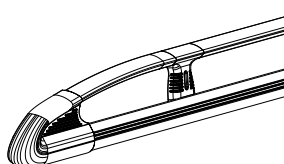

ASF x 1 ☐

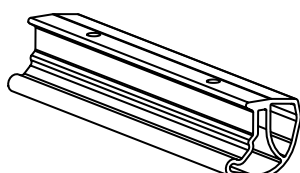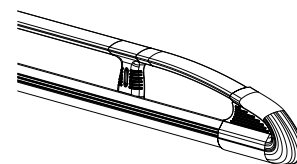


EXT15-02 x 2 ☐

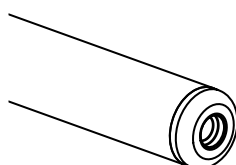


SA436 x 1 ☐


Fitting Kit




PS176 x 4 ☐




PS023 x 4 ☐




PS319 x 4 ☐




PS404 x 4 ☐

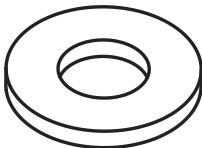


FW002 (M8) x 8 ☐

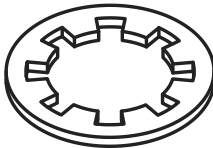


FW009 (M8) x 8 ☐

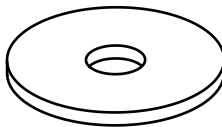


PS208 (M8) x 8 ☐

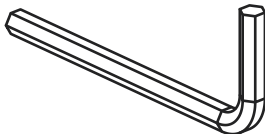


FT01 x 1 ☐




FS081 ☐ (M8
x 50) x 4



FS061 ☐
(M8 x 35) x 4



FS059 ☐ (M8
x 25) x 16

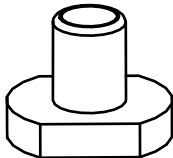


FN085 x 16 ☐




FT05 x 1


1.

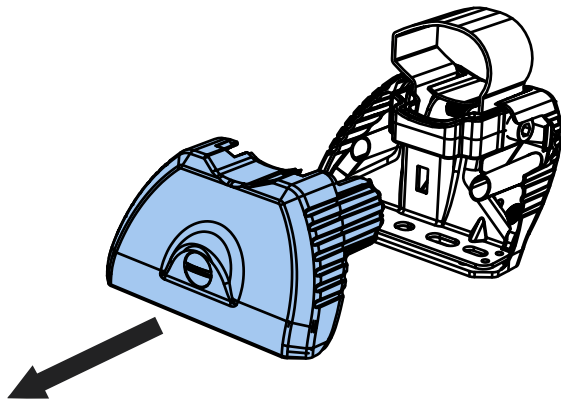


2.

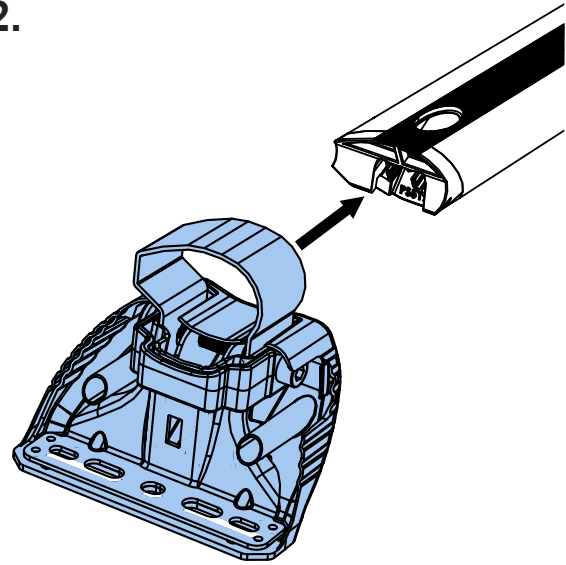


3.

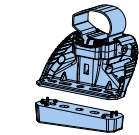


SA397U
PS176

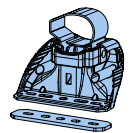

SA397U
PS404

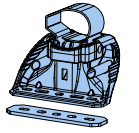


SA397U
PS404

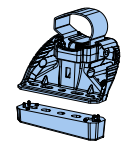


SA397U
PS176

R

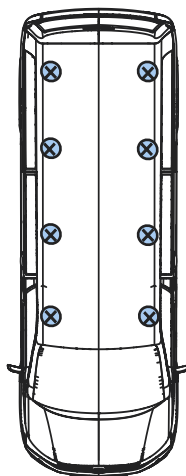


F


SA398U
PS176




SA398U
PS404




SA398U
PS404




SA398U
PS176






4.

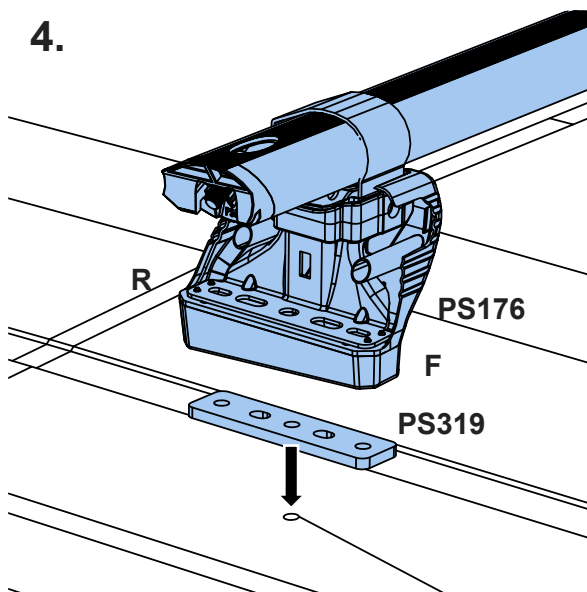


5.


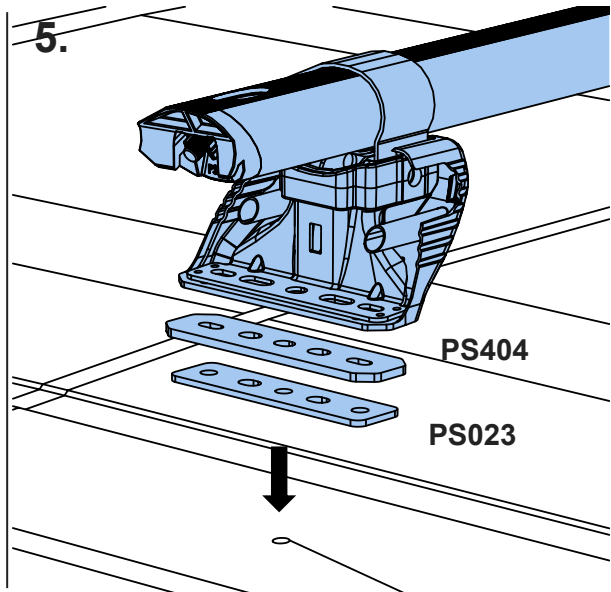


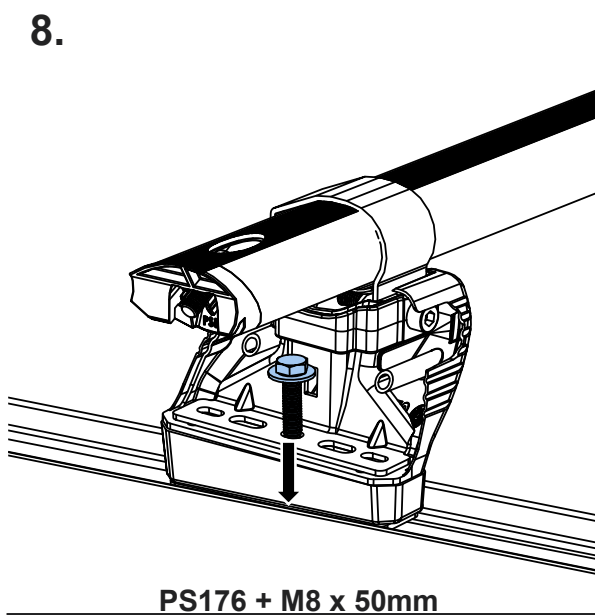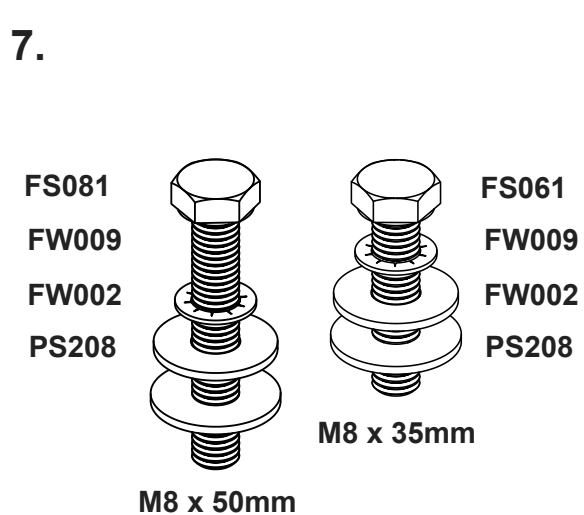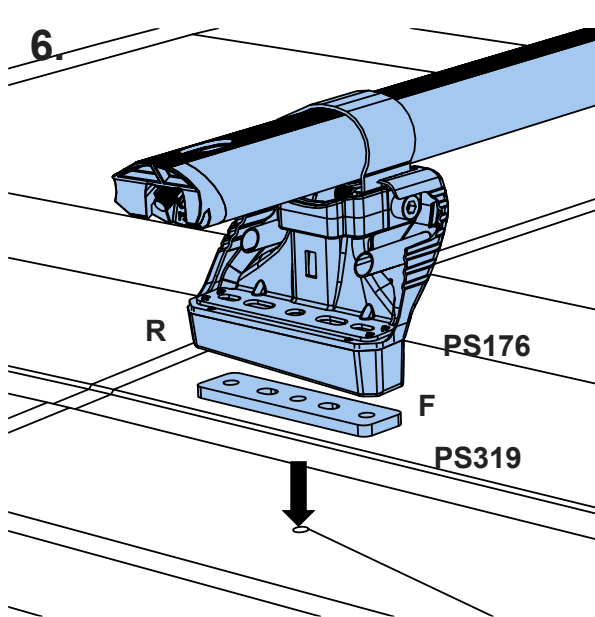


PS176 + M8 x 50mm

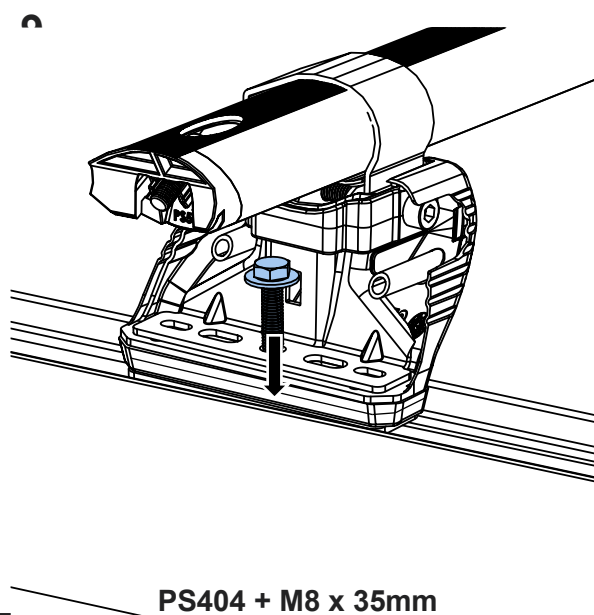


PS404 + M8 x 35mm

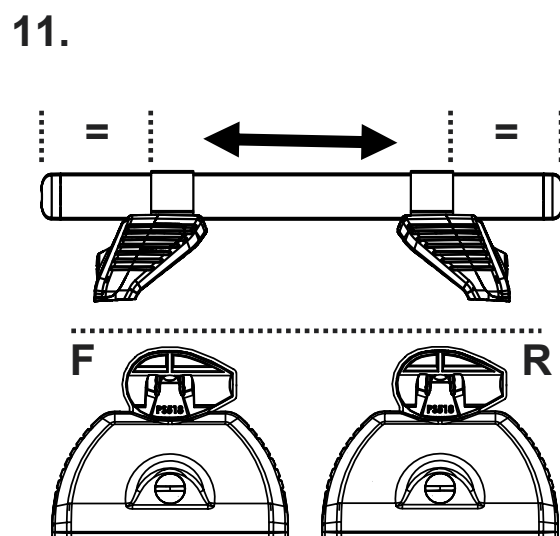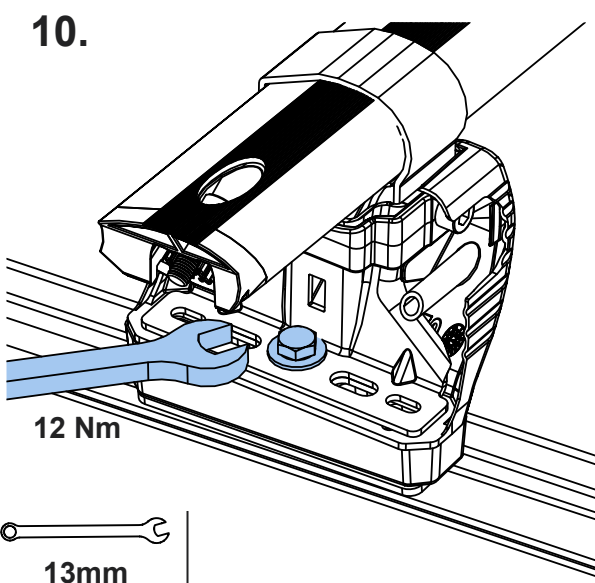


12.

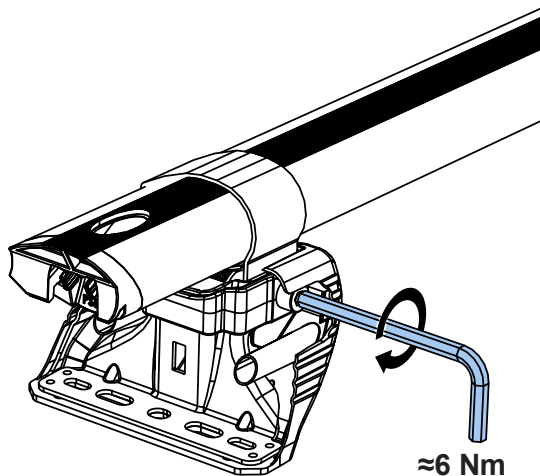




13.

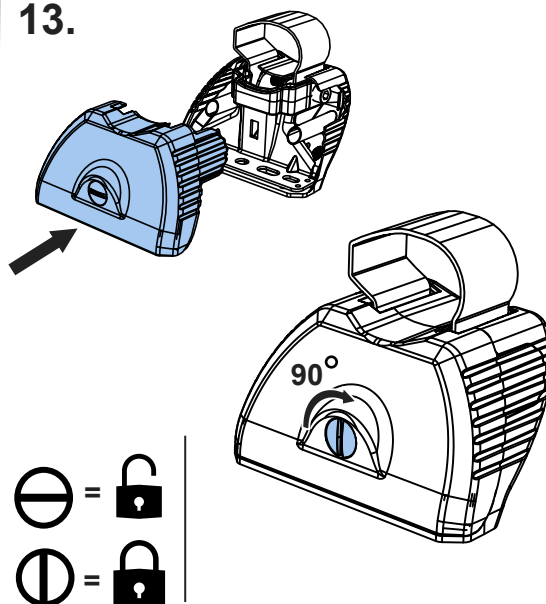




14.

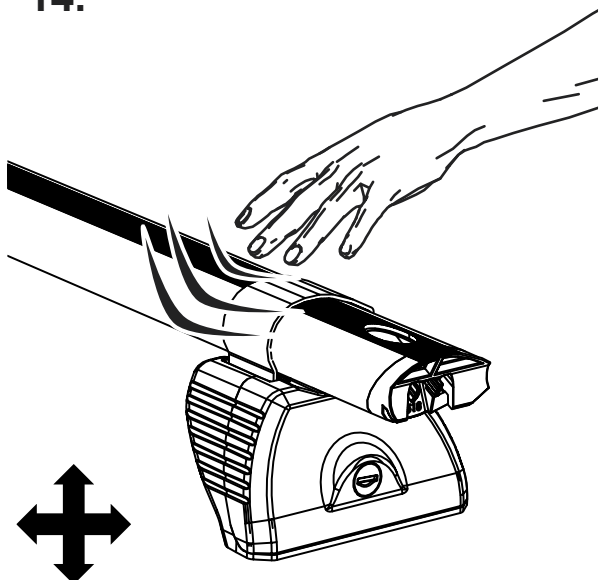


K683/B683- VW Caddy 5 2020- , Ford Connect 2024- L2, Twin Doors

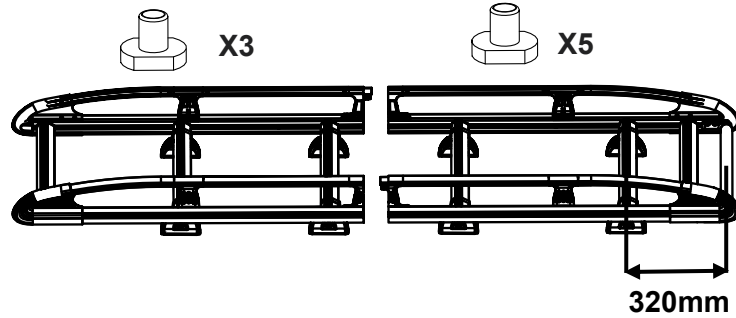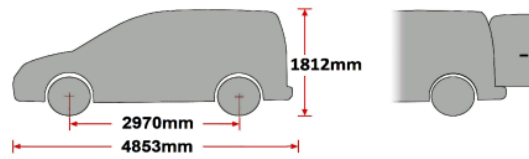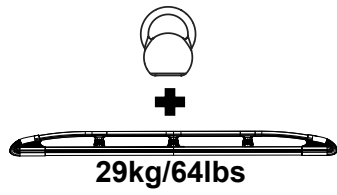


K684/B684- VW Caddy 5 2020- , Ford Connect 2024- L2, Tailgate

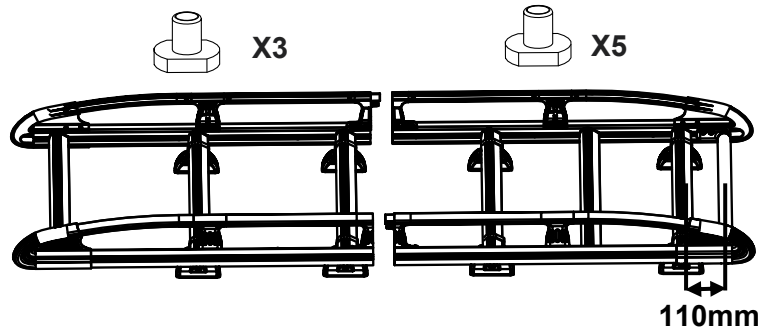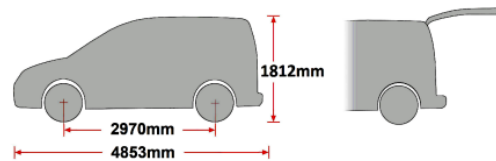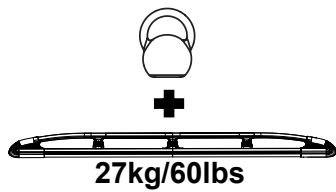


15.

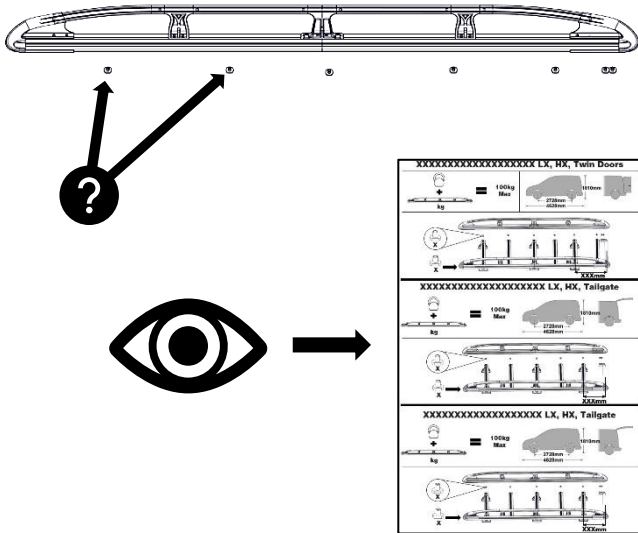


16.

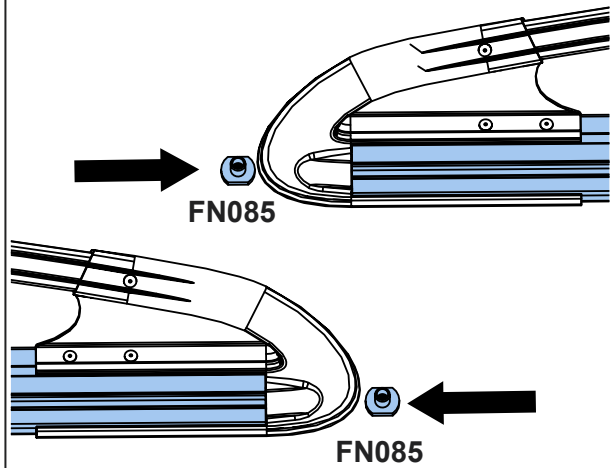


17.

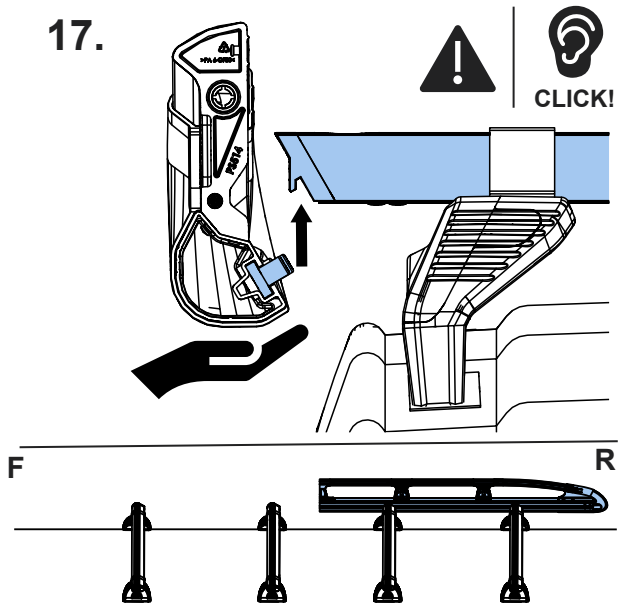


18.






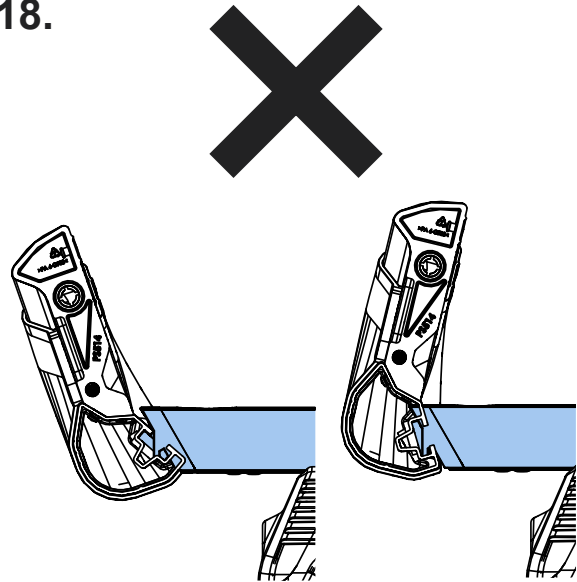


19.

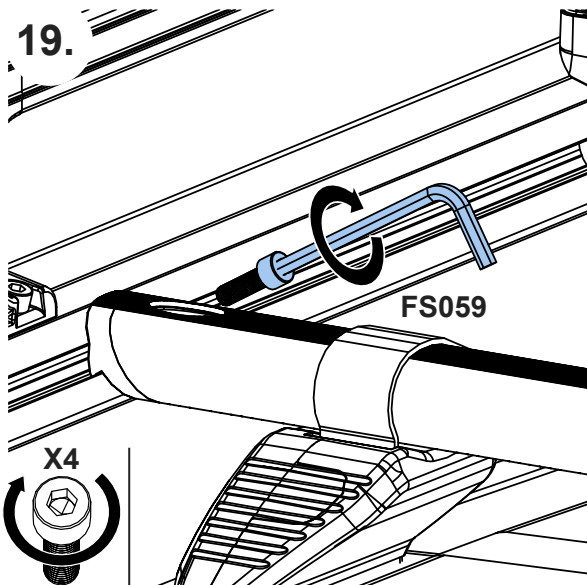


20.

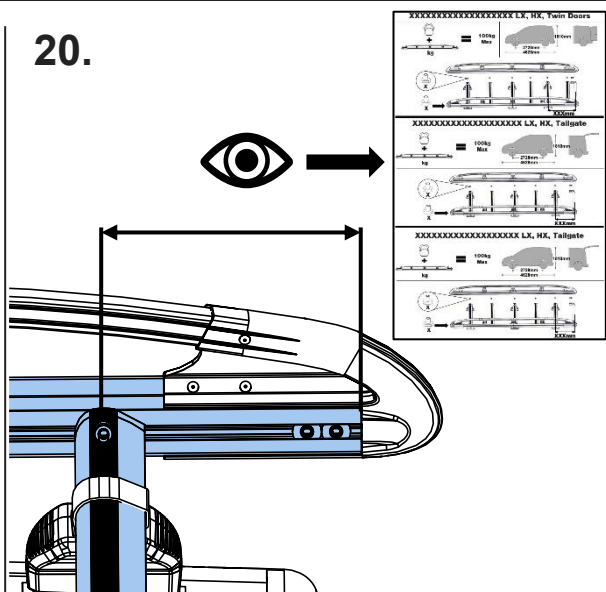


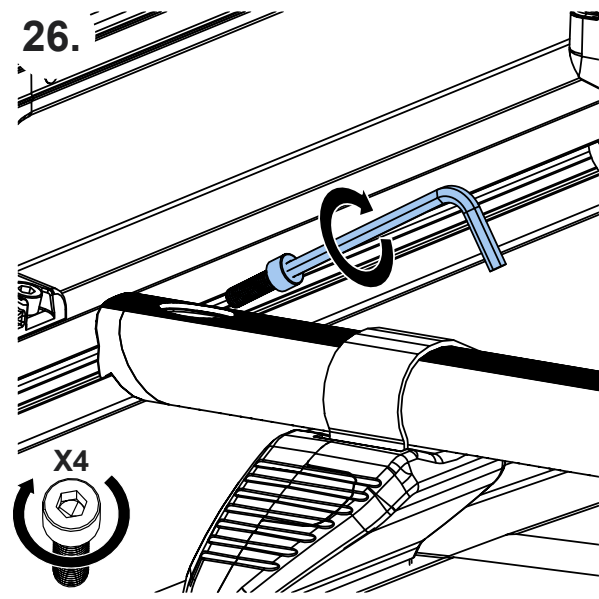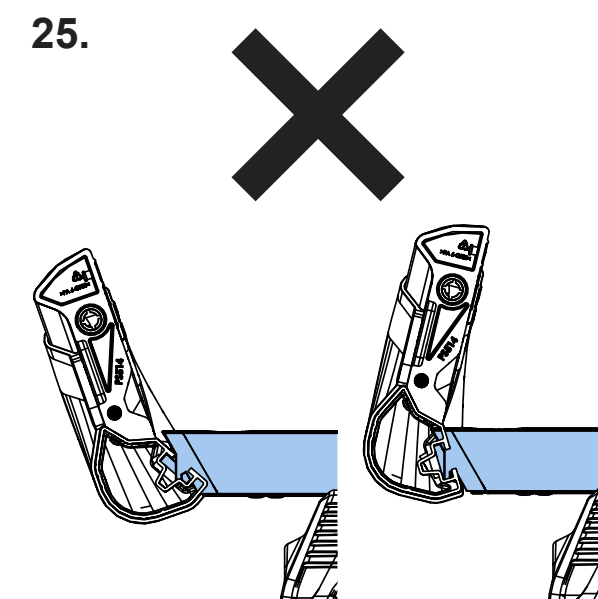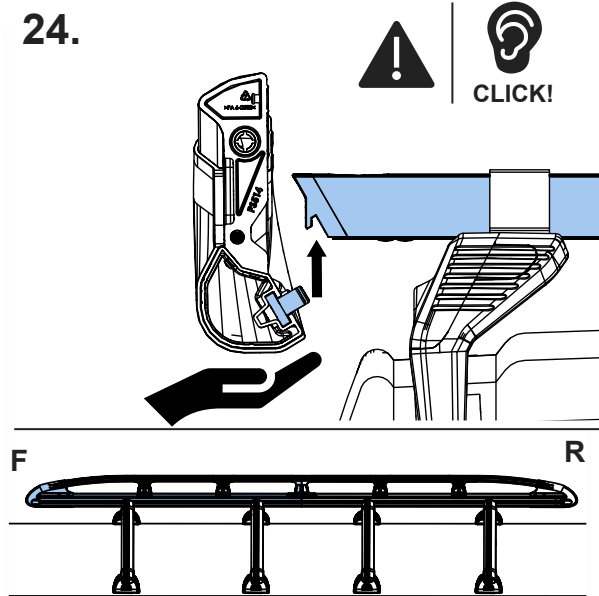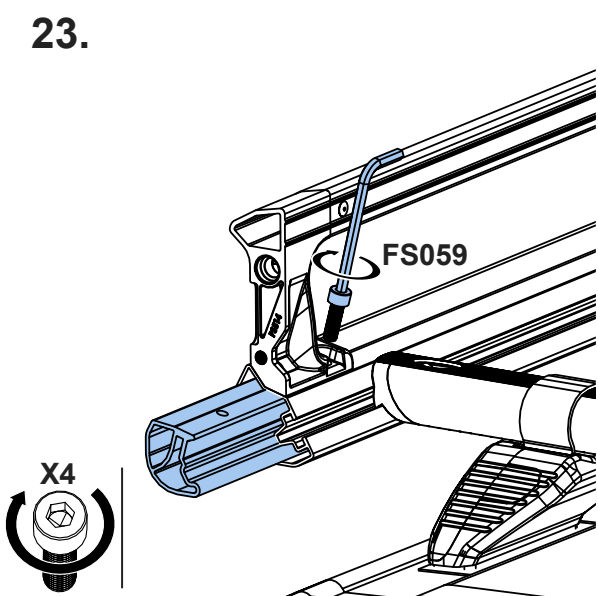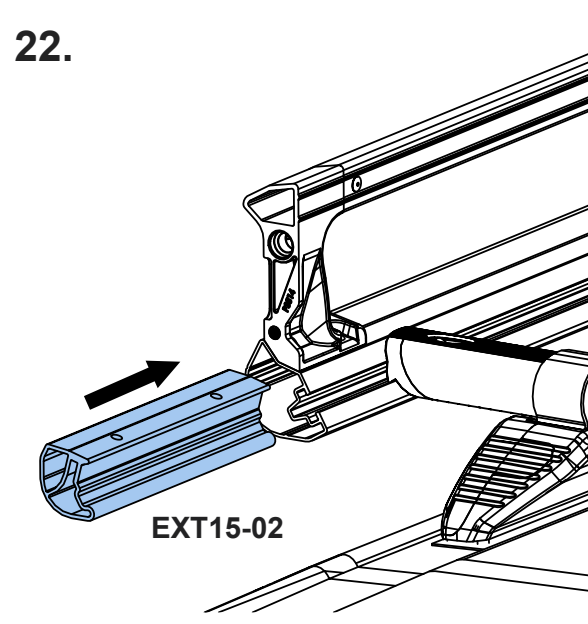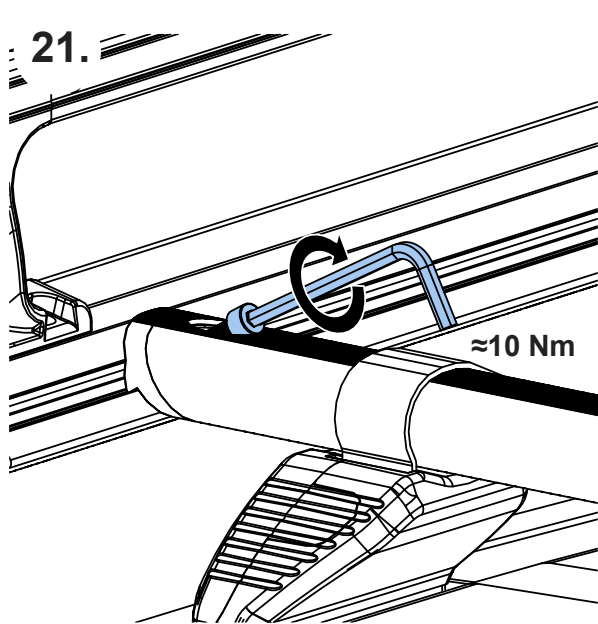


27.

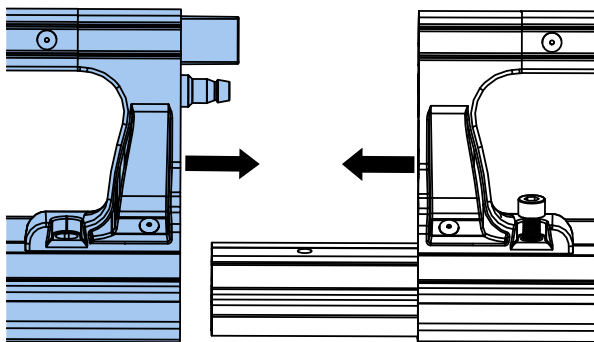


28.

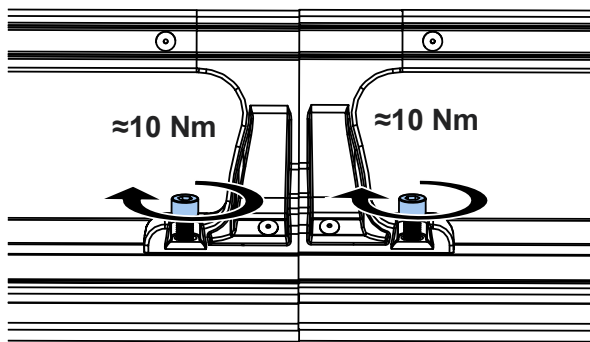



29.

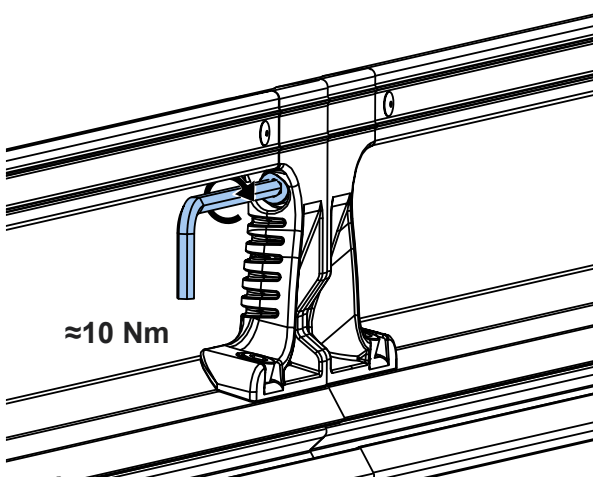


30.

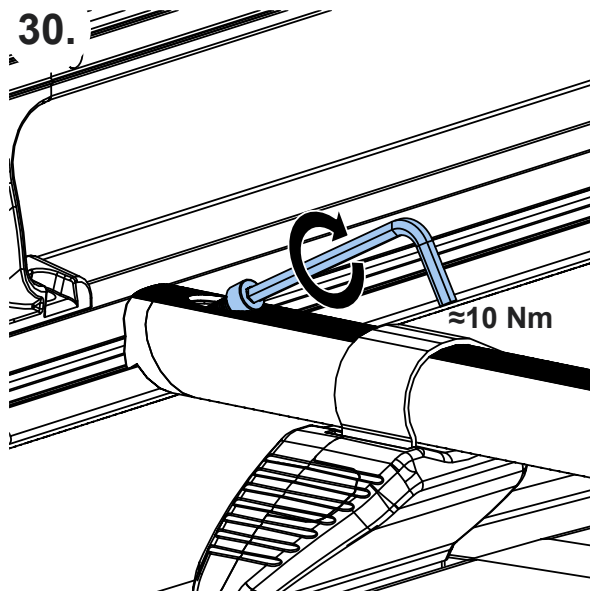


31.

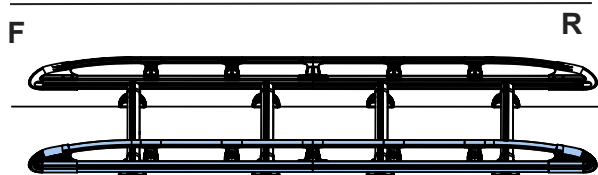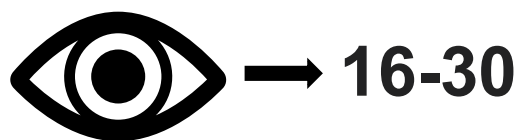


32.

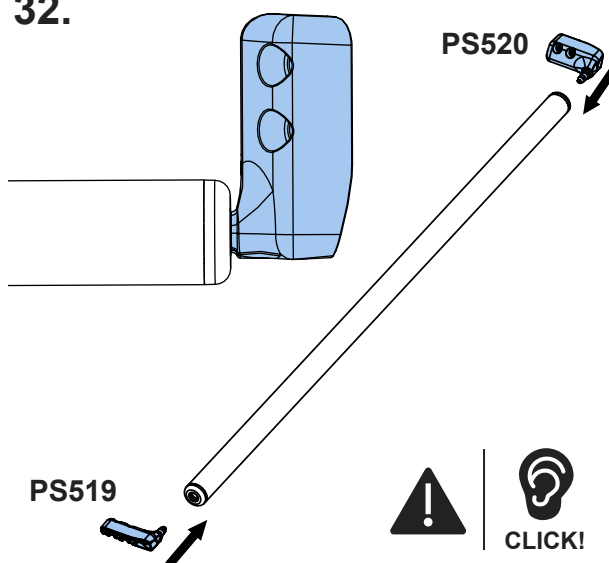


33.

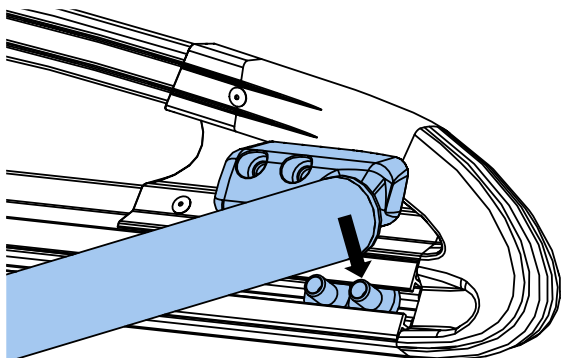


34.

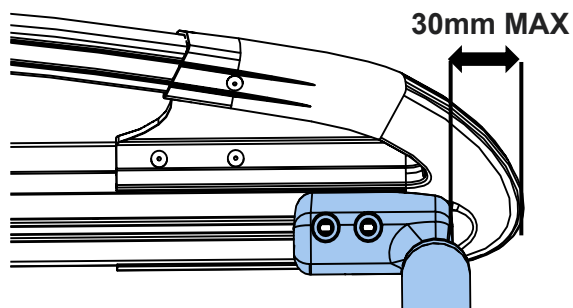


35.

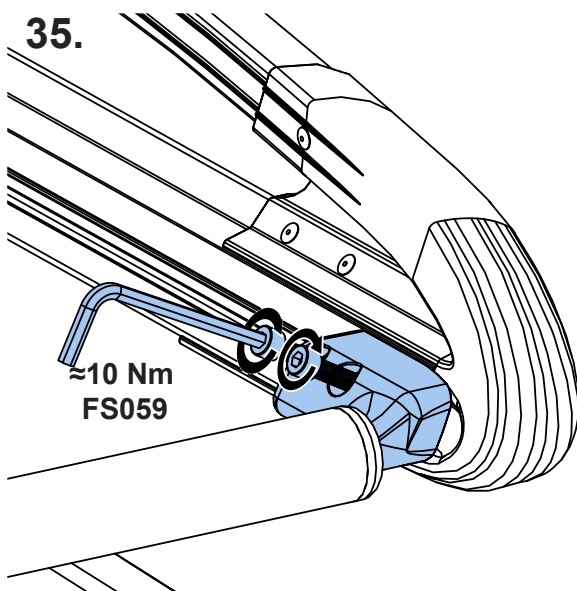


36.

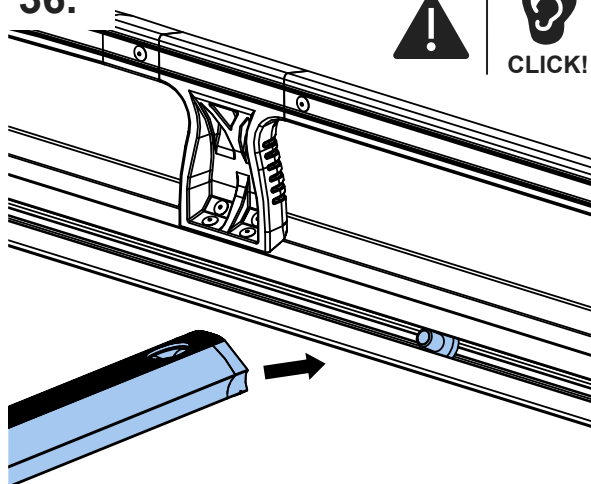

37.

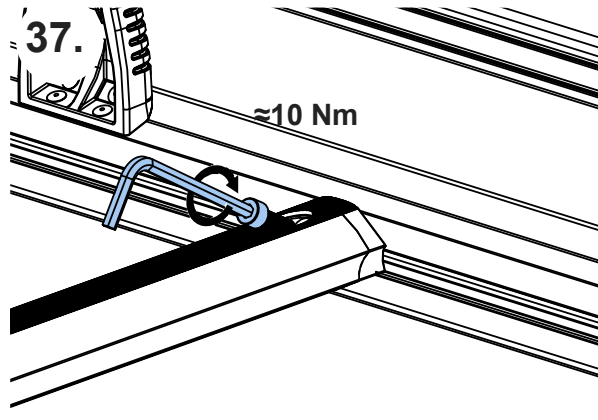


38.

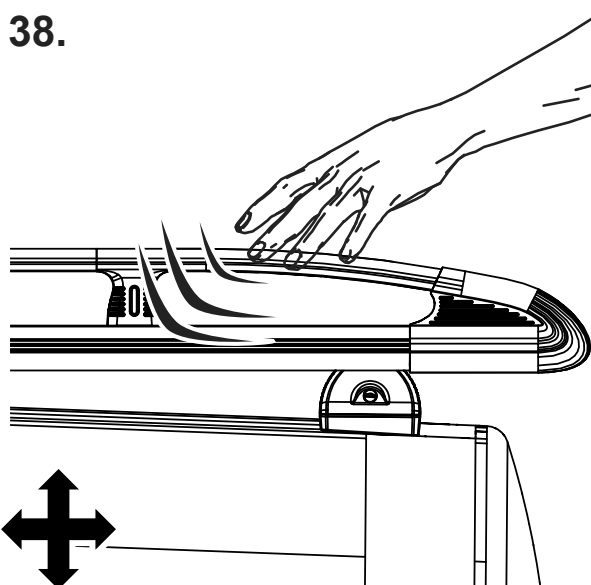



39.

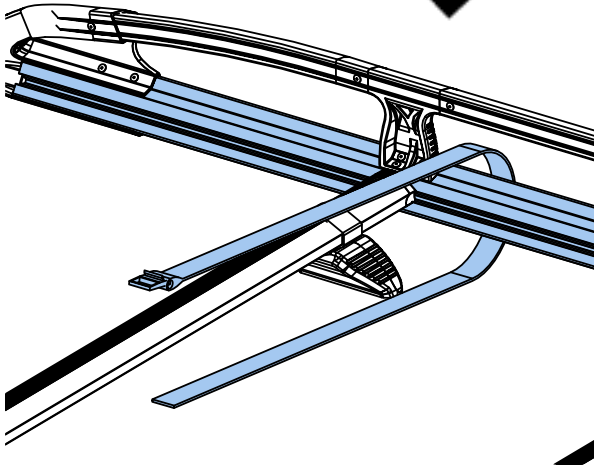

40.

