


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	MK	KB	2754	10/06/22	First Issue
b	MK	KB	2833	10/11/22	Updated instructions for track nut positions, clicking of side frame onto bars and where to strap onto rack.
c	Mk	KB	2846	06/12/22	Updated rack codes
d					
e					
f					
g					
h					
i					
j					
k					
l					
m					

JA3KR

KammRack

Instructions

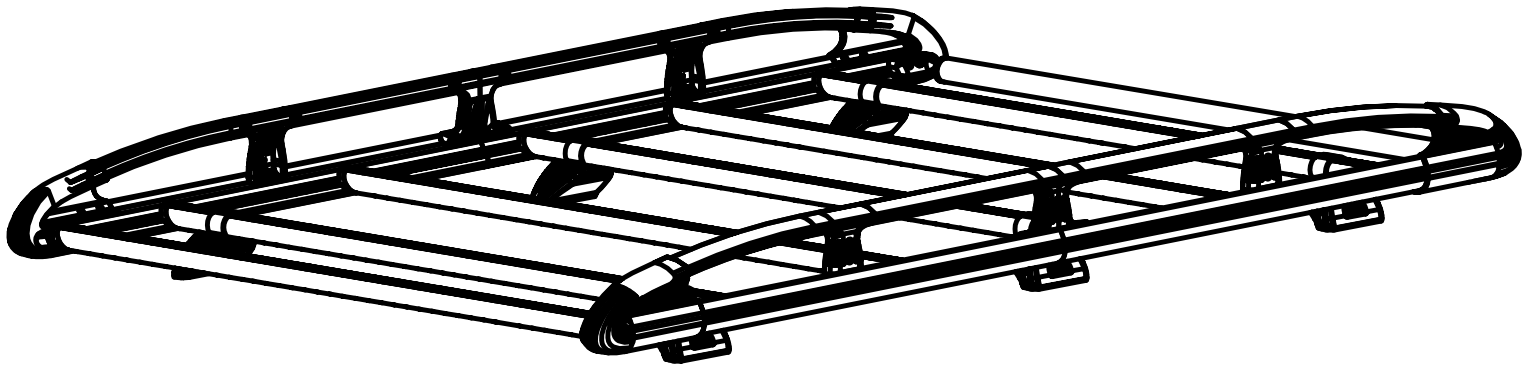

CITY CRASH (✓)




According to ISO/ PAS 11154:2006

JA3KR:


CITROEN Jumper/Dispatch, 2008 –

PEUGEOT Expert, 2008 –


FIAT Scudo, 2008 –

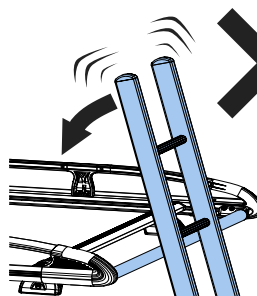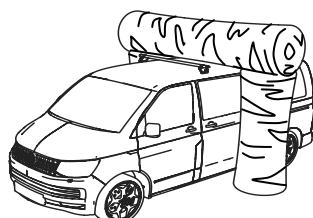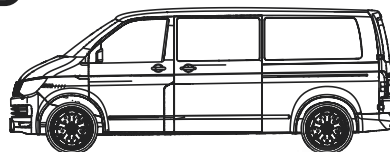


Max
50kg/110lbs

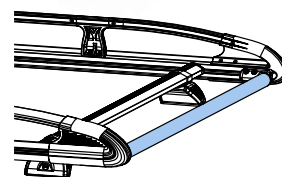


KammRack

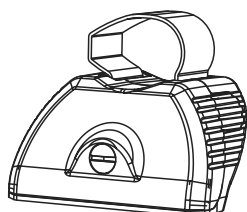


SA397U x 3 ☐

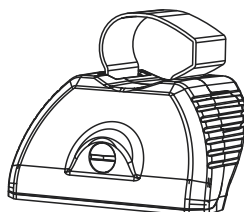

SA398U x 3 ☐

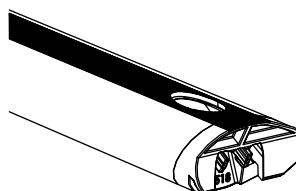


SA429 ☐




C04 x 6
optional upgrade

LHS x 2



RHS x 2

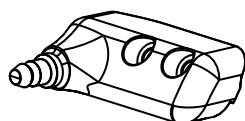


PS519 x 1 ☐

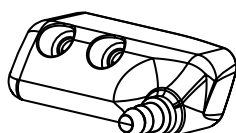


PS520 x 1 ☐

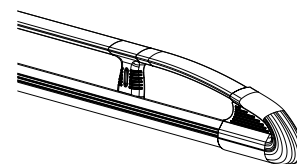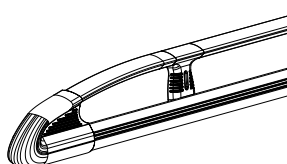

ASF x 1 ☐

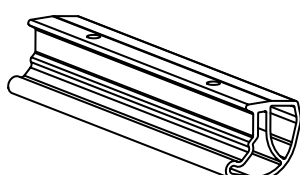


EXT15-02 x 2 ☐

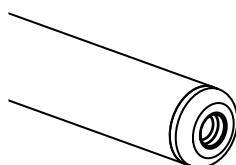


SA437 x 1 ☐


Fitting Kit




PS180 x 4 ☐




PS179 x 2 ☐

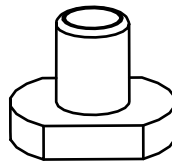


FN085 x 18 ☐

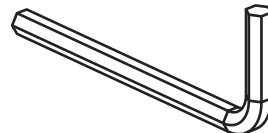

FT01 x 1 ☐

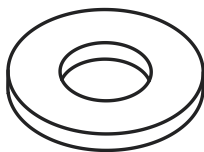


FW001 (M6) x 6 ☐

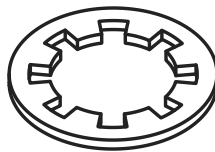


FW008 (M6) x 6 ☐




FN020 (M6) x 6 ☐

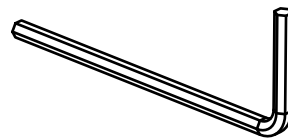


FT05 x 1 ☐



FS040 ☐
(M6 x 35) x 4




FS001 ☐
(M6 x 20) x 2




FS059 ☐
(M8 x 25) x 18


1.

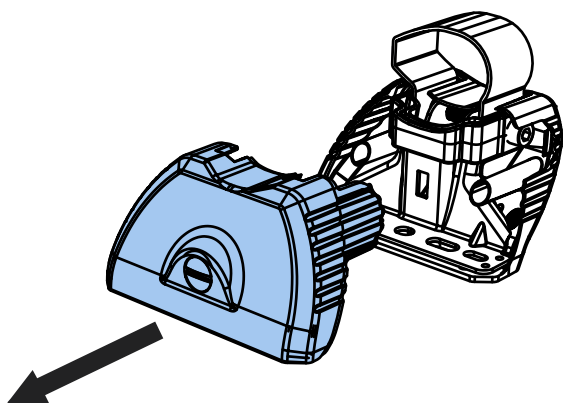


2.

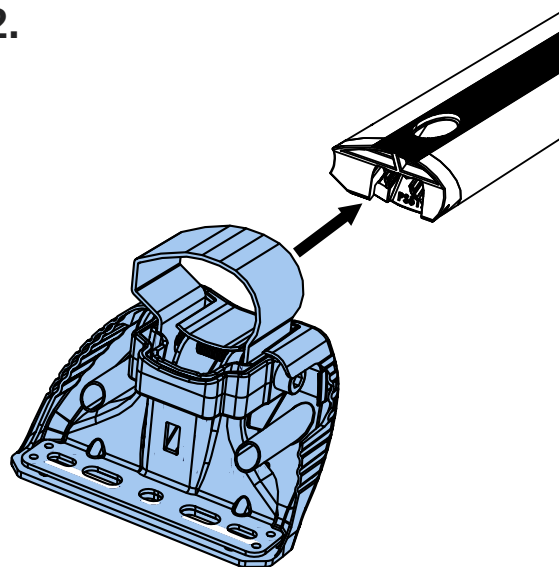


3.

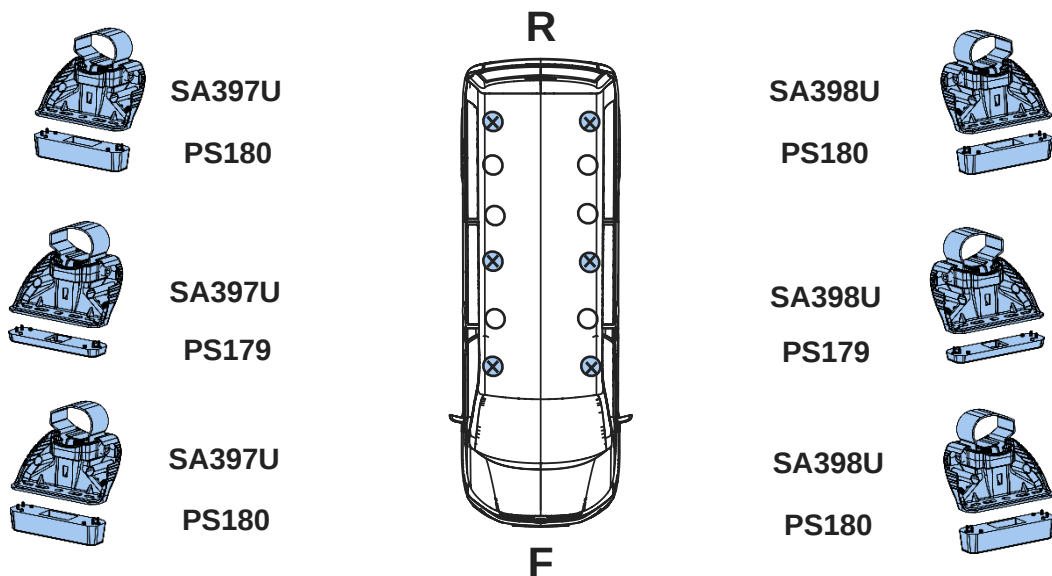


4.

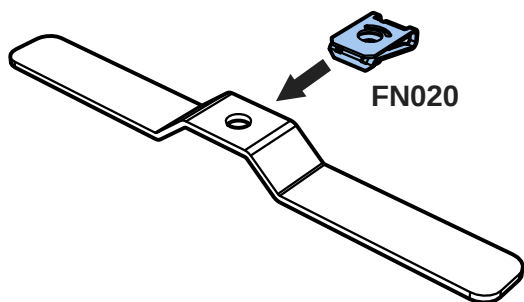


5.

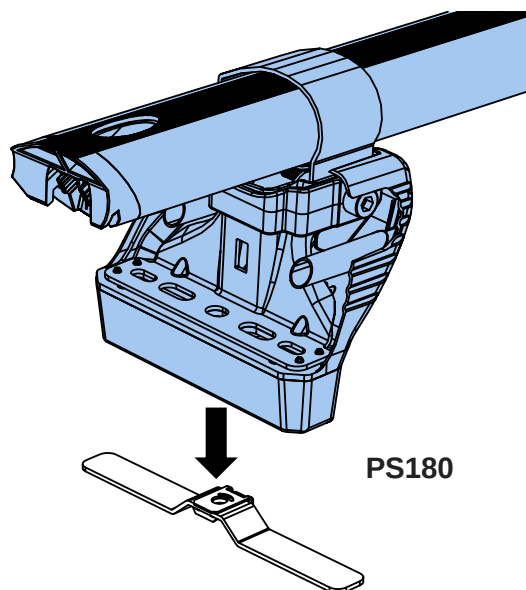


6.

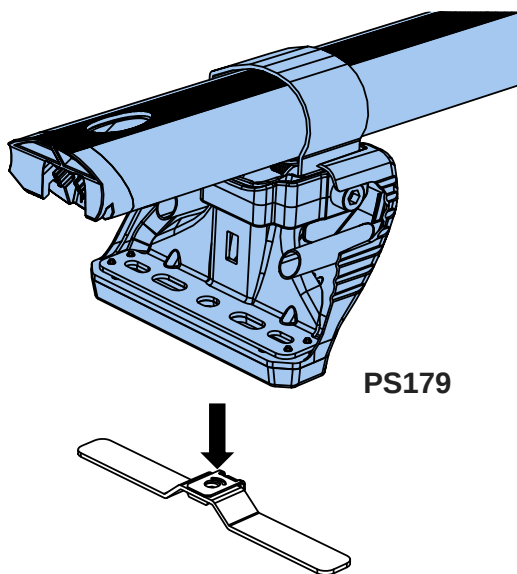


7.

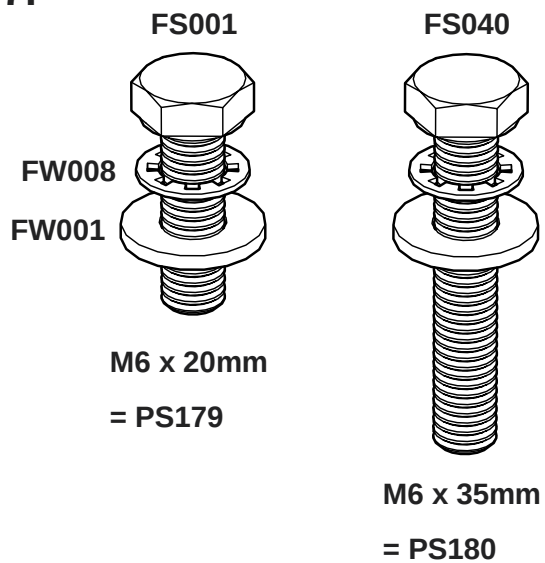


8.

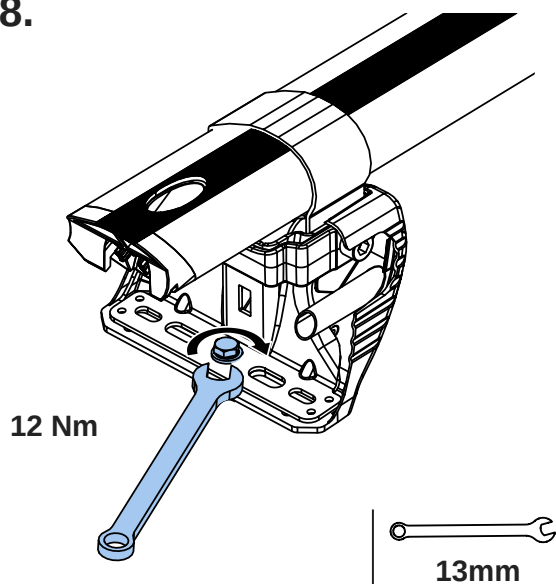


9.

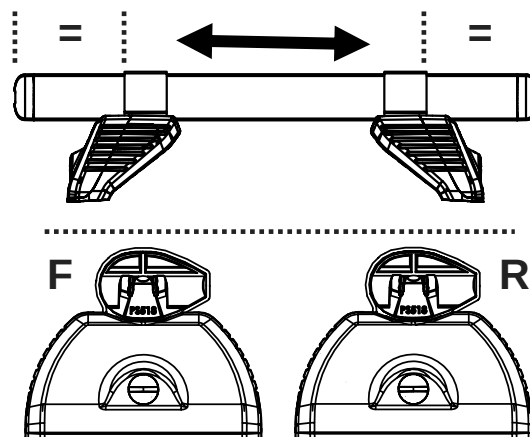


10.

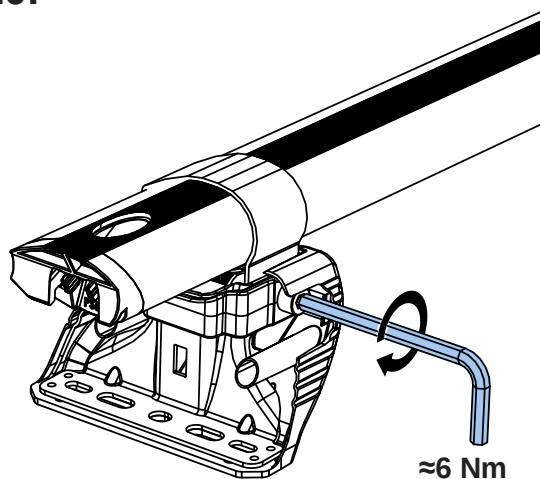


11.

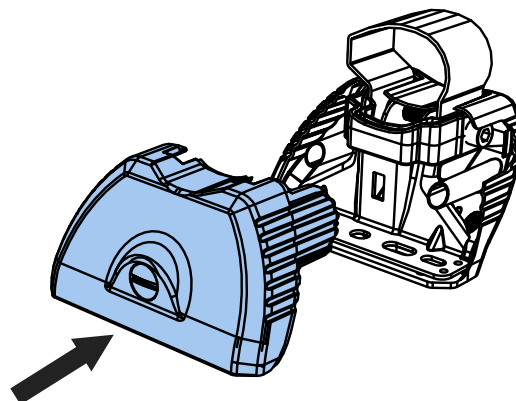


12.

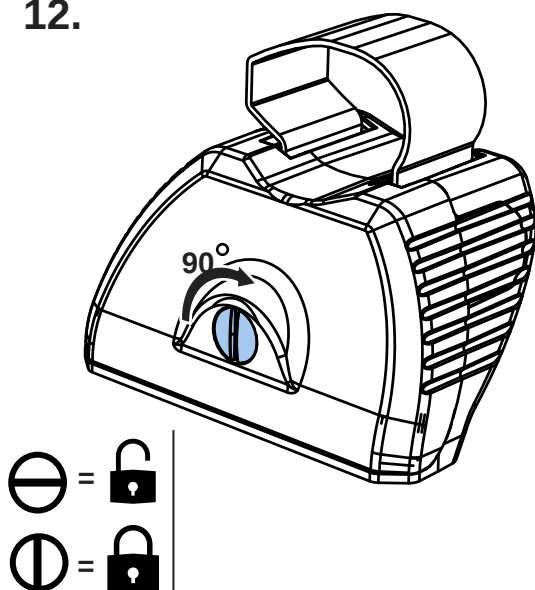



13.

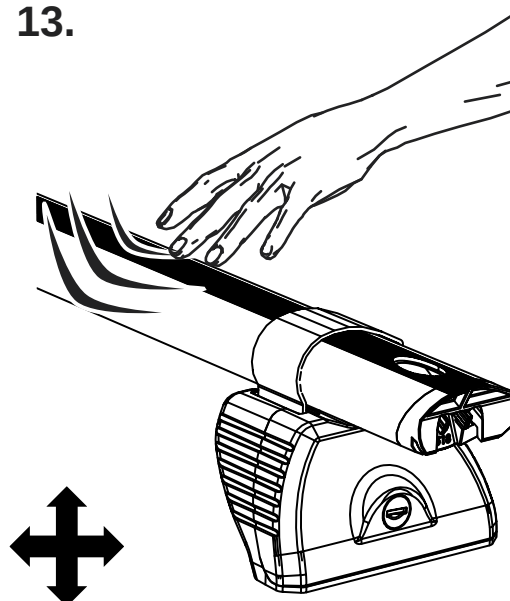


K551- Jumpy/Dispatch/Scudo/Expert 2008- L1, H1, Twin Doors

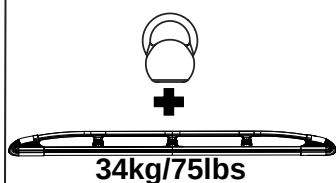



= 150kg Max

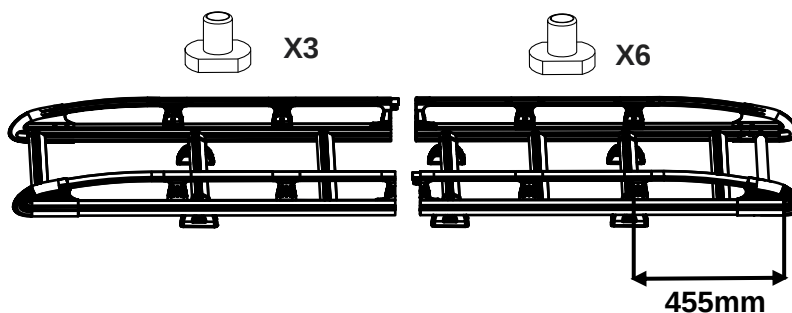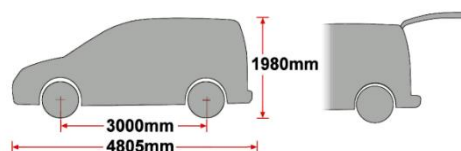


K552- Jumpy/Dispatch/Scudo/Expert 2008- L1, H1, Tailgate

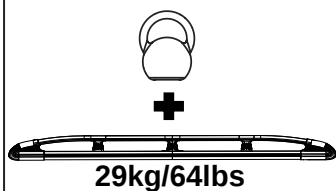



= 150kg Max

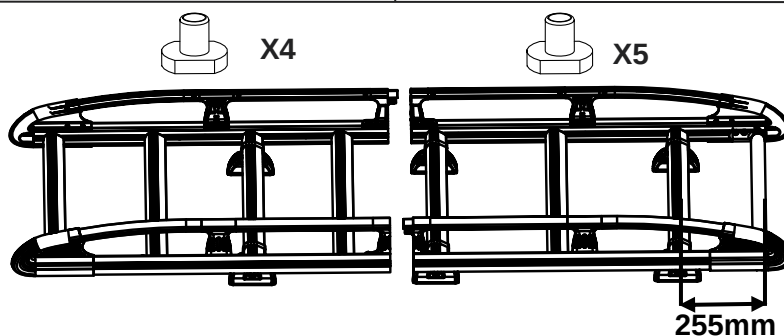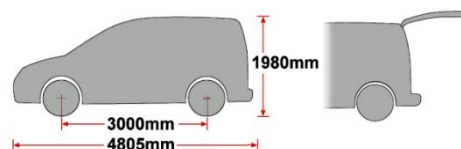


K553- Jumpy/Dispatch/Scudo/Expert 2008- L2, H1, Twin Doors

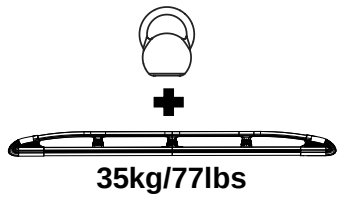



150kg
Max

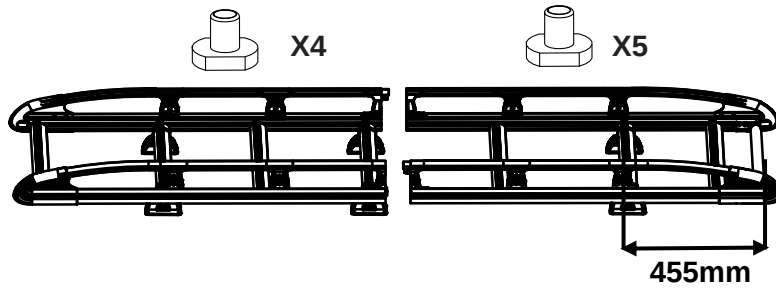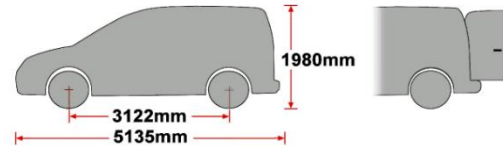


K551- Jumpy/Dispatch/Scudo/Expert 2008- L2, H1, Tailgate

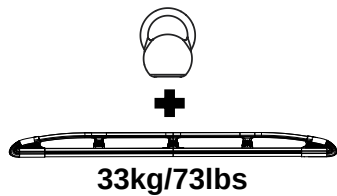


150kg
Max

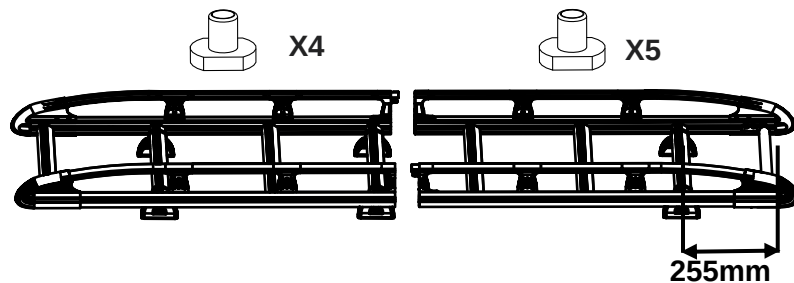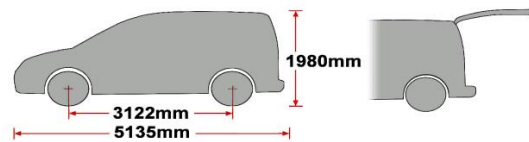


14.

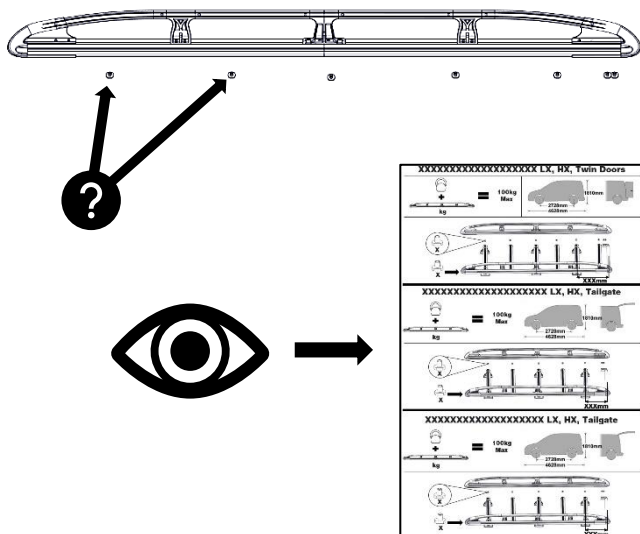


15.

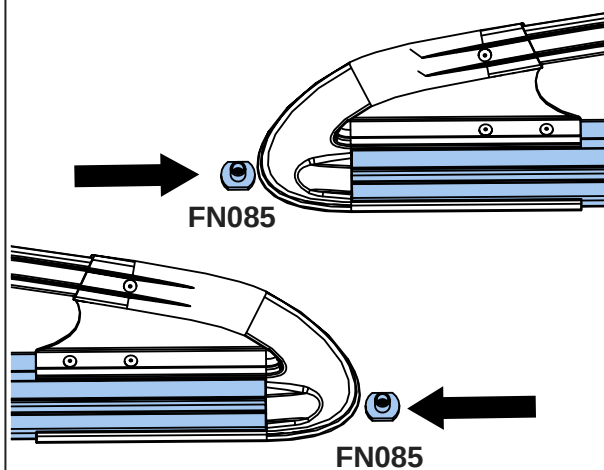


16.

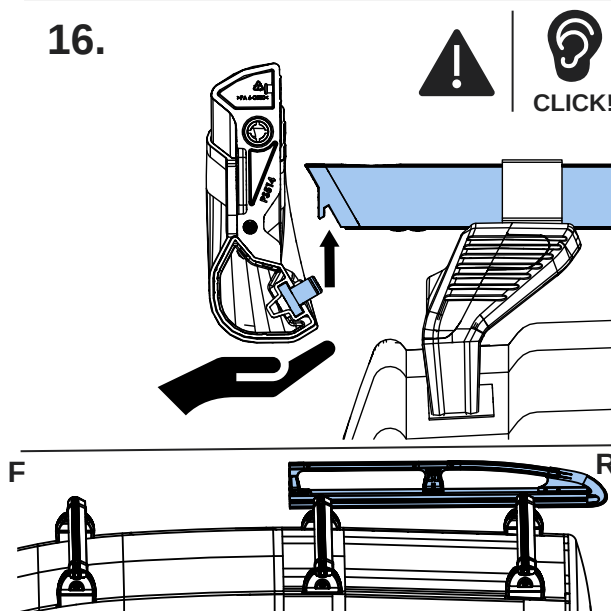


17.

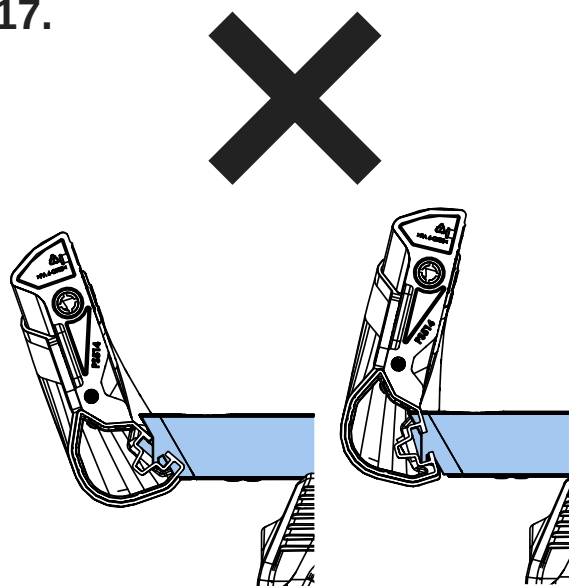


18.

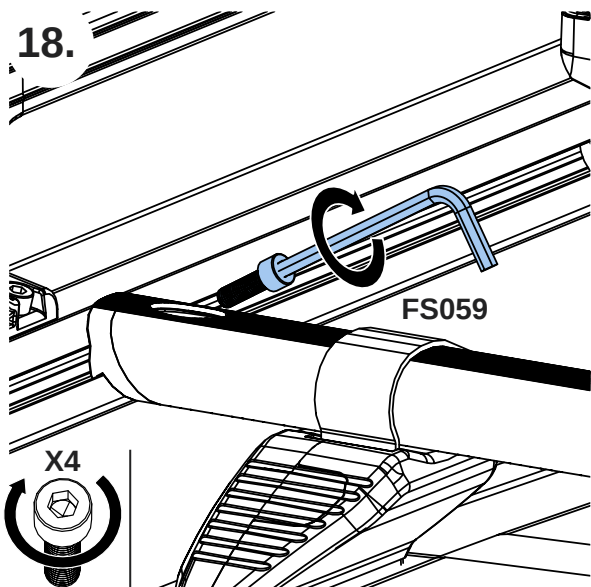


19.

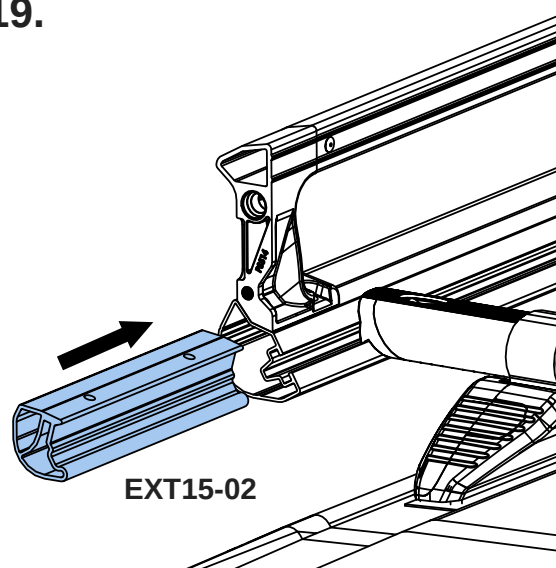


20.

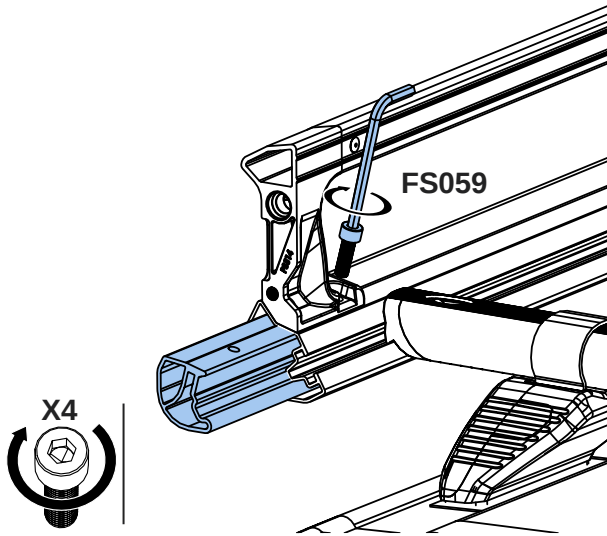


21.

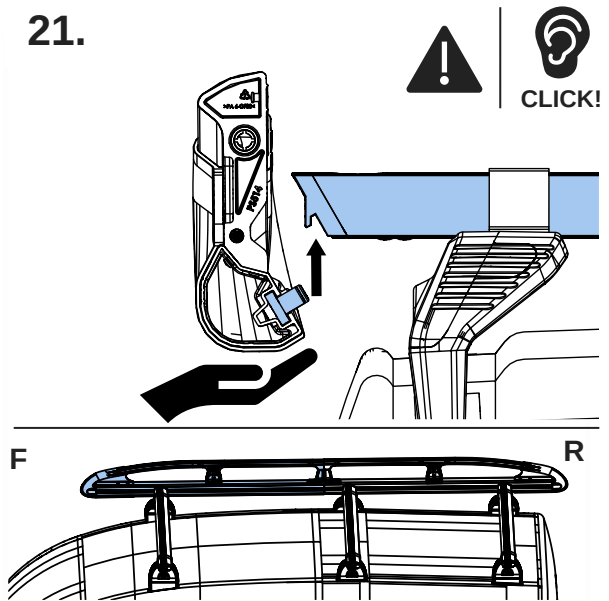


22.

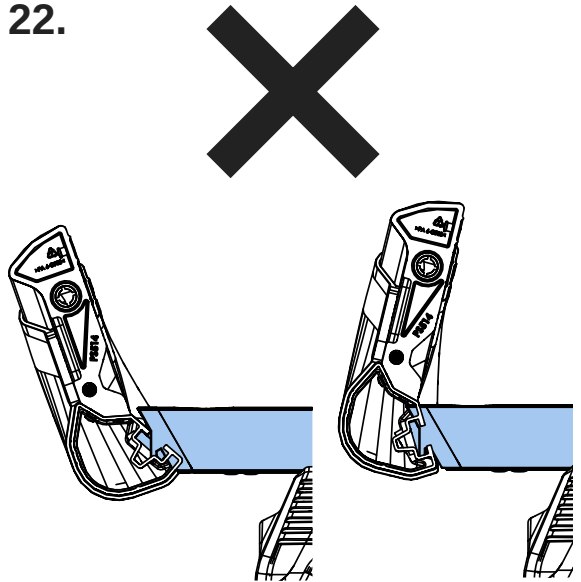


23.

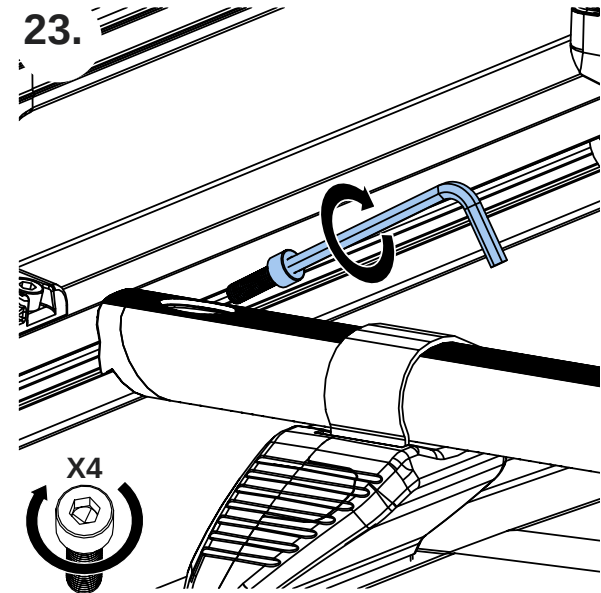


24.

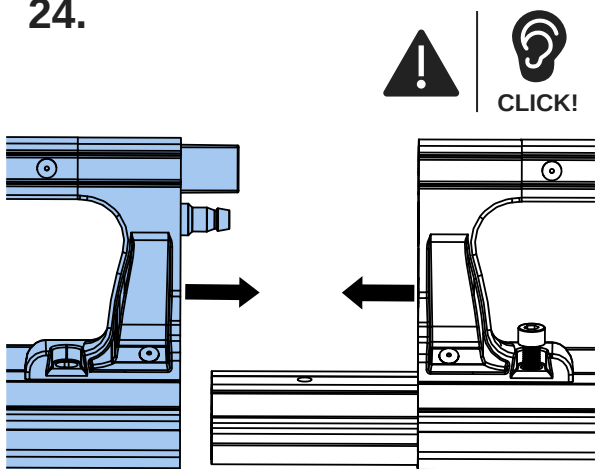


25.

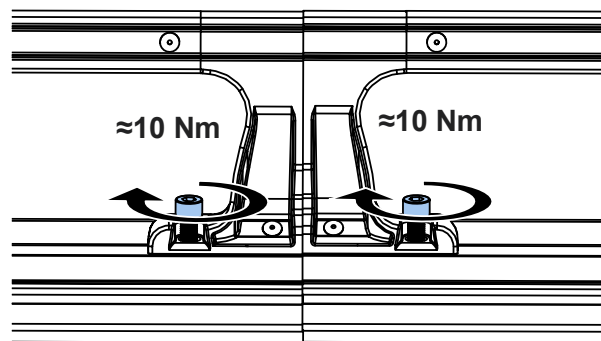


26.

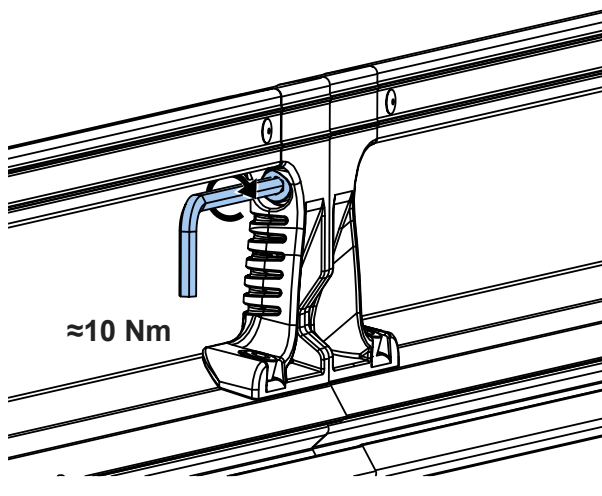



27.

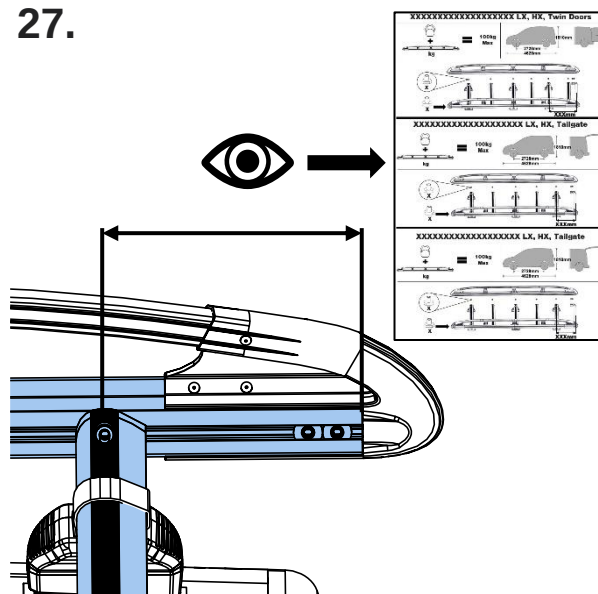


28.

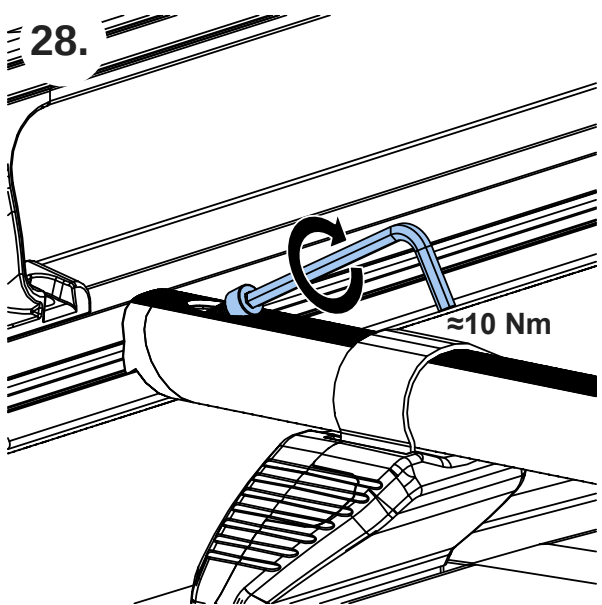


29.

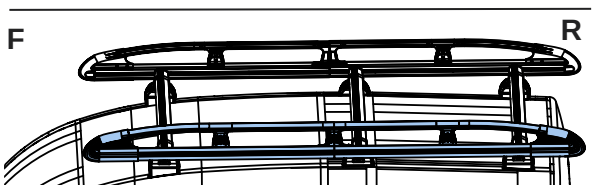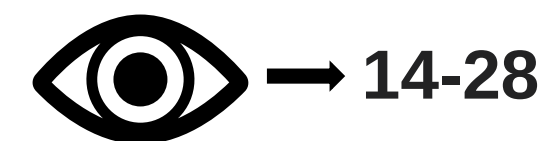


30.

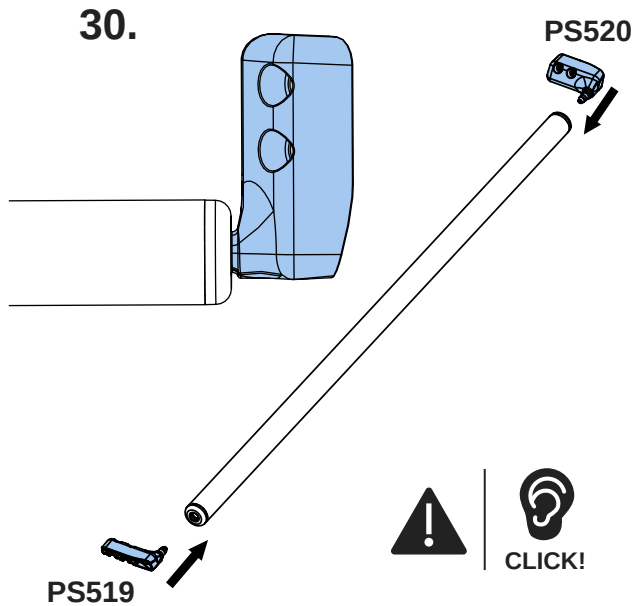


31.

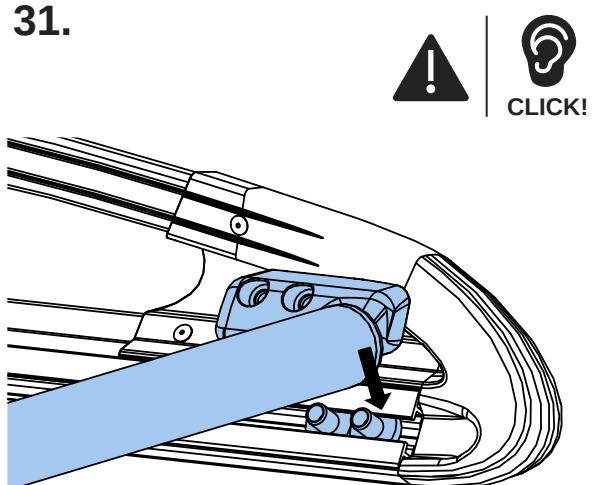


32.

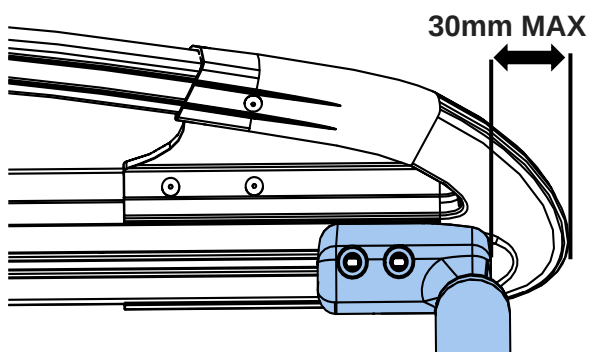


33.

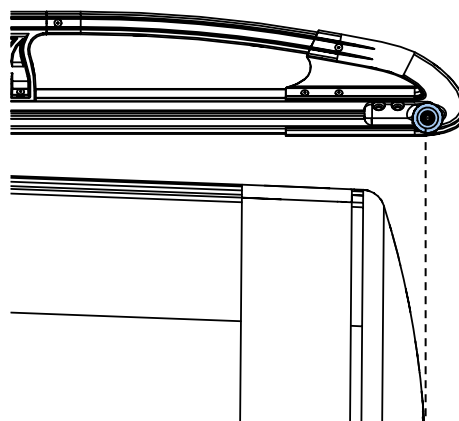


34.

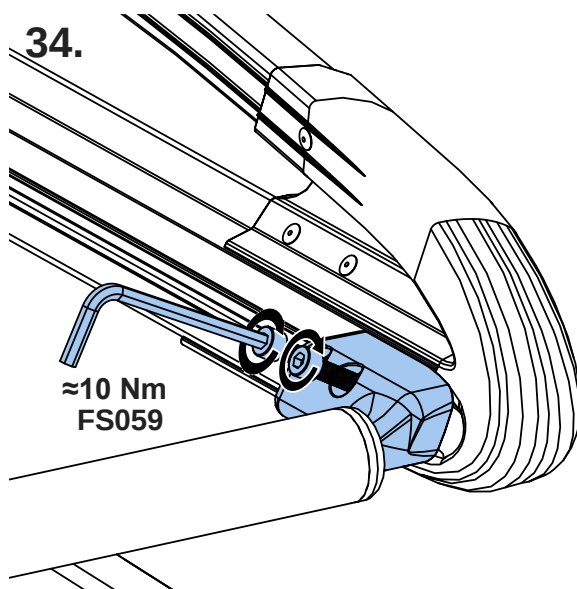


35.

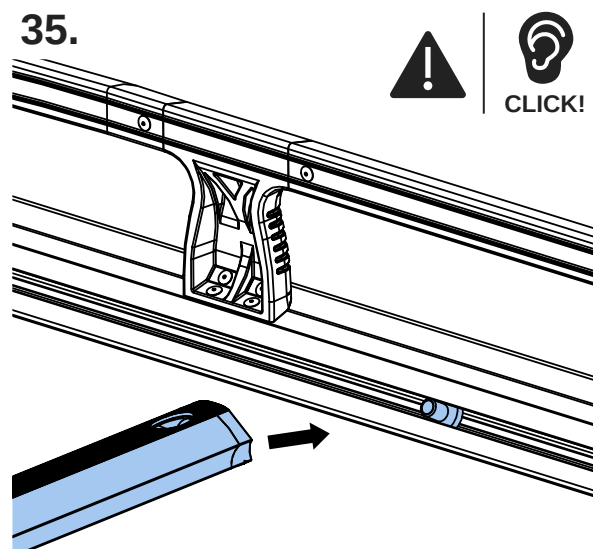


36.

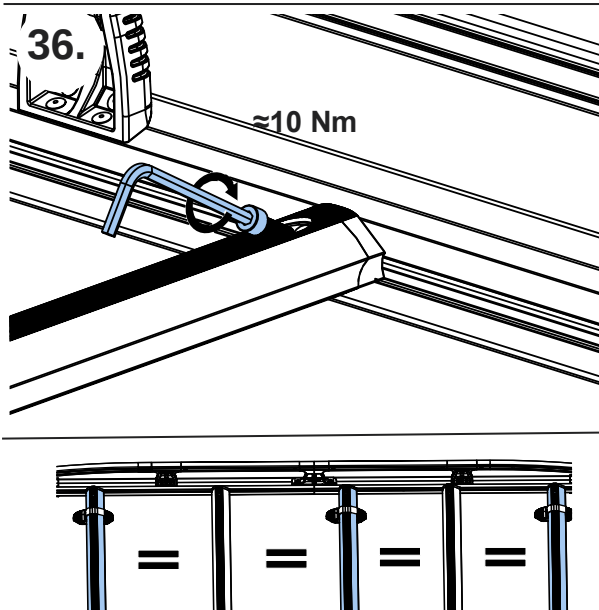

37.

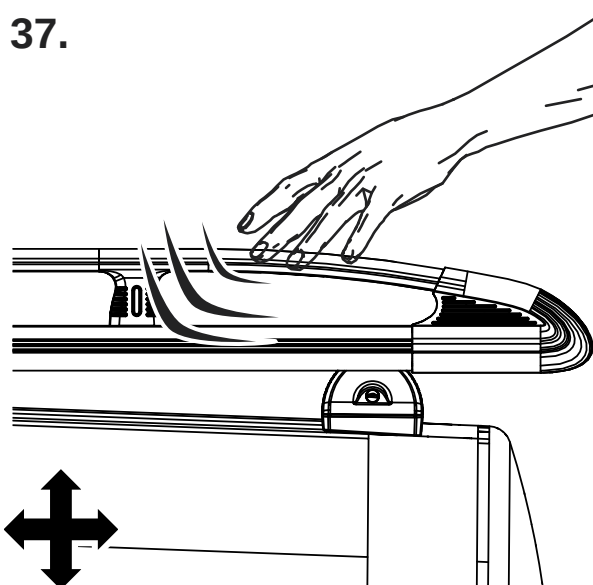

38.

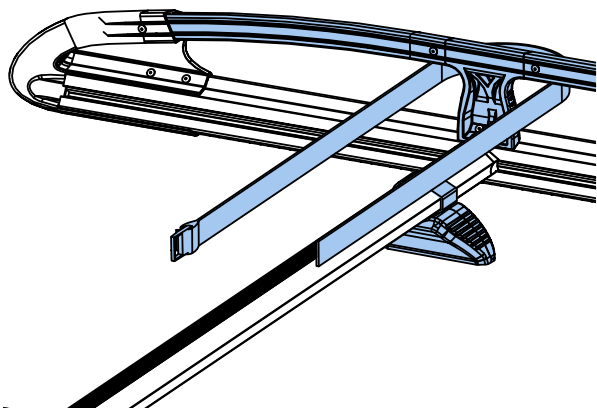

39.

