


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	MK	KB	2754	04/08/22	First Issue
b	MK	KB	2833	16/11/22	Updated instructions for track nut positions, clicking of side frame onto bars and where to strap onto rack.
c	MK	KB	2931	22/03/23	Replaced FS018 with FS059 & changed track quantity from 20 to 18
d	FT	KB	3412	12/02/25	Added steps to fit new rear mounting point
e					
f					
g					
h					
i					
j					
k					
l					
m					

XC3KR

KammRack

Instructions


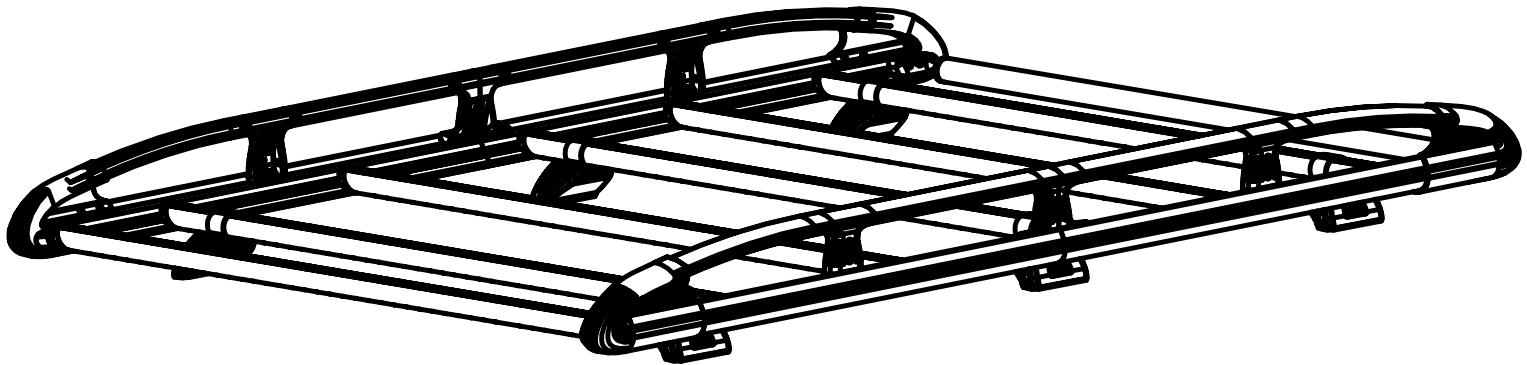


CITY CRASH (✓)

According to ISO/ PAS 11154:2006


XA3KR:

Saic Maxus Deliver 9 2020-

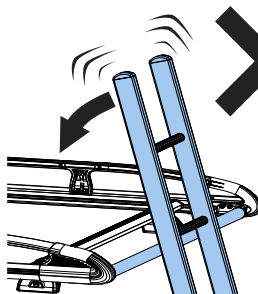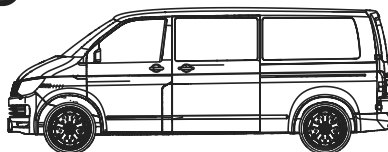


Max


50kg/110lbs

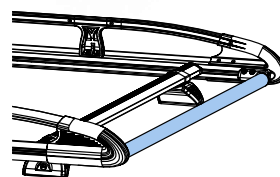


KammRack

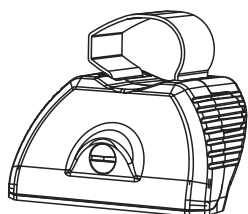

SA397U x 3 ☐

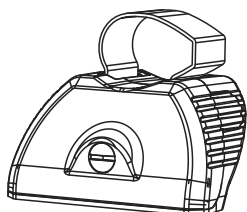


SA398U x 3 ☐

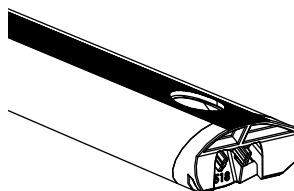


SA430 ☐




C04 x 6
optional upgrade

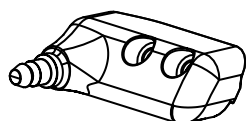


PS519 x 1 ☐

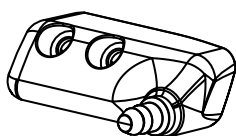

PS520 x 1 ☐

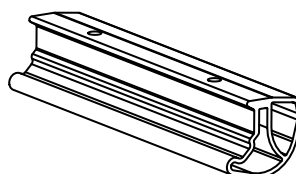


EXT15-02 ☐

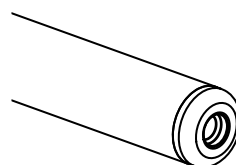


SA438 x 1 ☐


LHS x 2

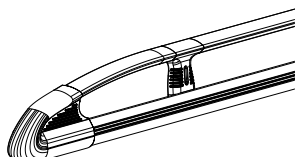

RHS x 2

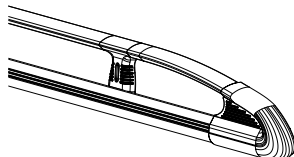


Centre x 2
(L2, H2 Only)

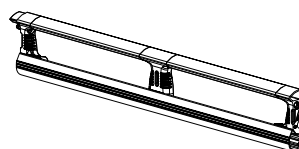


ASF x 1 ☐


Fitting Kit

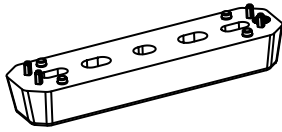


PS183 x 6 ☐




PS023 x 6 ☐




PS619 x 2 ☐

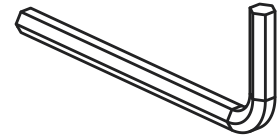


FT01 x 1 ☐

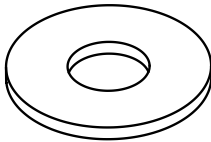


FW002 (M8) x 8 ☐

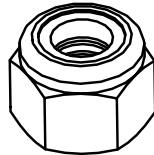

FN006 (M8) x 12 ☐

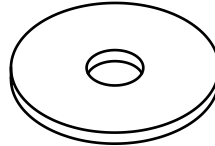

PS208 (M8) x 8 ☐

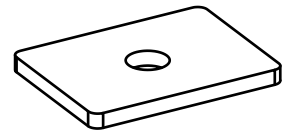


PS020 (M8) x 6 ☐




**FS024
(M8 x 100) x 6** ☐




**FS081
(M8 x 50) x 4** ☐




**FS067
(M8 x 20) x 4** ☐

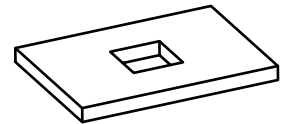


MS209 x 6 ☐




**FS059
(M8 x 25) x 20** ☐

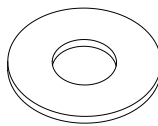


FW021 (M8) x 8 ☐

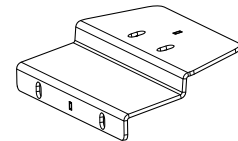

SW525 x 1 ☐



FN085 x 18 ☐

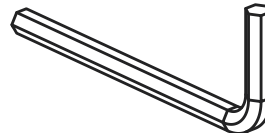


FT05 x 1 ☐

1.




L1/H1 = 3-6, 13-28.

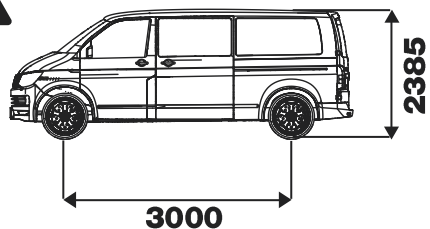


2.






L2/H2 = 7-12, 13-28.






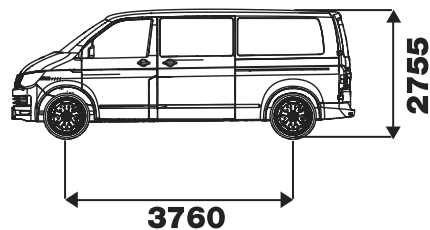


3.

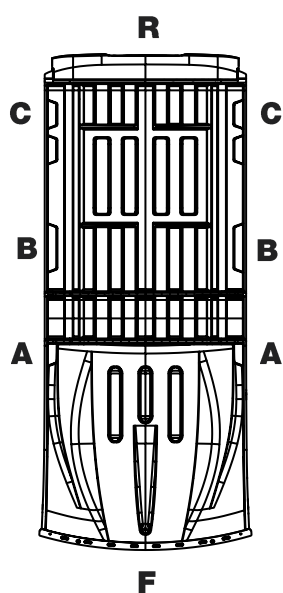


4.

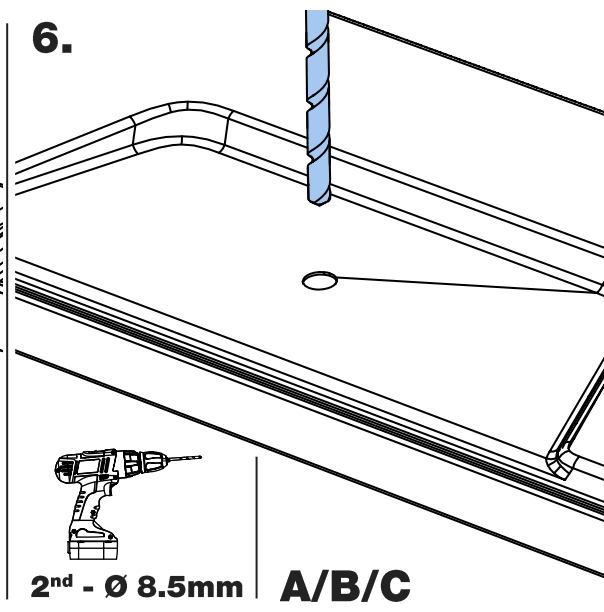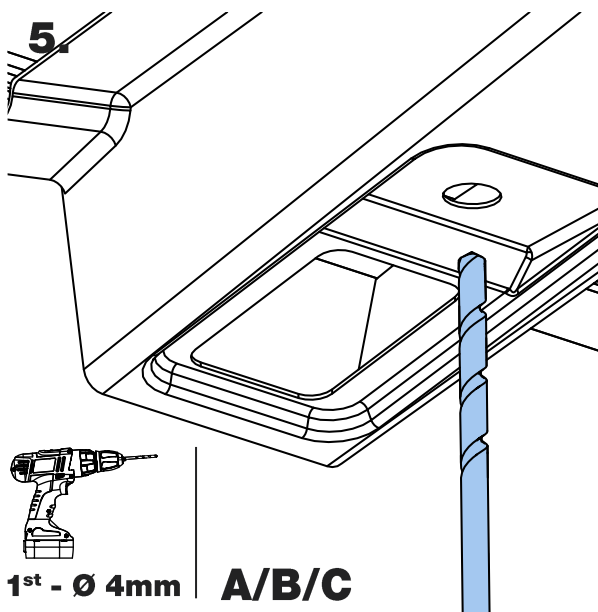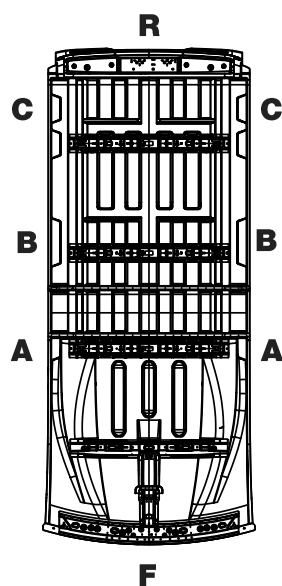


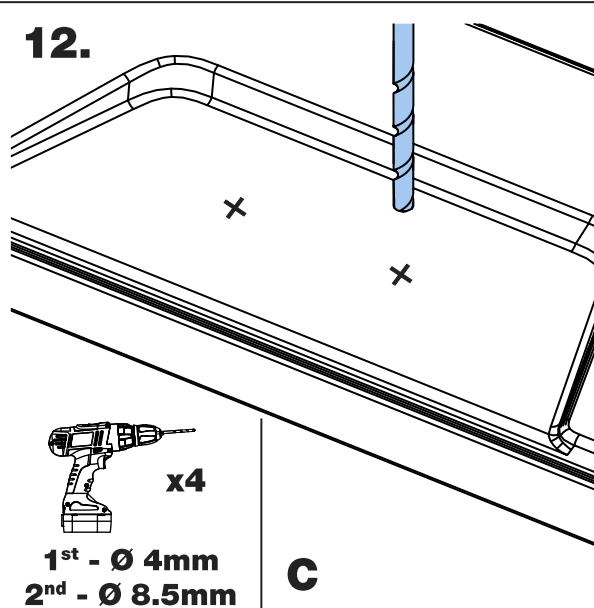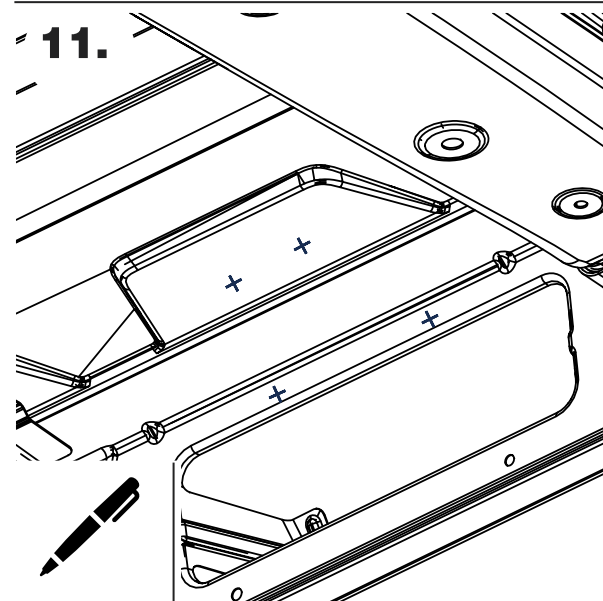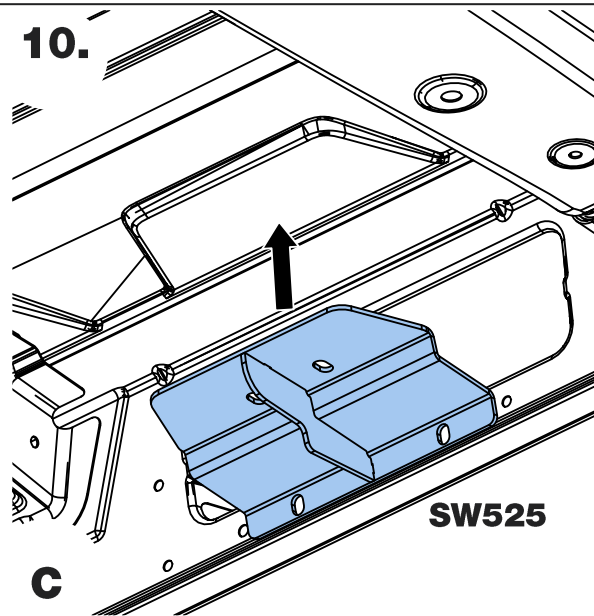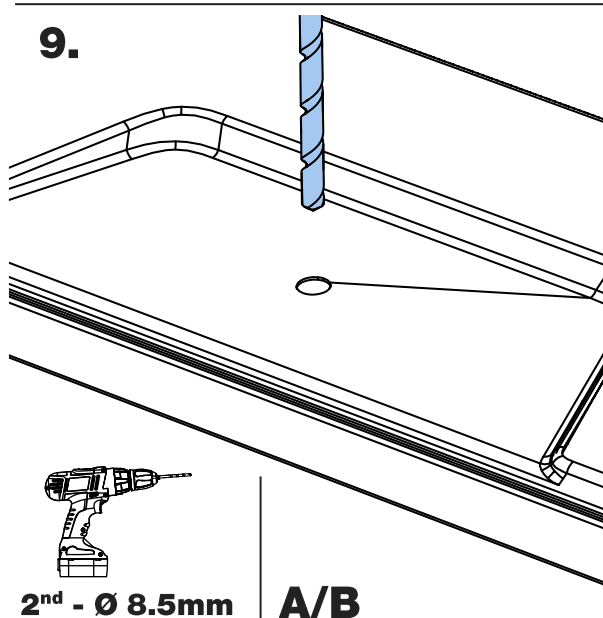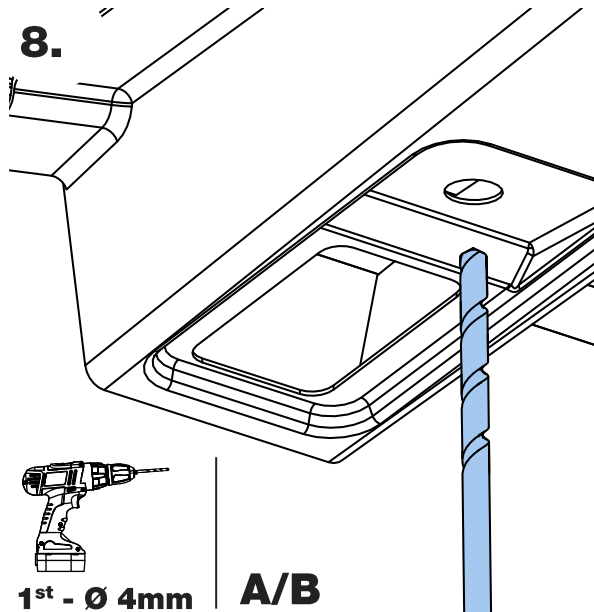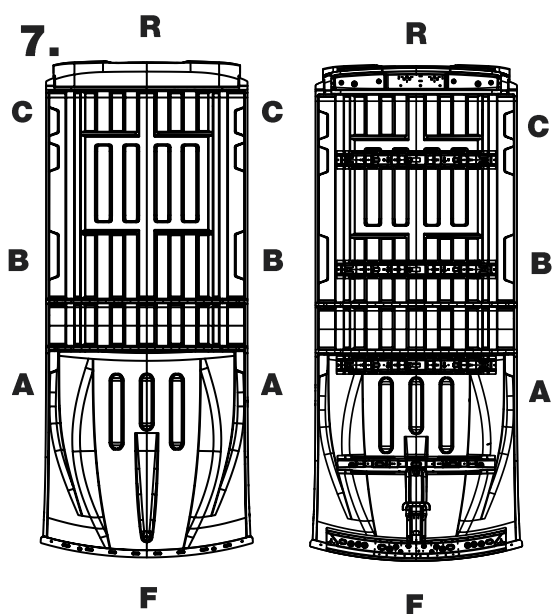


13.

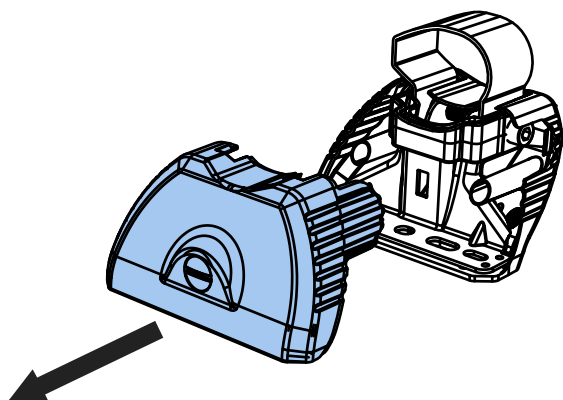


14.

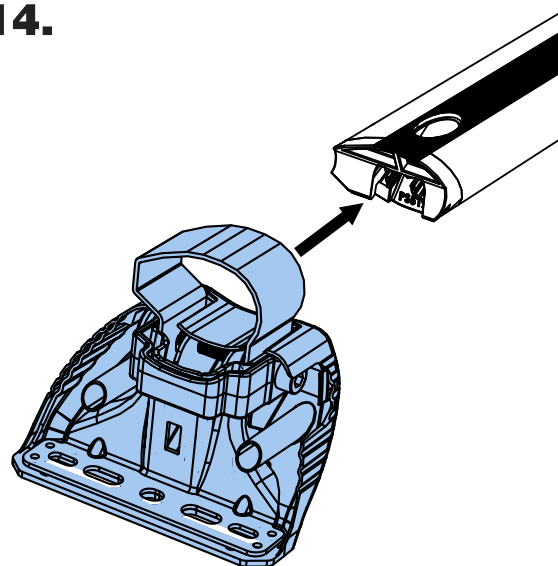

15.




SA397U
PS183



SA397U
PS183




SA397U
PS183

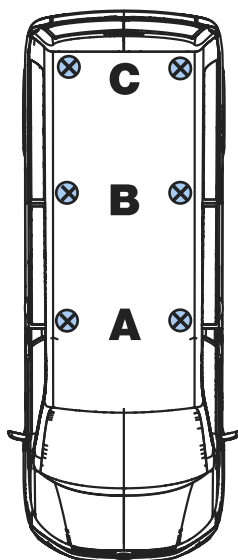

SA398U
PS183




SA398U
PS183



SA398U
PS183




16.

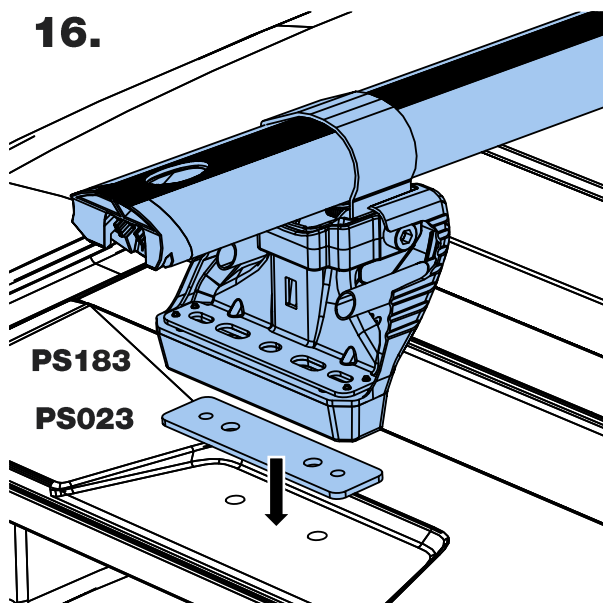

17.

FW002
PS208
FS024















M8 x 100mm




M8 x 50mm

FW002
PS208
FS081

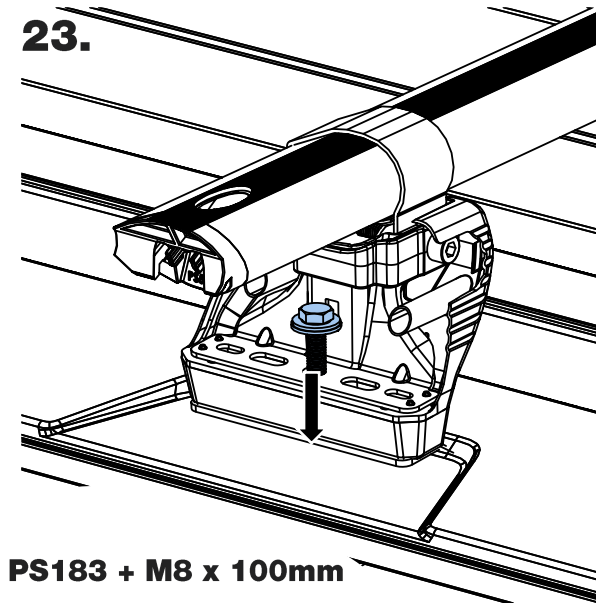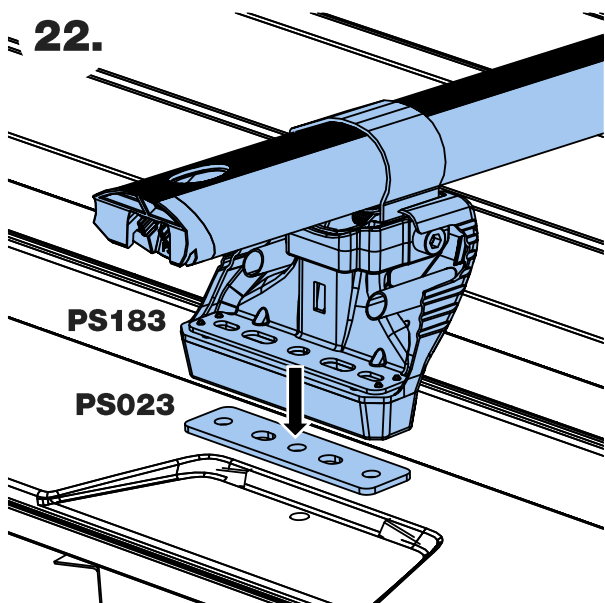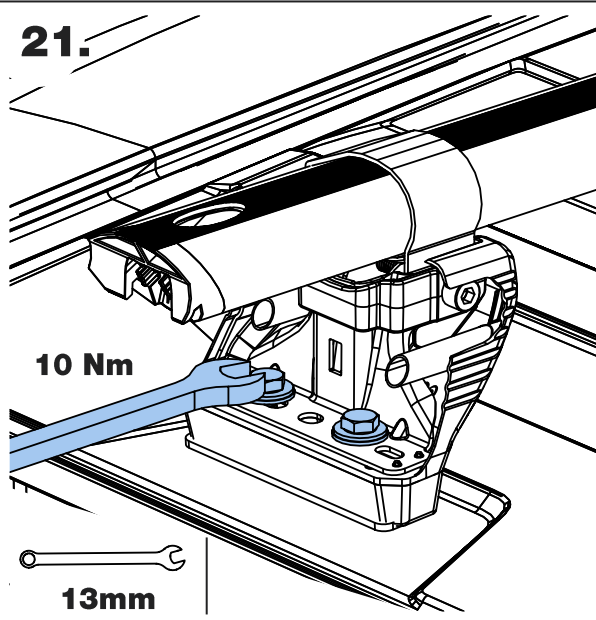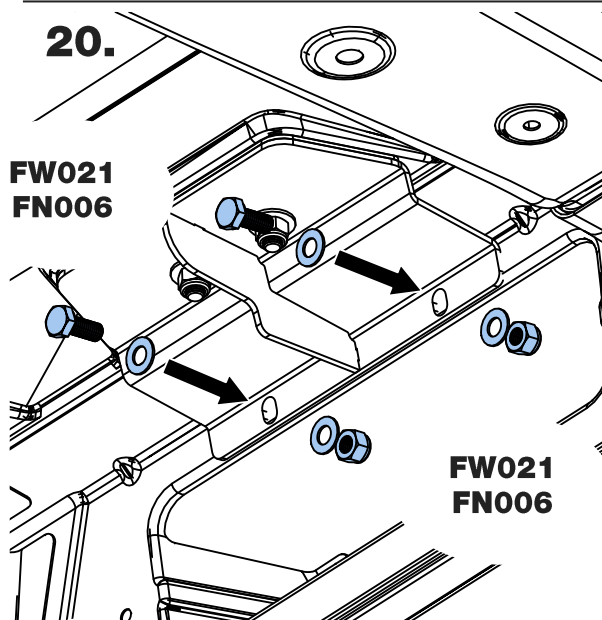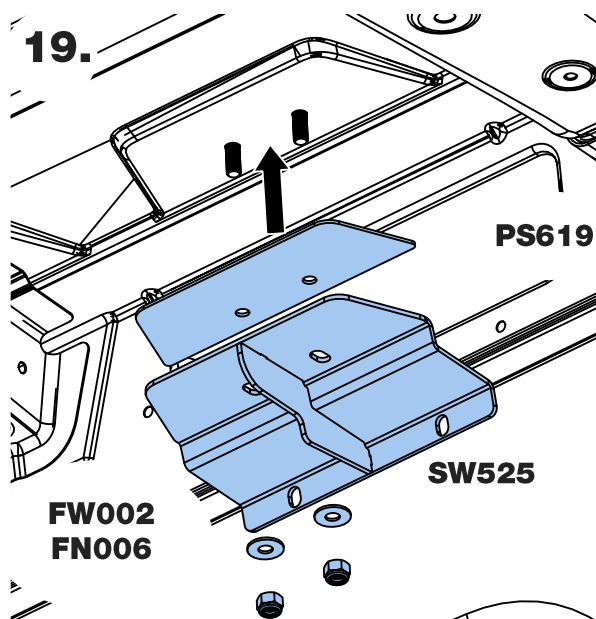
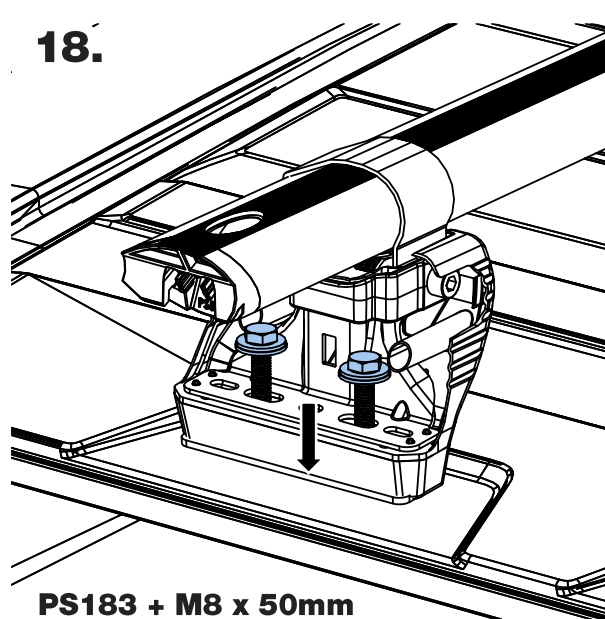


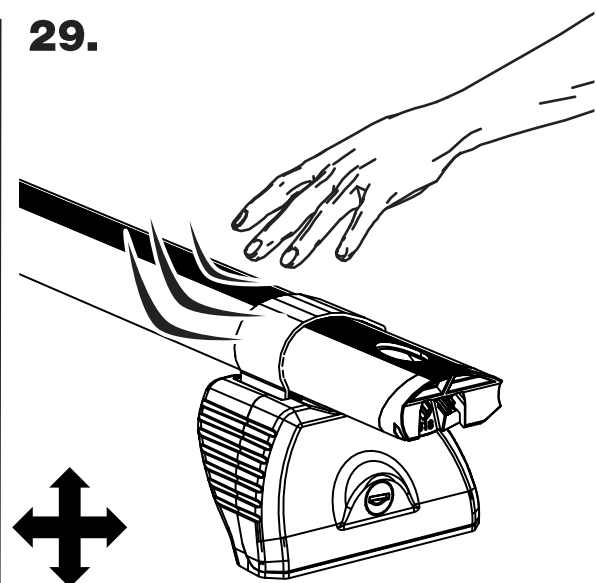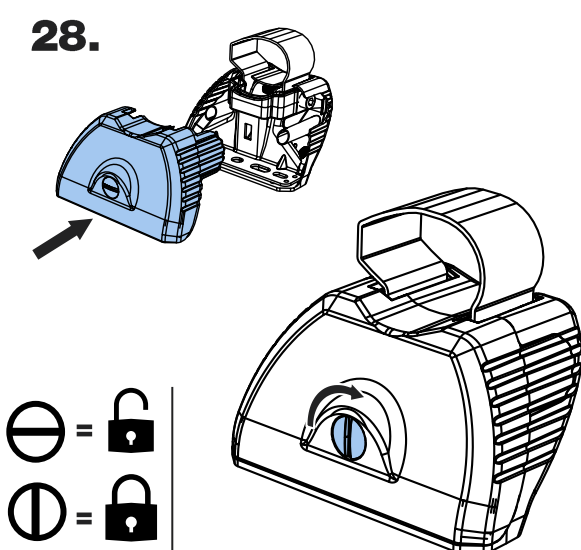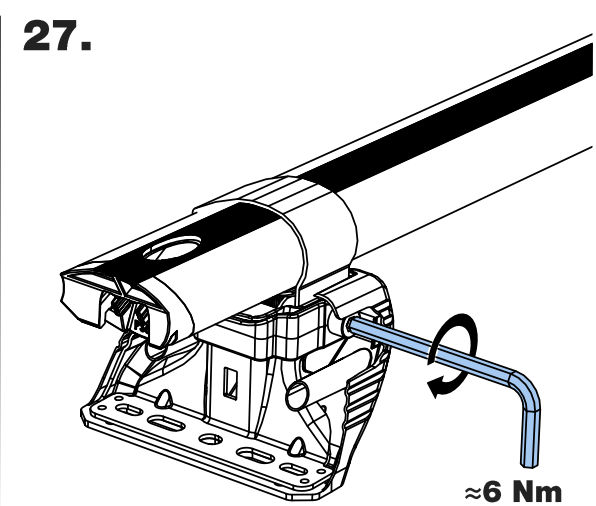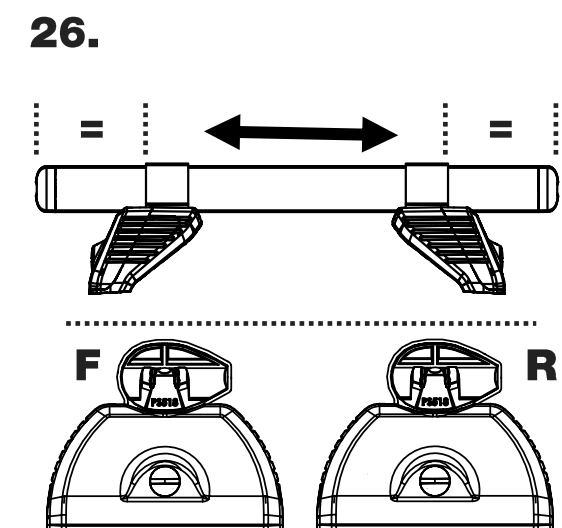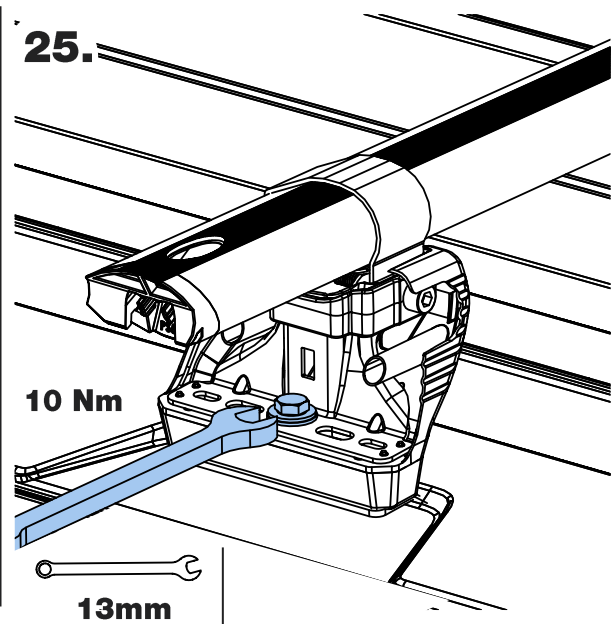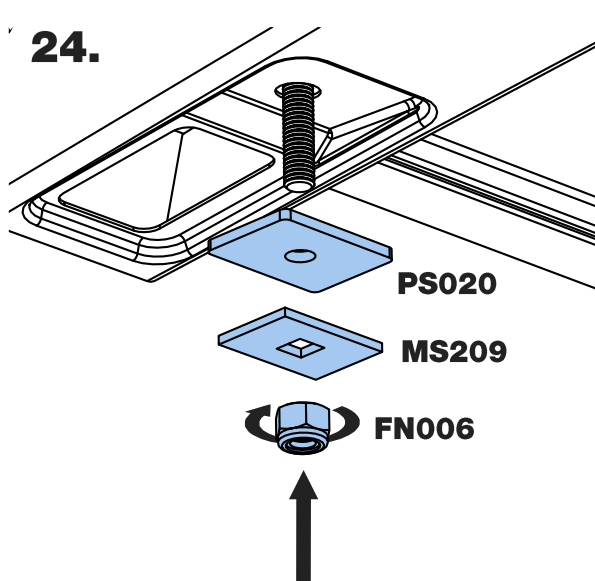

K686- Saic, Maxus, Deliver 9, 2020- L2, H2, Twin Doors

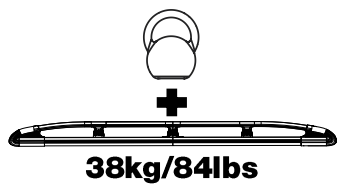


**75kg
Max**

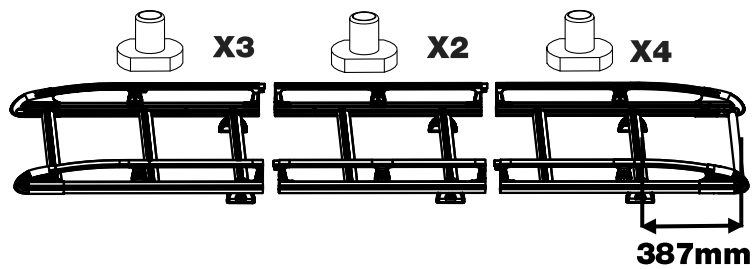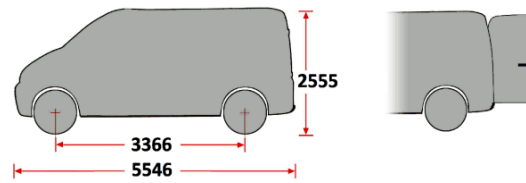


Steps 23-45, 61-70





A

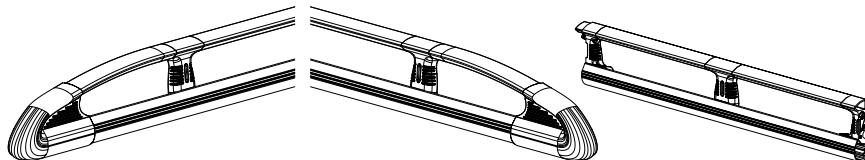

K685- Saic, Maxus, Deliver 9, 2020- L1, H1, Twin Doors

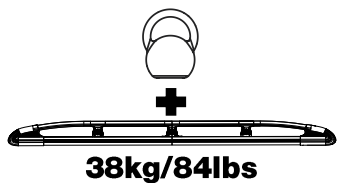


**75kg
Max**

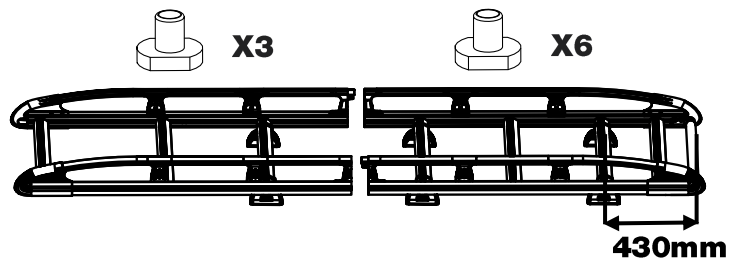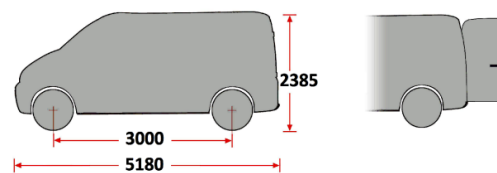


Steps 45-70




B

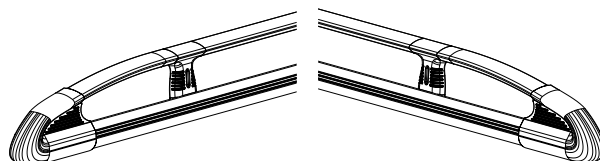


30.

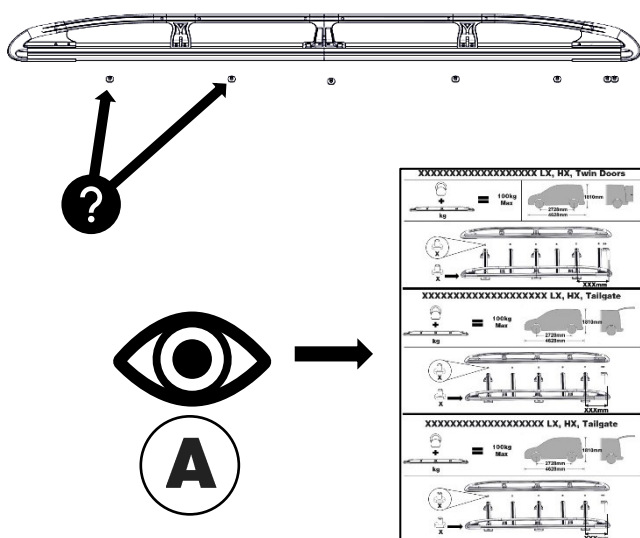


31.

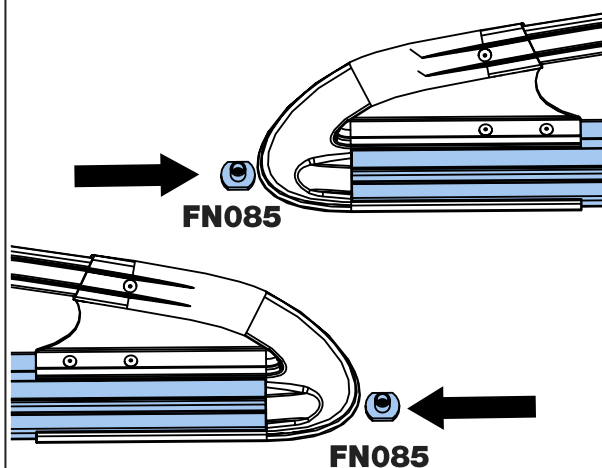


32.

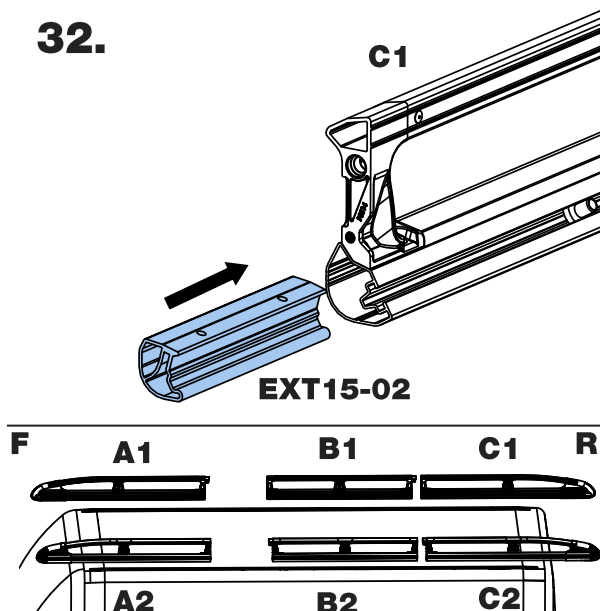


33.

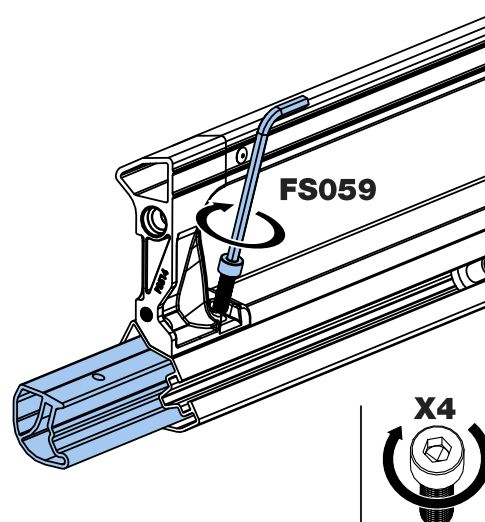


34.

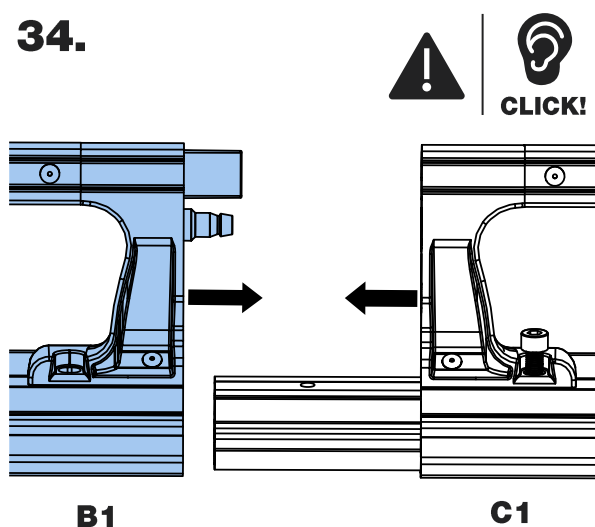


35.

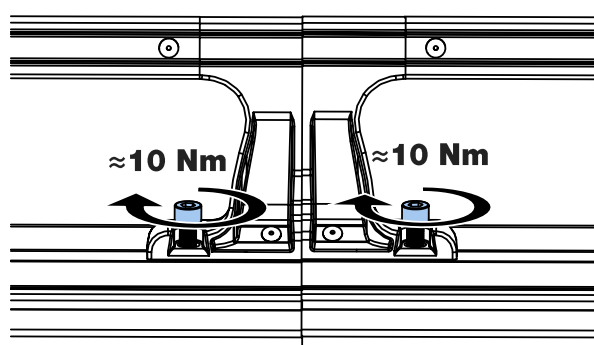


36.

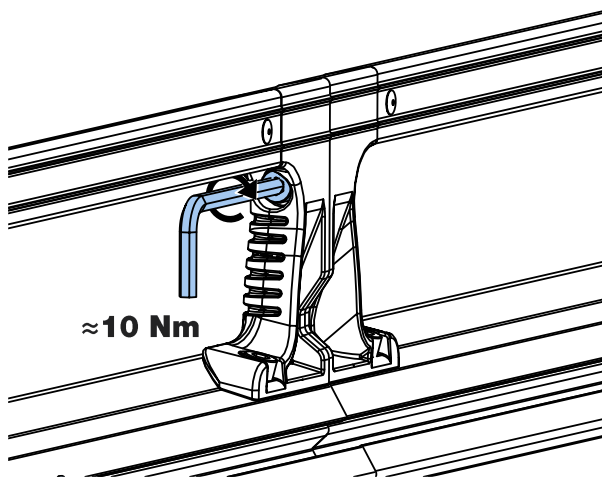


37.

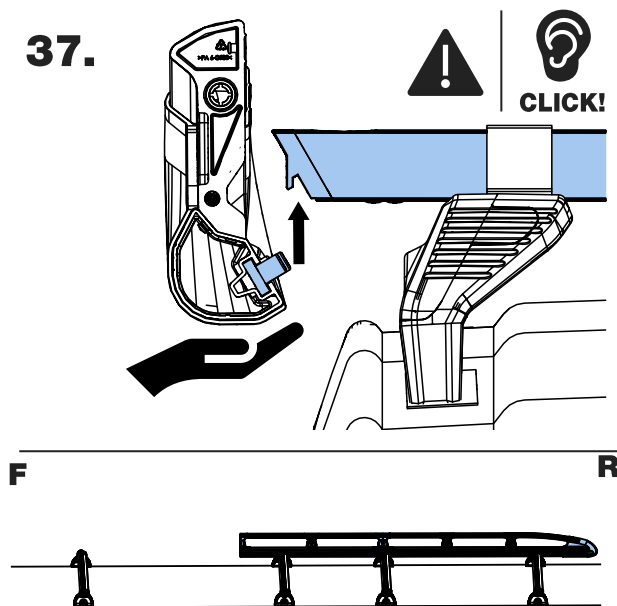


38.

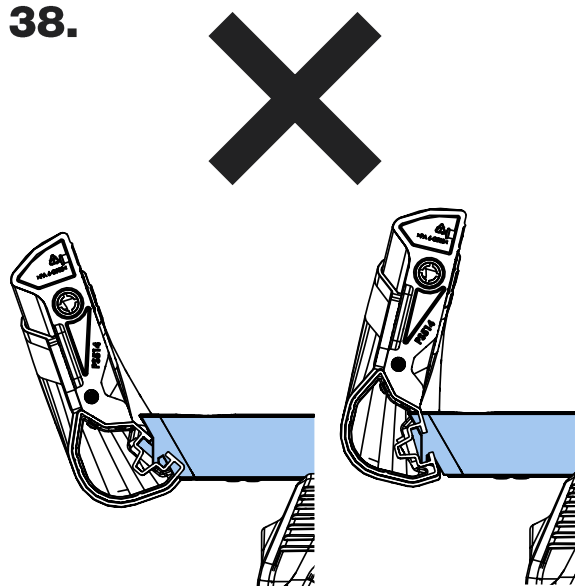


39.

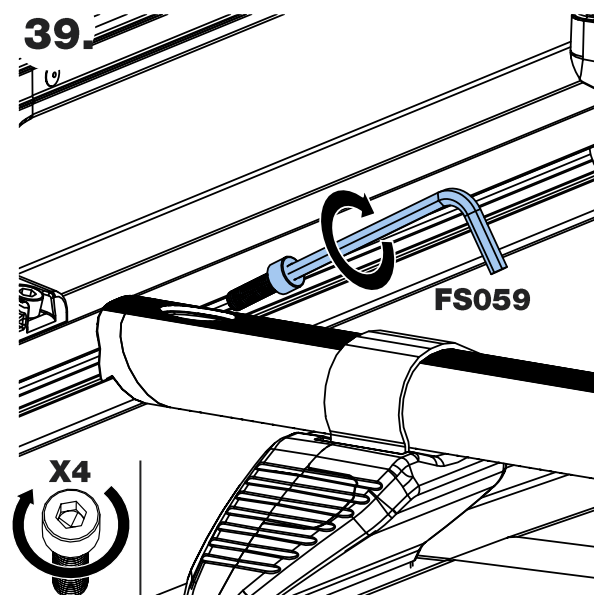


40.

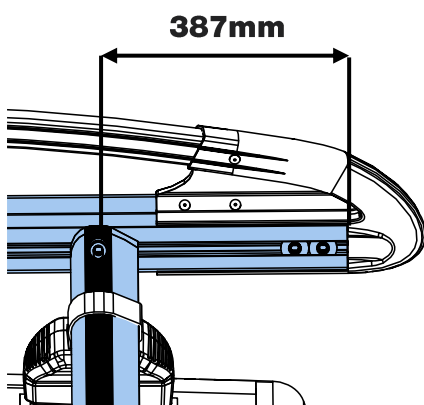


41.

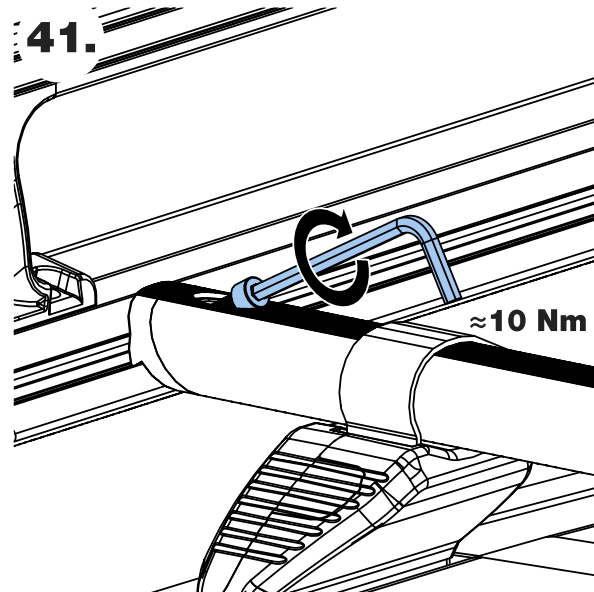


42.

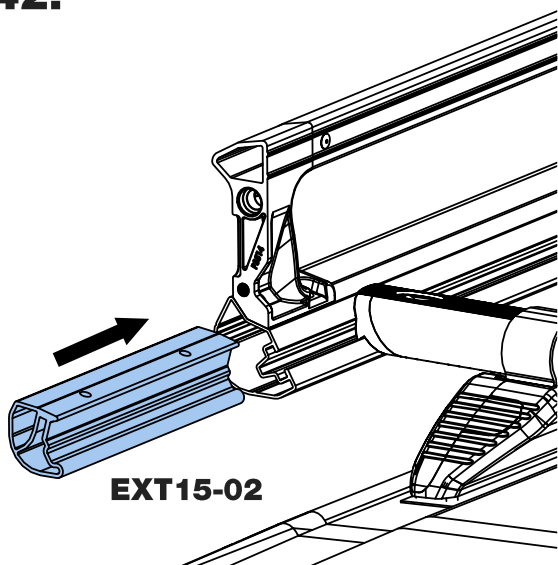


43.

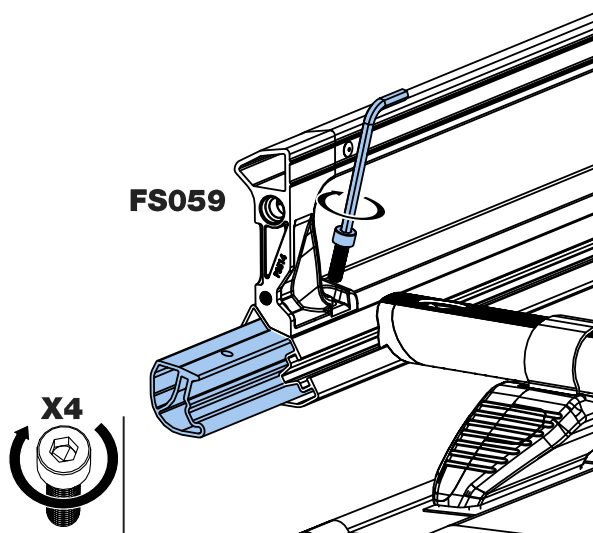


44.

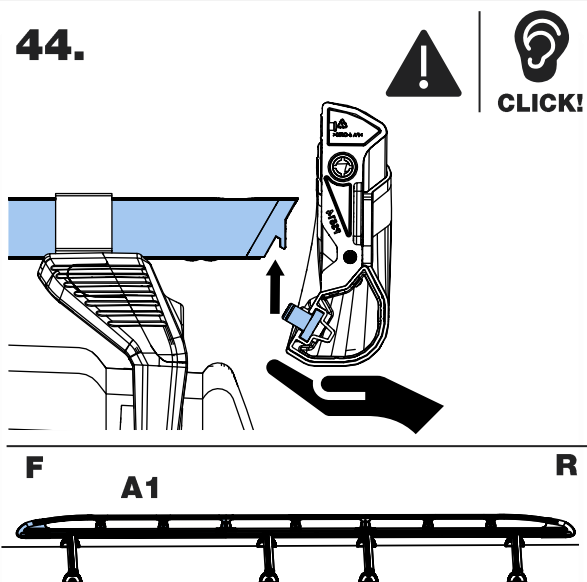


45.

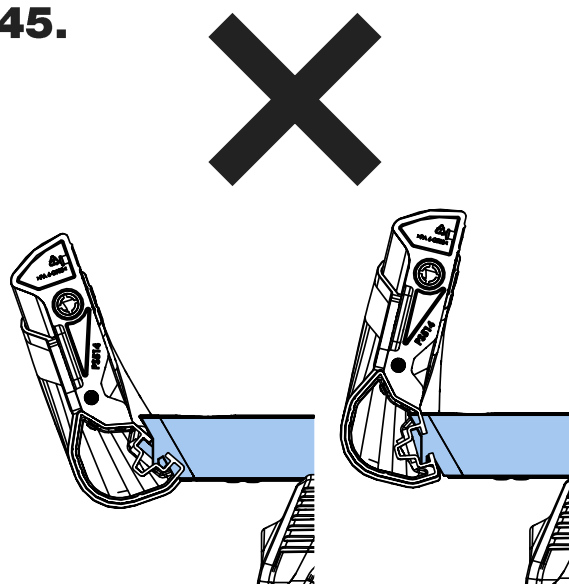


46.

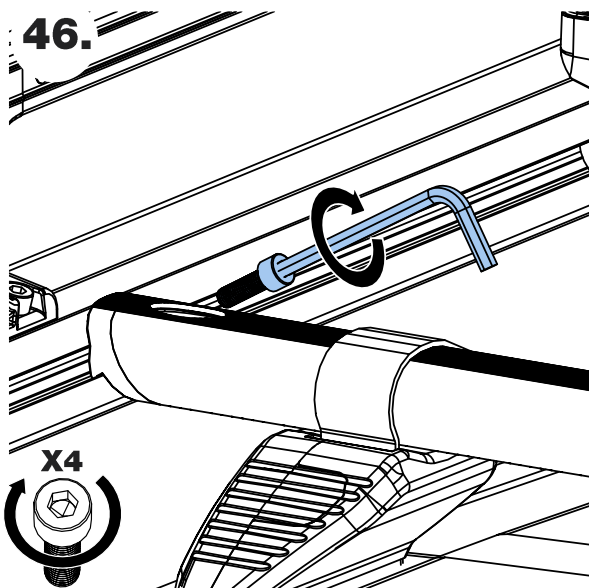


47.

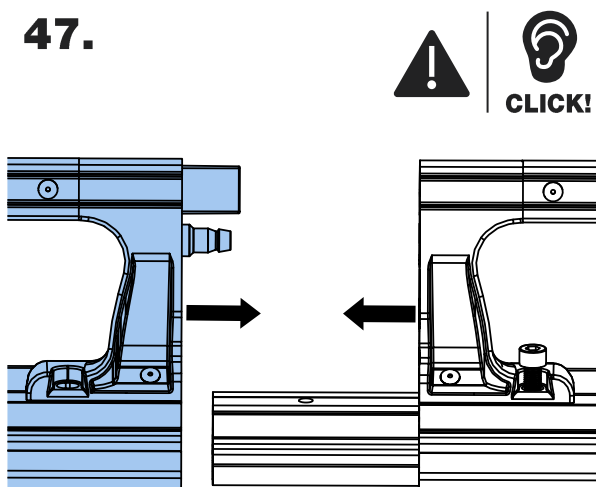


48.

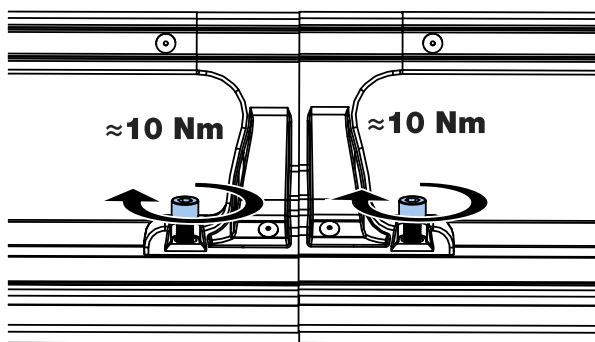



49.

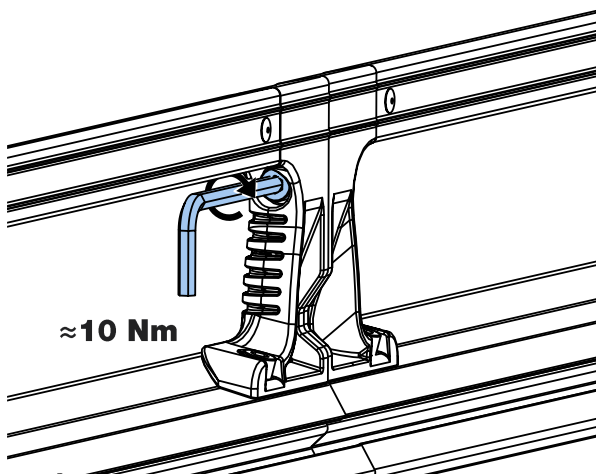


50.

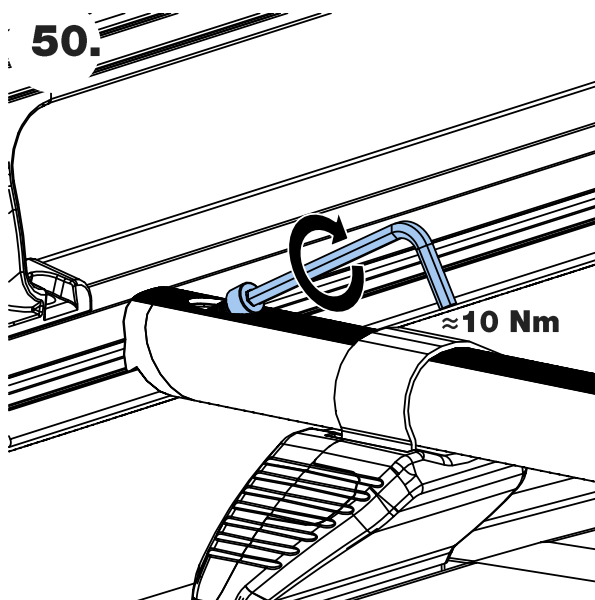


51.





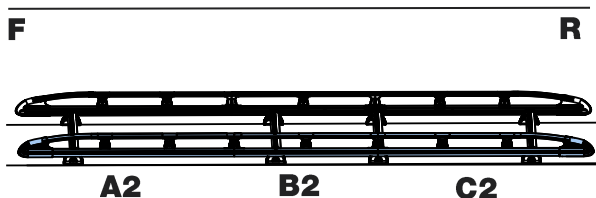
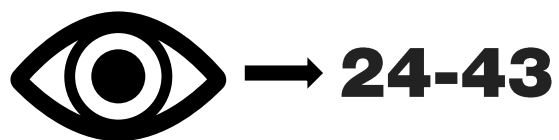


52.

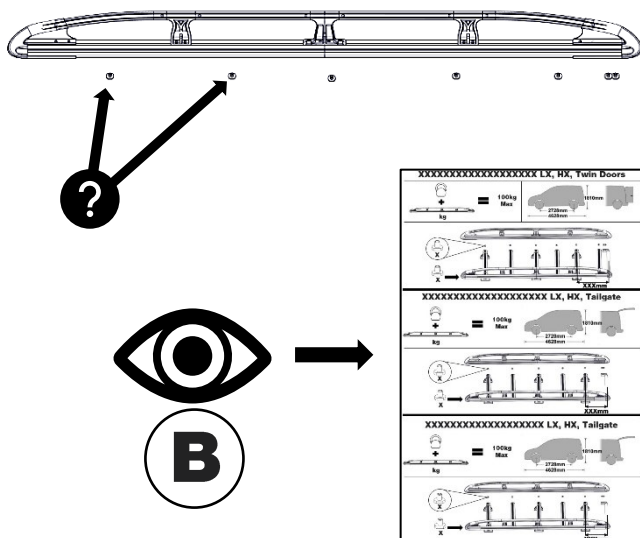


53.

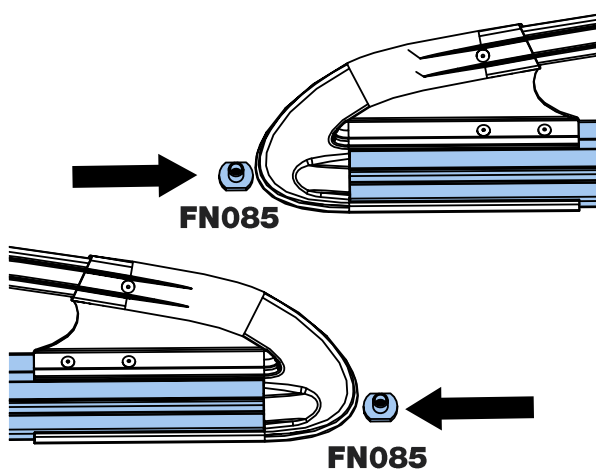


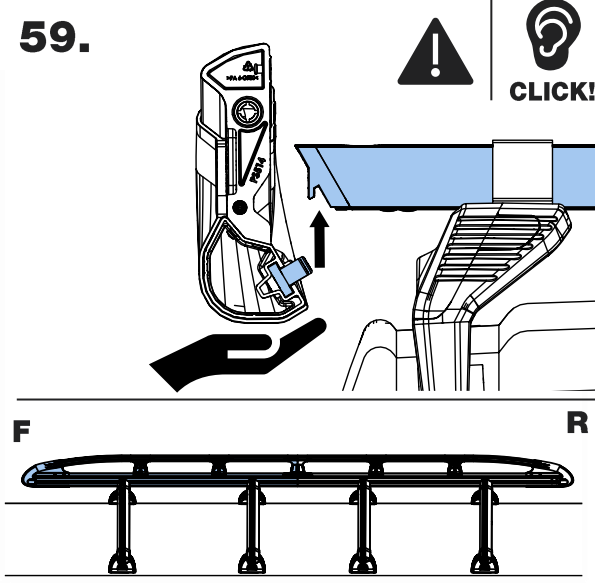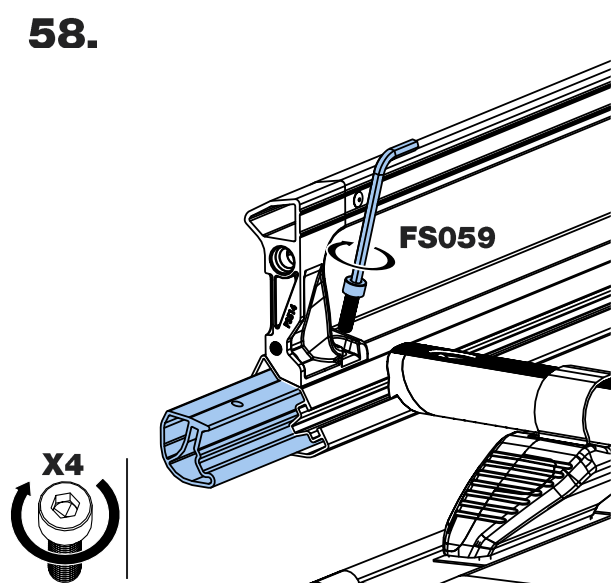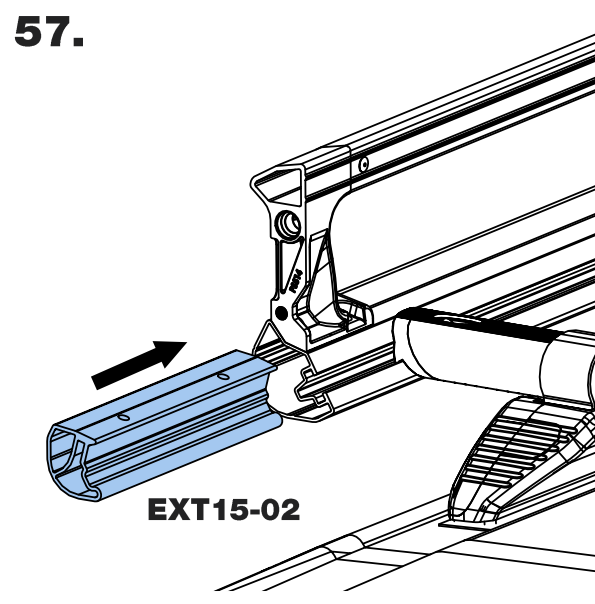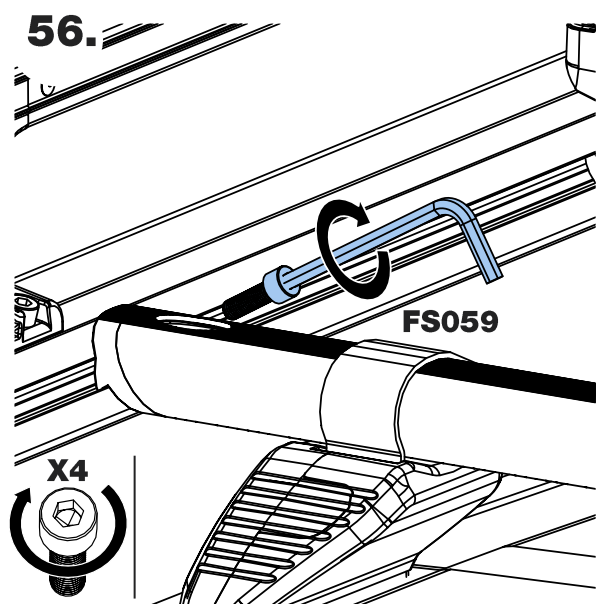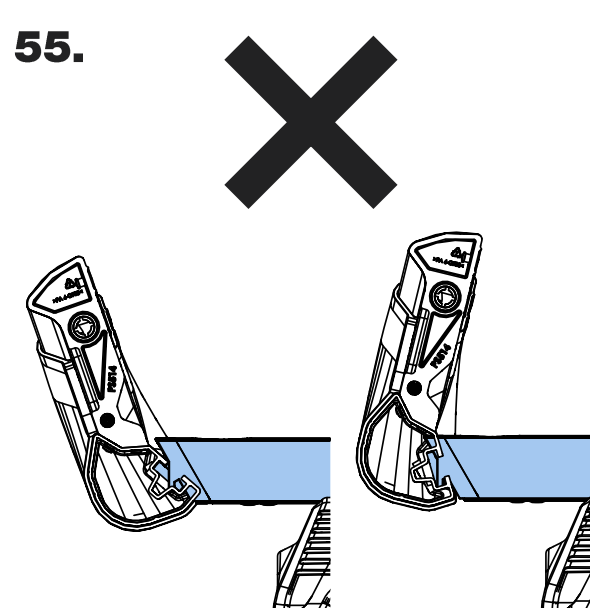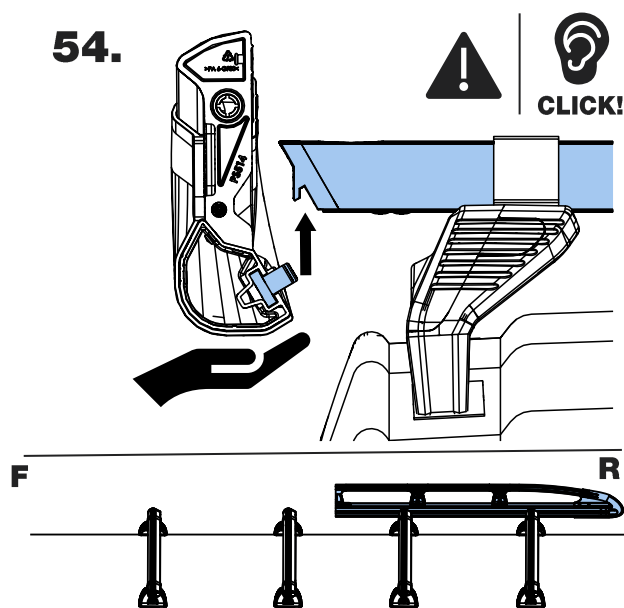


60.

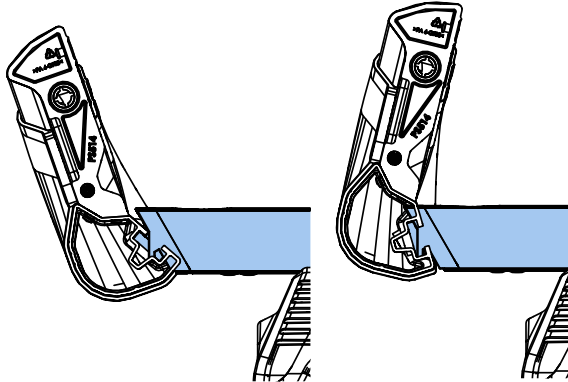


61.

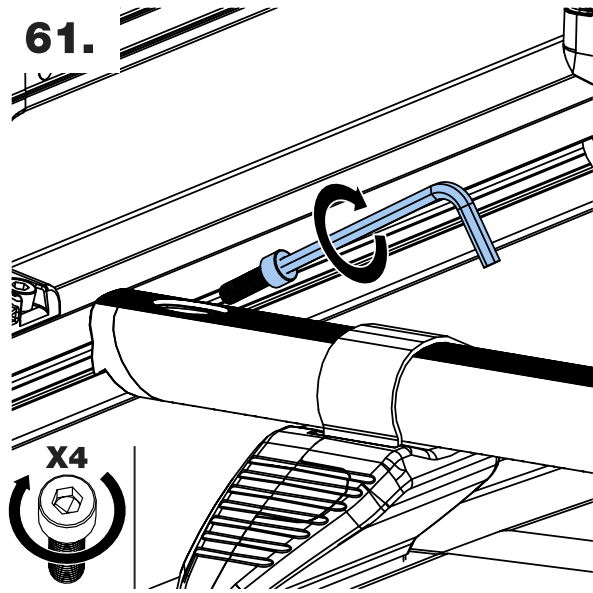


62.

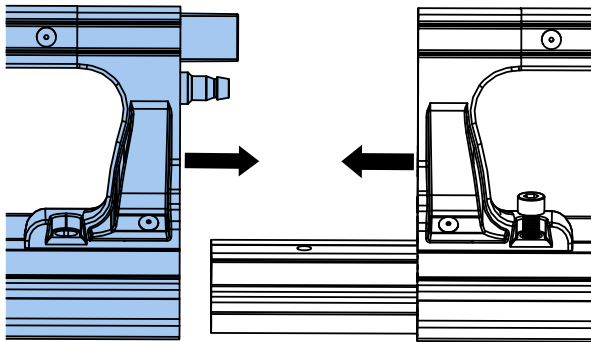


63.

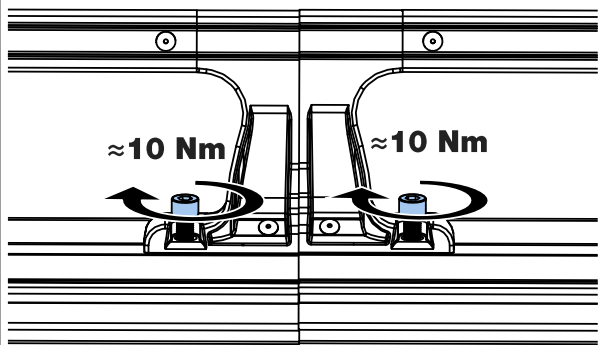


64.



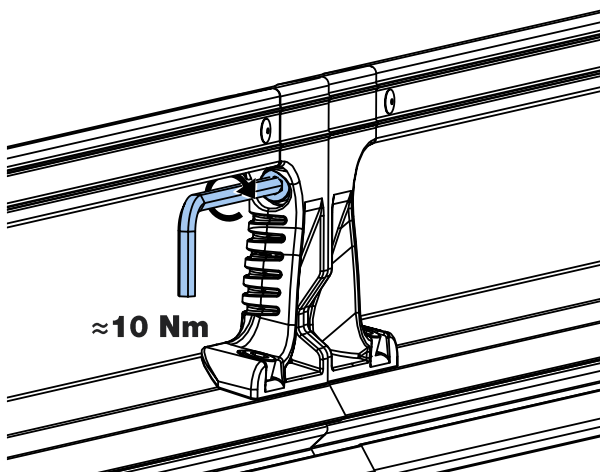


65.

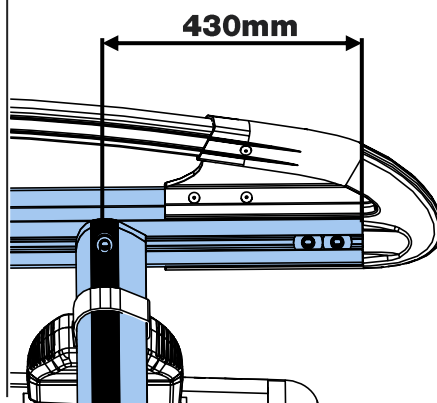

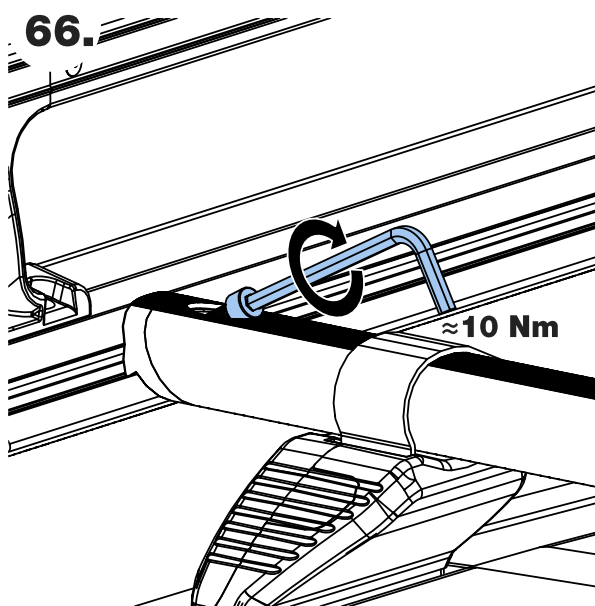


67.

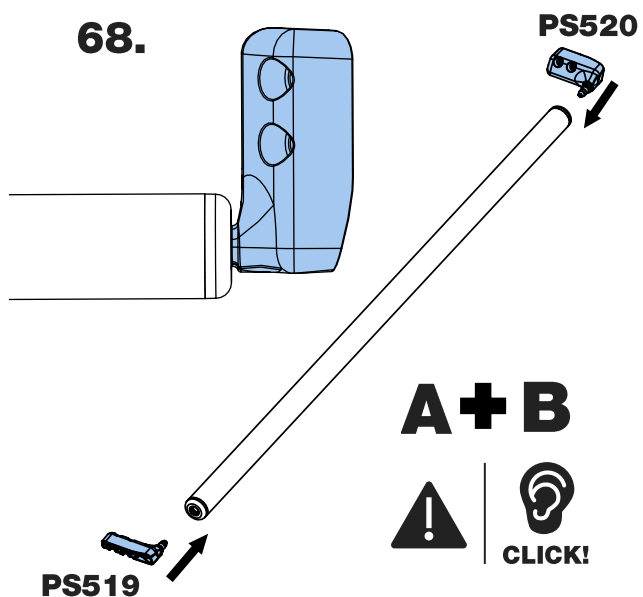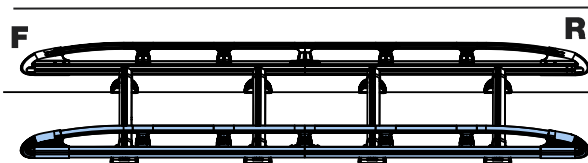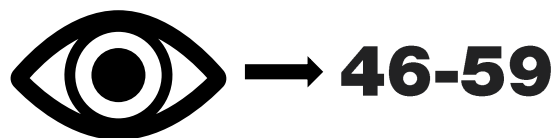


69.



CLICK!

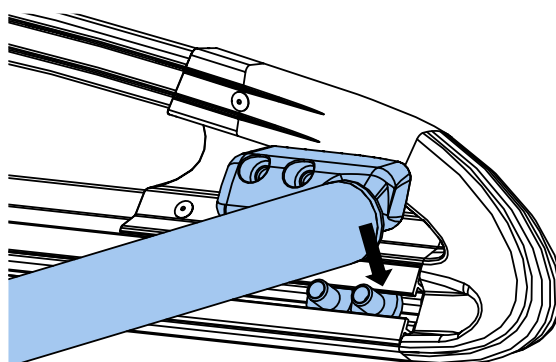

70.

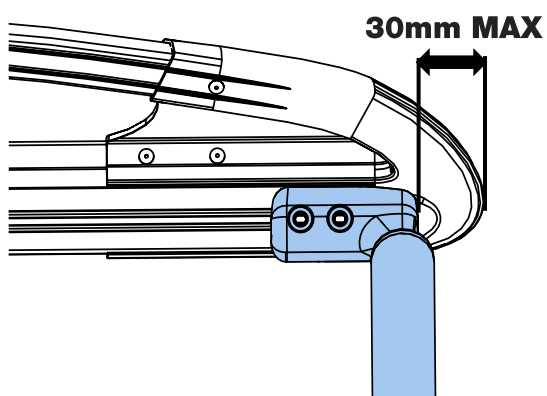

71.

