


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	MK	KB	2754	04/08/22	First Issue
b	MK	KB	2833	17/11/22	Updated instructions for track nut positions, clicking of side frame onto bars and where to strap onto rack.
c	MK	KB	2931	22/03/23	Replaced FS018 with FS059
d	FT	KB	3412	11/02/25	Added steps to fit new rear mounting point
e					
f					
g					
h					
i					
j					
k					
l					
m					

XC4KR

KammRack

Instructions



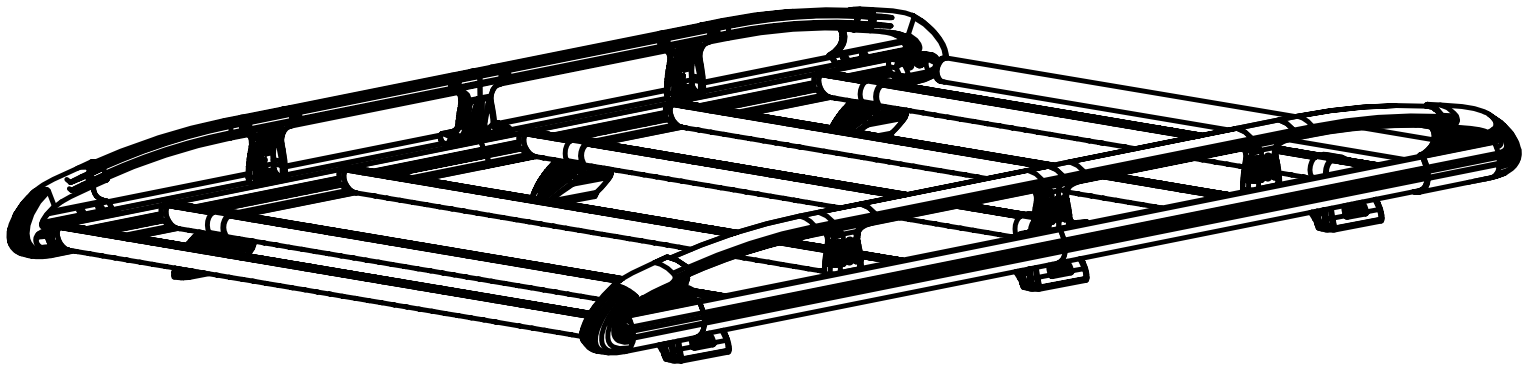


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

XC4KR:


Saic Maxus Deliver 9 2020-

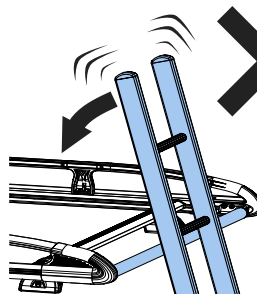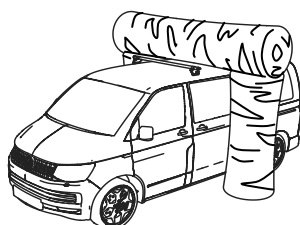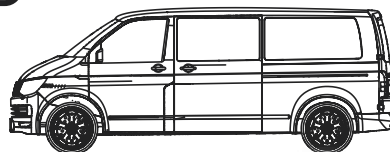


Max
50kg/110lbs

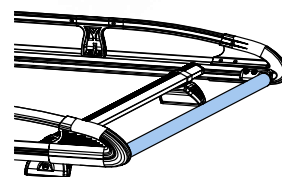


KammRack

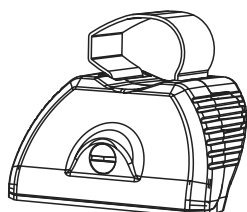


SA397U x 4 ☐

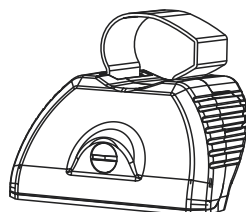


SA398U x 4 ☐

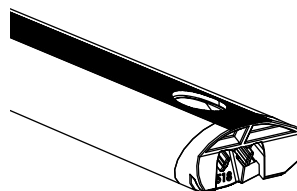


SA430 ☐




C04 x 8
optional upgrade

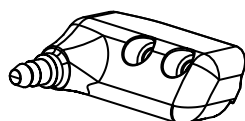


PS519 x 1 ☐

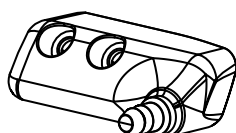

PS520 x 1 ☐

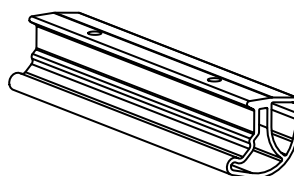


EXT15-02 ☐

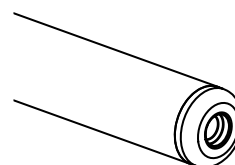


SA438 x 1 ☐


LHS x 2

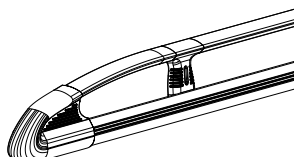

RHS x 2

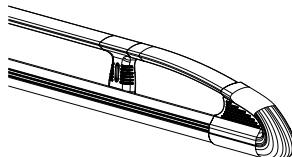


Centre x 2
(L3, H2 Only)

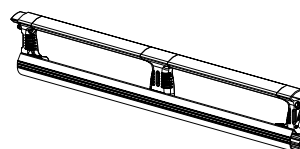


ASF x 1 ☐


Fitting Kit

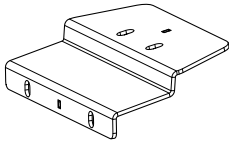


SW525 x 1 ☐

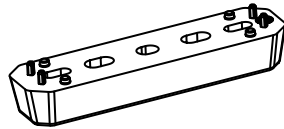


PS183 x 8 ☐




PS023 x 8 ☐




PS619 x 2 ☐

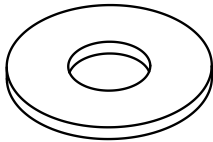


FW002 (M8) x 10

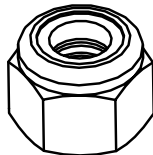


FN006 (M8) x 14

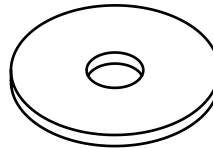


PS208 (M8) x 10

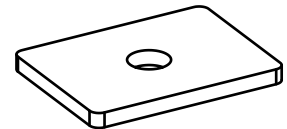

PS020 (M8) x 6

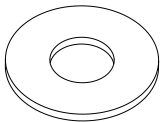

FW021 (M8) x 8

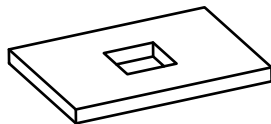


MS209 x 6




**FS024
(M8 x 100) x 6**




**FS081
(M8 x 50) x 4**




**FS059
(M8 x 25) x 20**




FN085 x 20



**FS067
(M8 x 20) x 4**

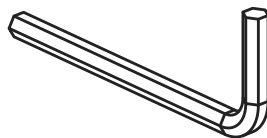


FT01 x 1 ☐

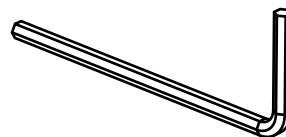


FT05 x 1 ☐

1.

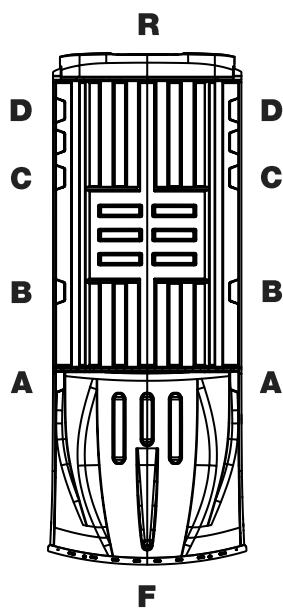


2.

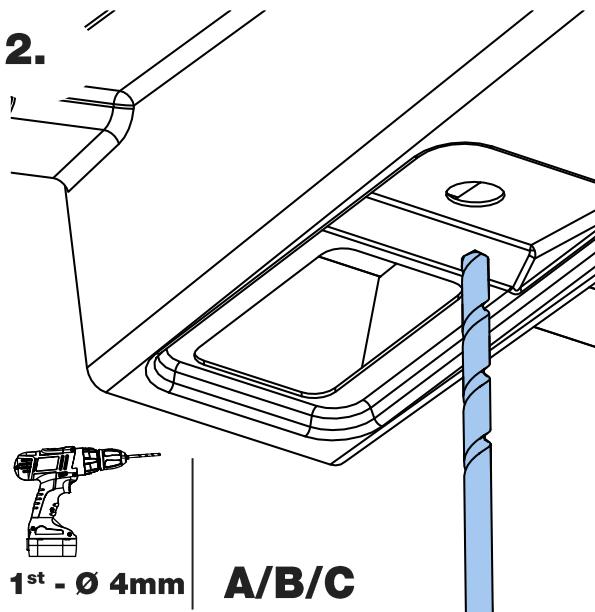

1st - Ø 4mm

A/B/C


3.

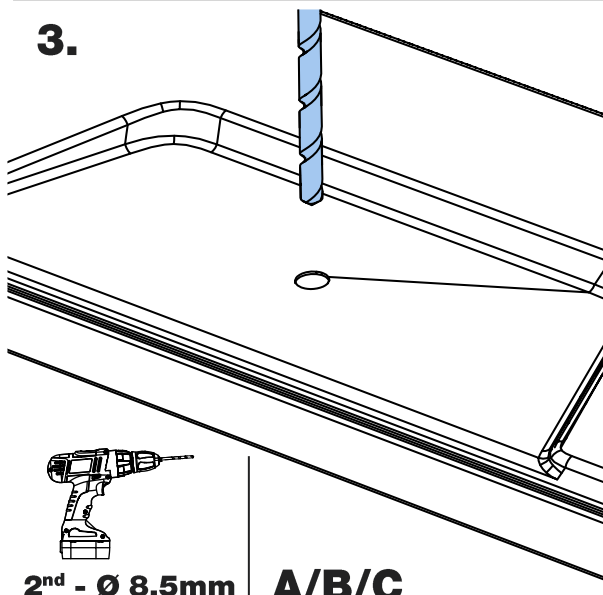

2nd - Ø 8.5mm

A/B/C


4.

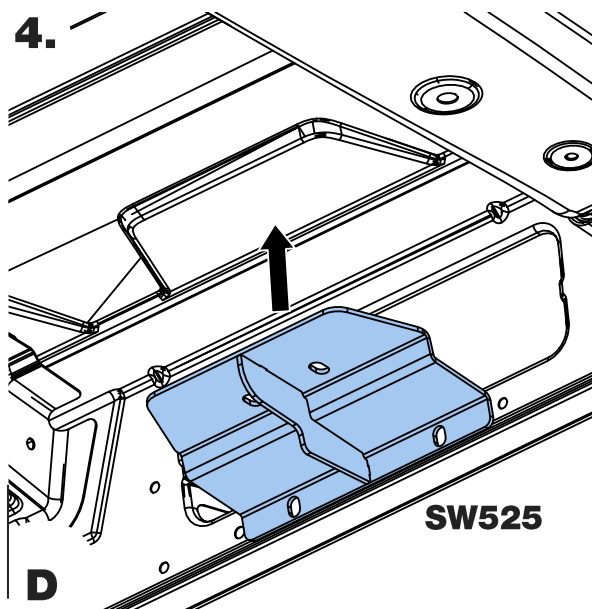

SW525


D

5.

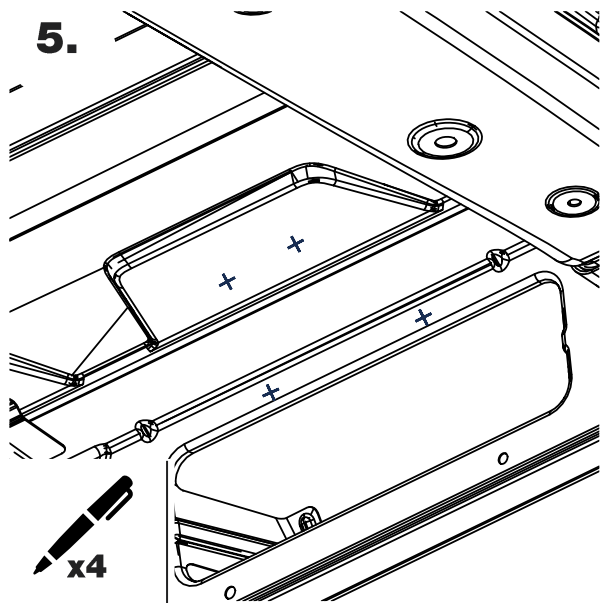

x4

6.

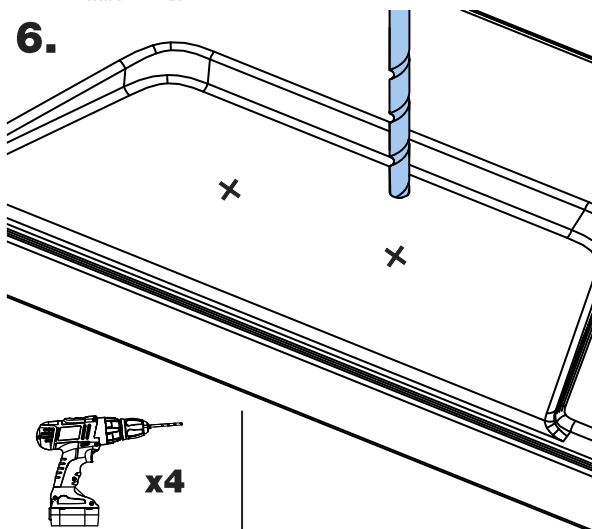


x4


1st - Ø 4mm
2nd - Ø 8.5mm

D



7.

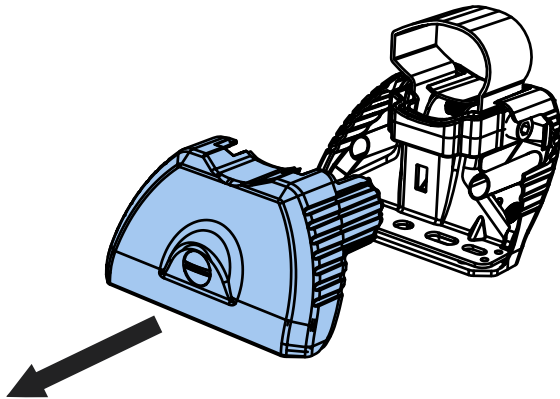


8.

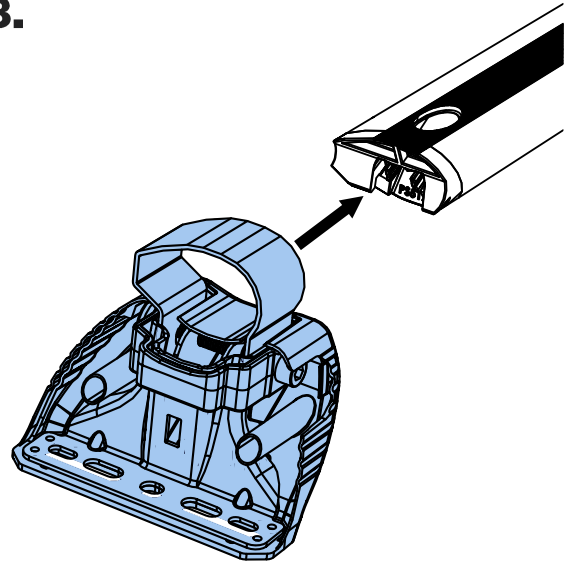


9.





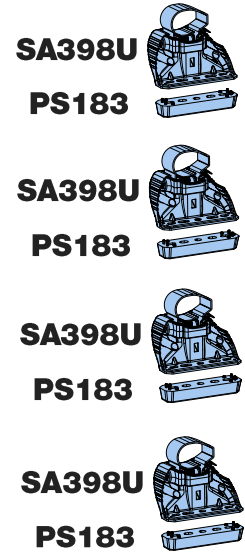
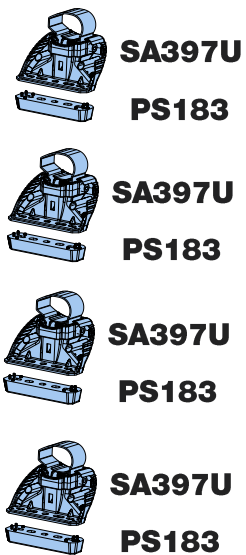








10.

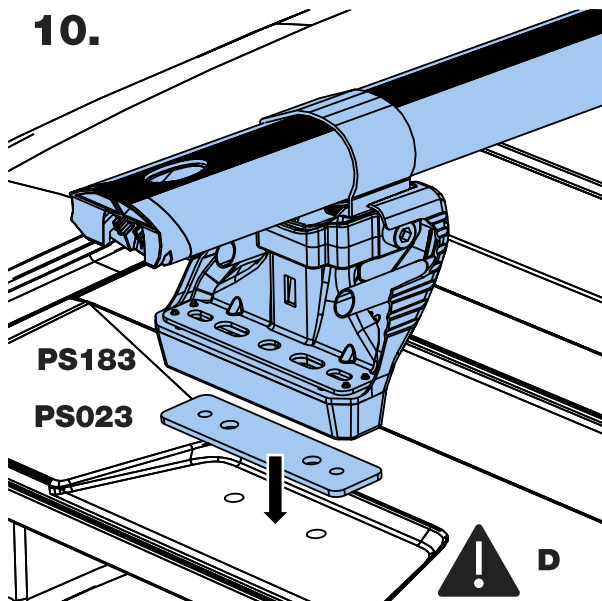


11.

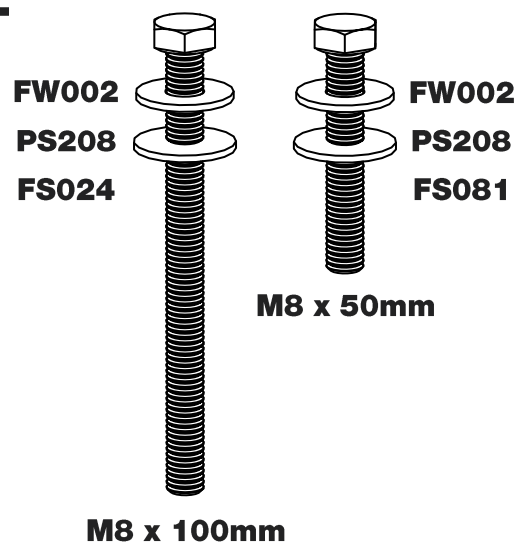

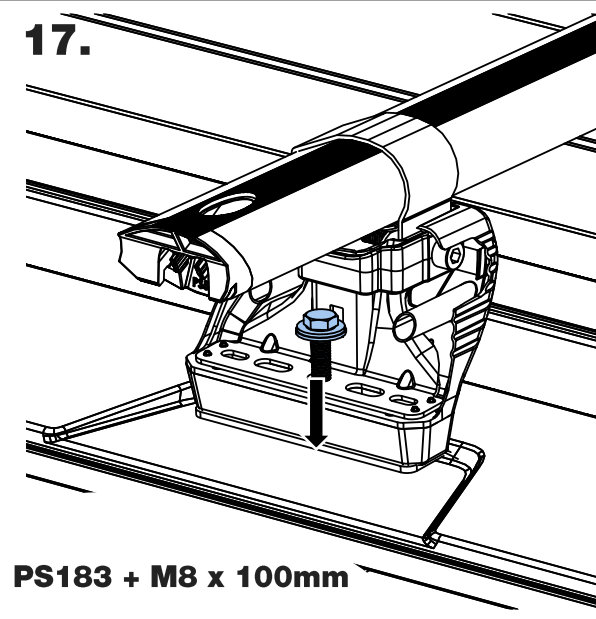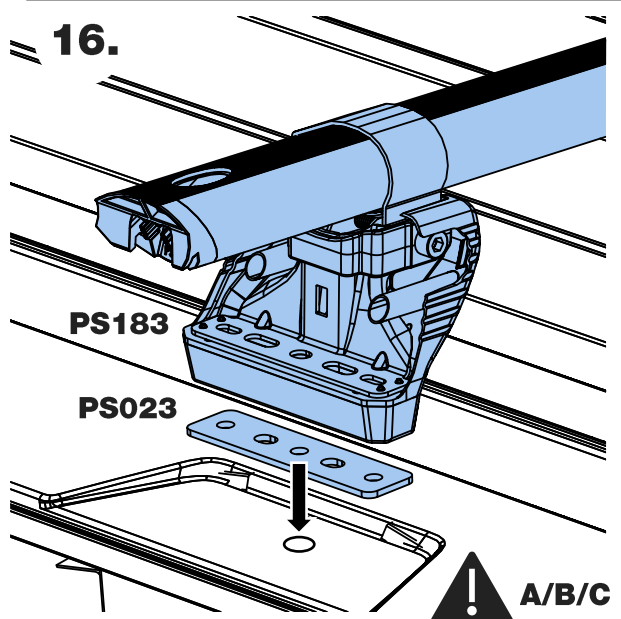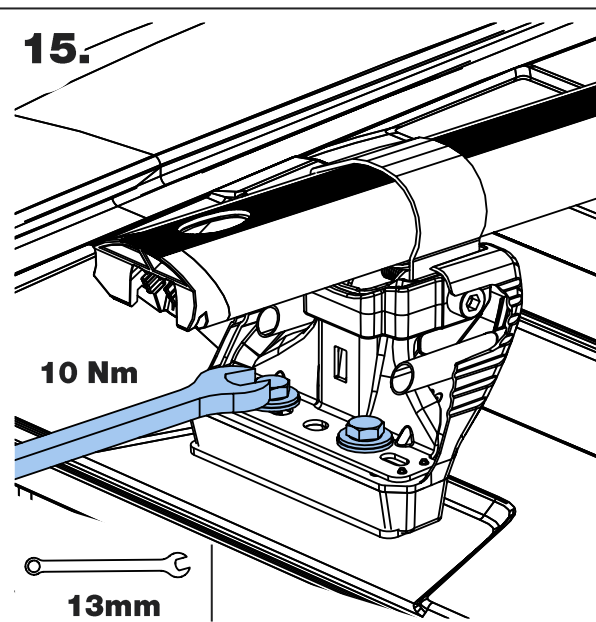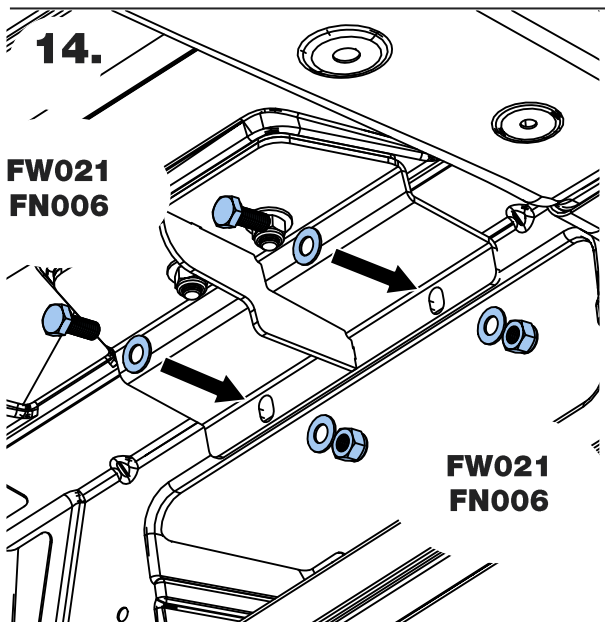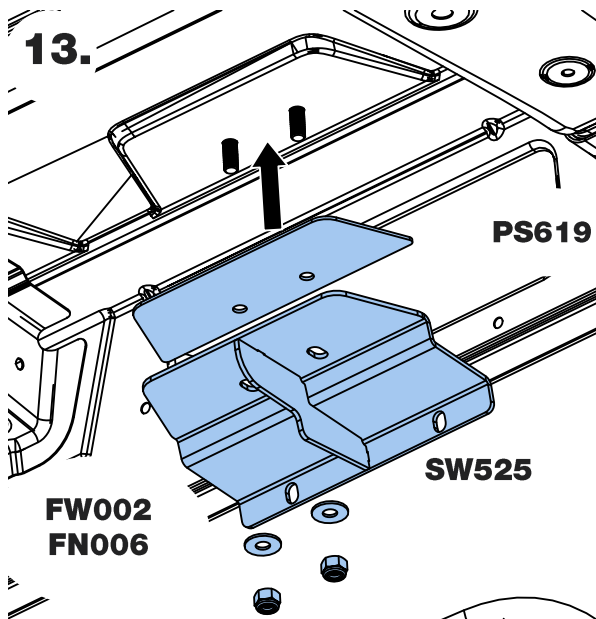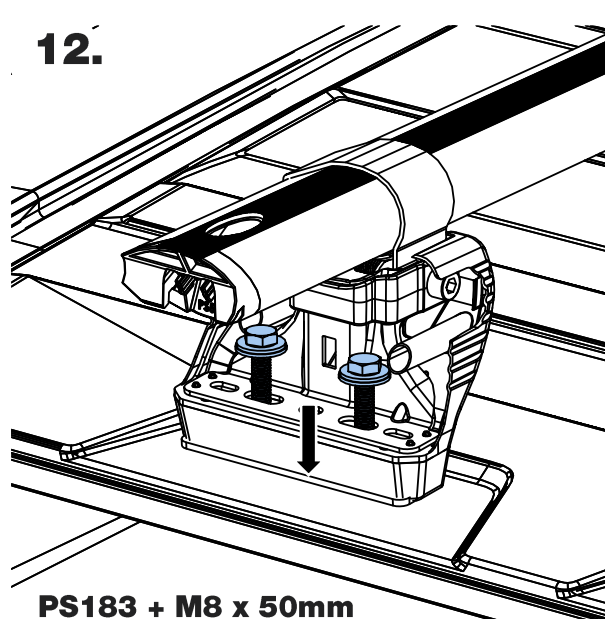


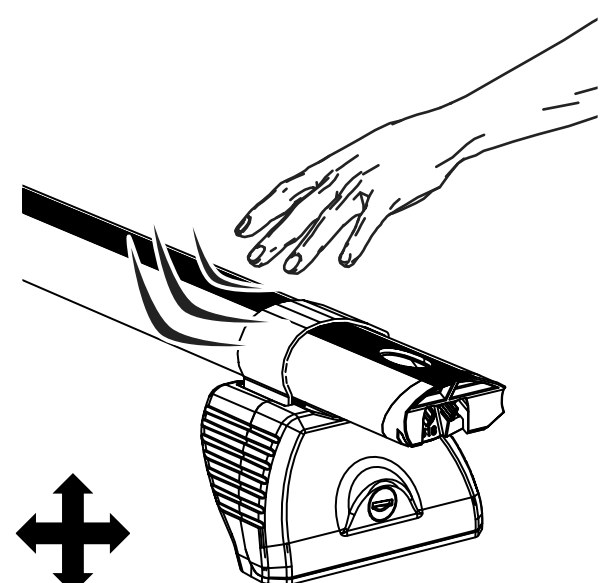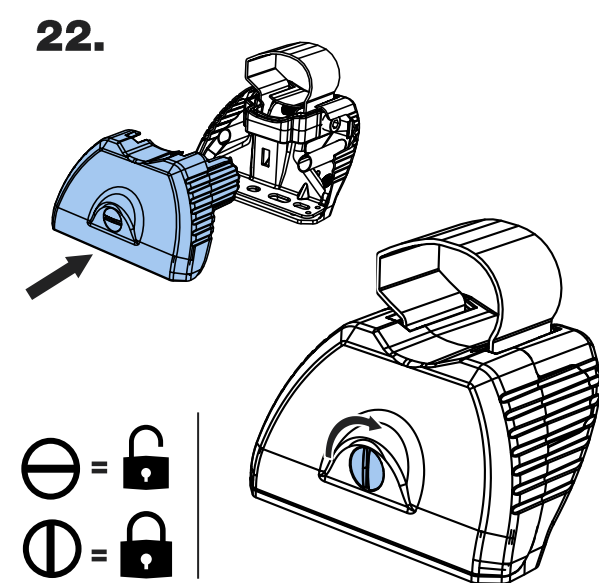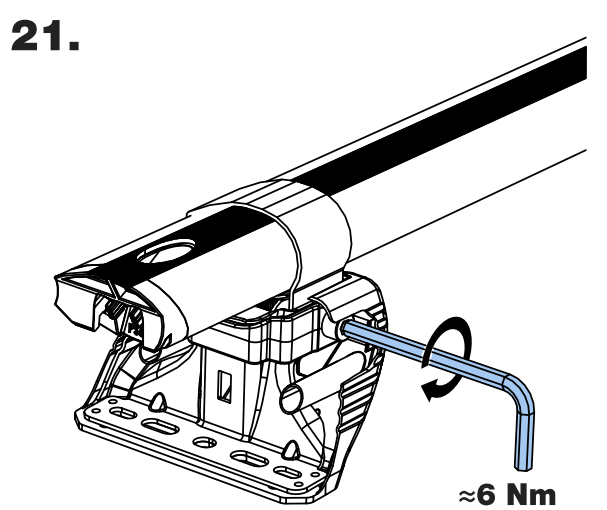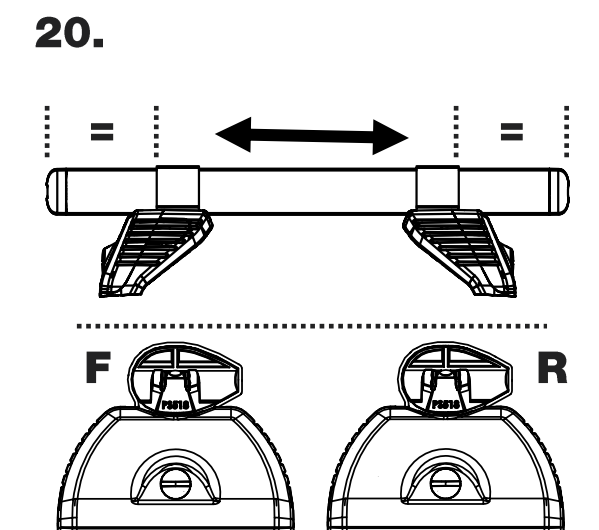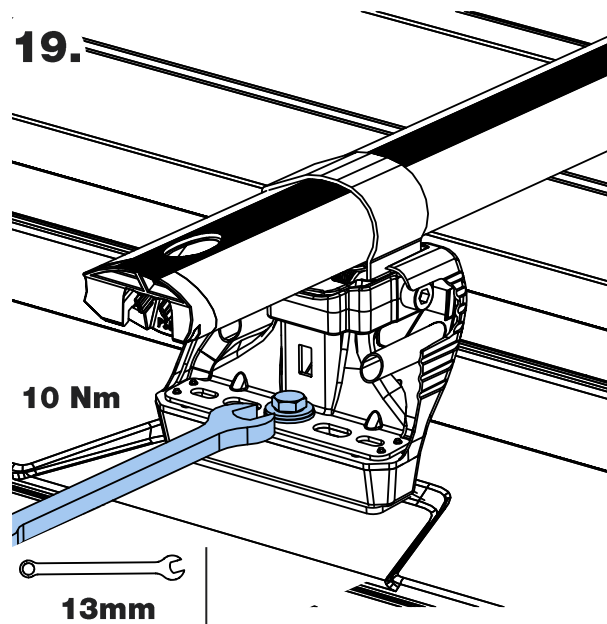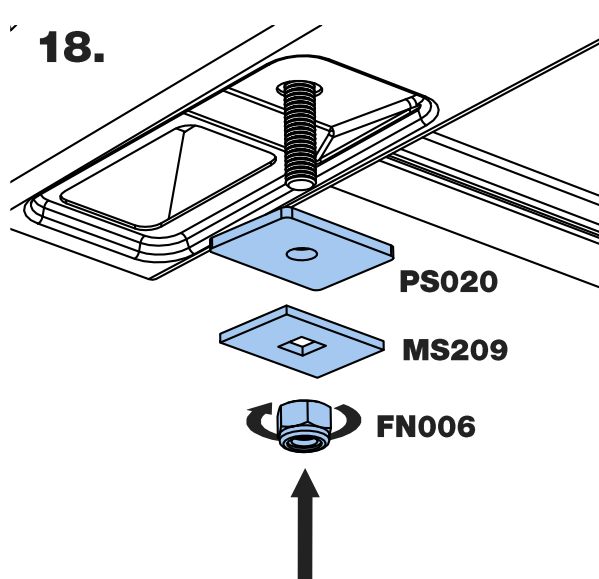

K678- Saic, Maxus, Deliver 9, 2020- L3, H2, Twin Doors

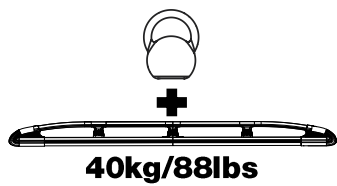

**75kg
Max**

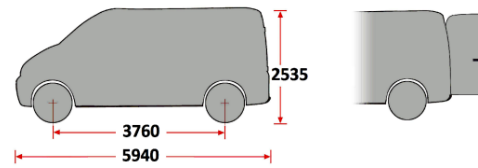


X3



X3




X4

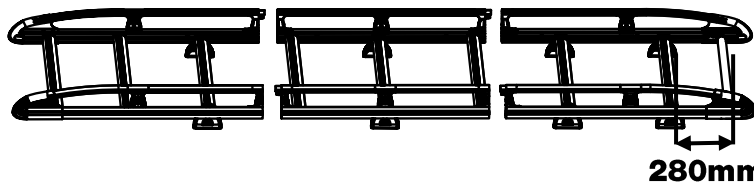


Steps 23-44, 61-70




A

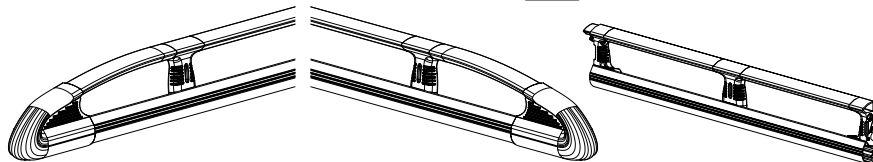

K679- Saic, Maxus, Deliver 9, 2020- L3, H3, Twin Doors

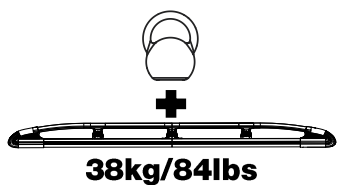


**75kg
Max**

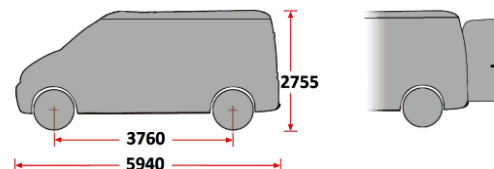

X4




X6

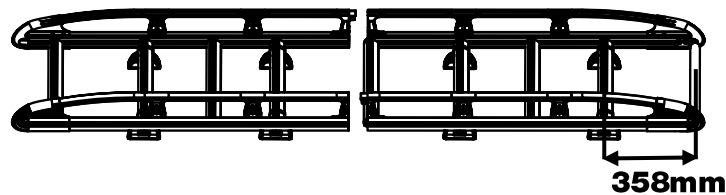


Steps 45-70




B

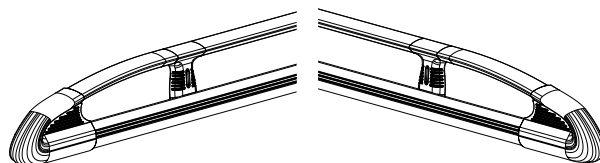


23.

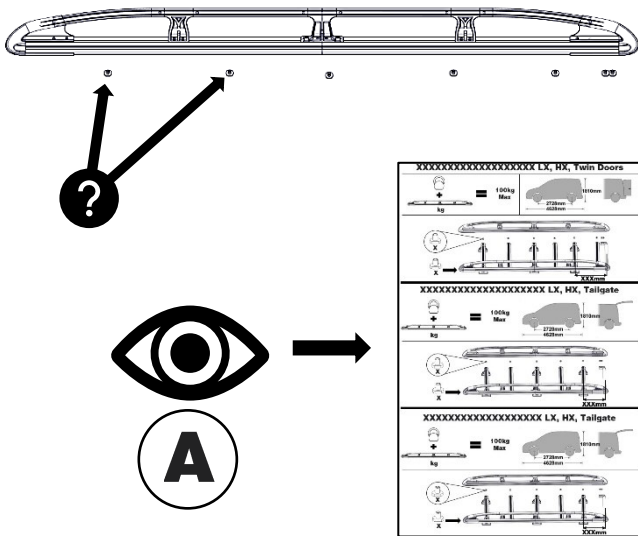


24.

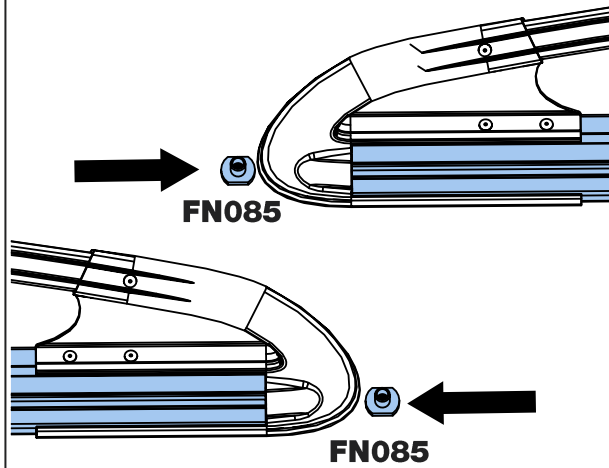


25.

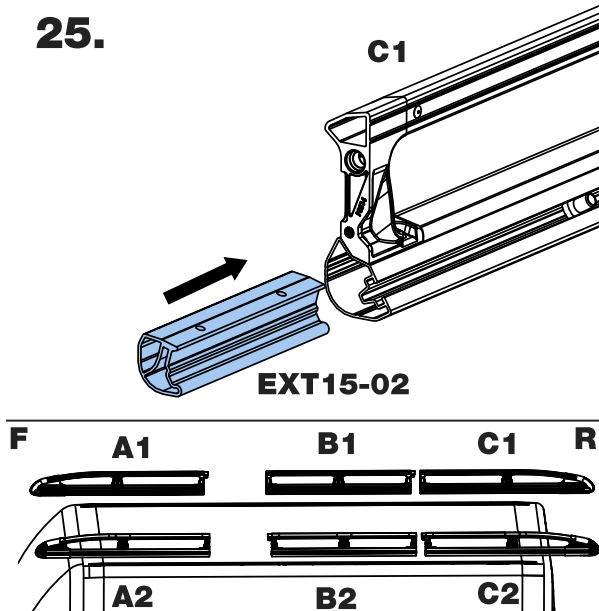


26.

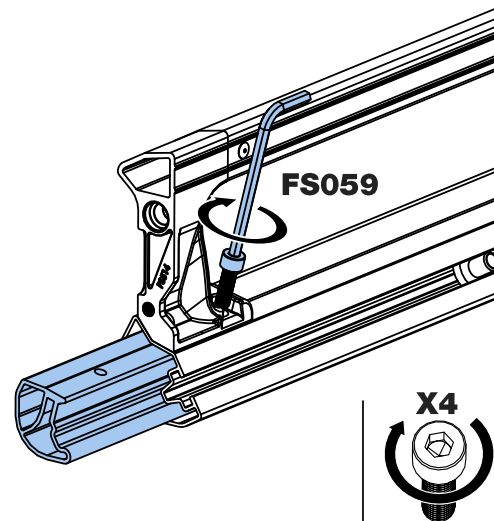


27.

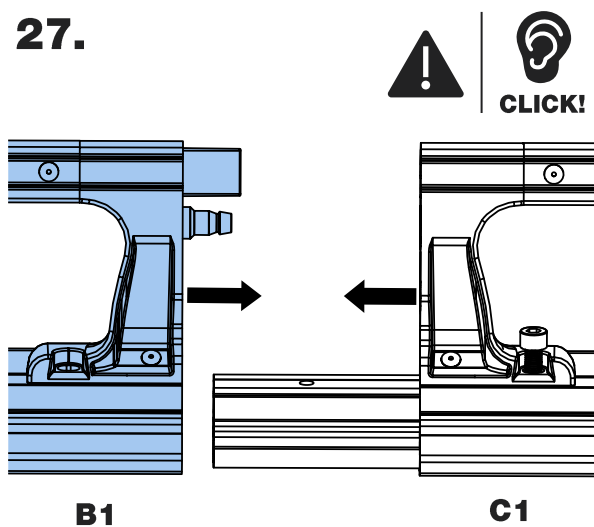


28.

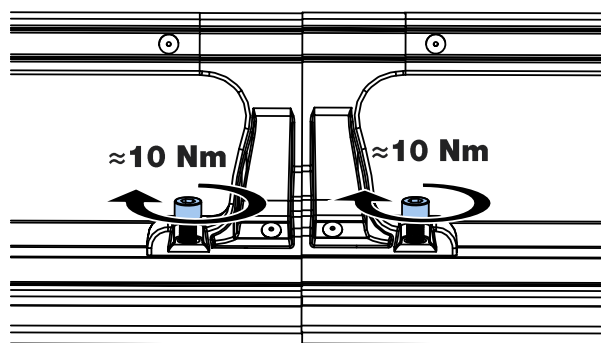


29.

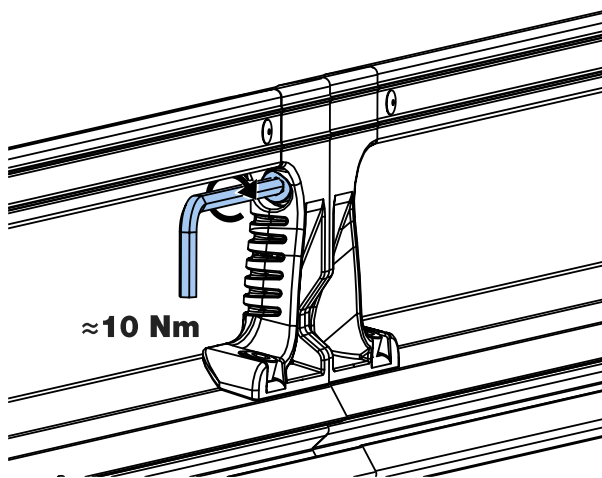


30.

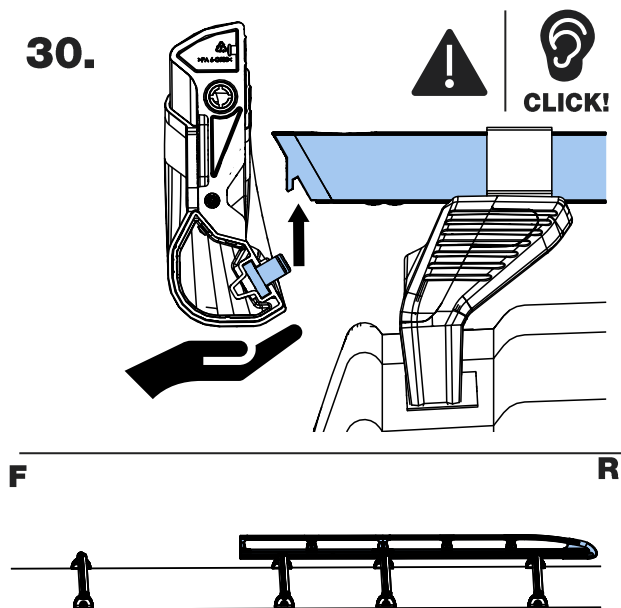


31.

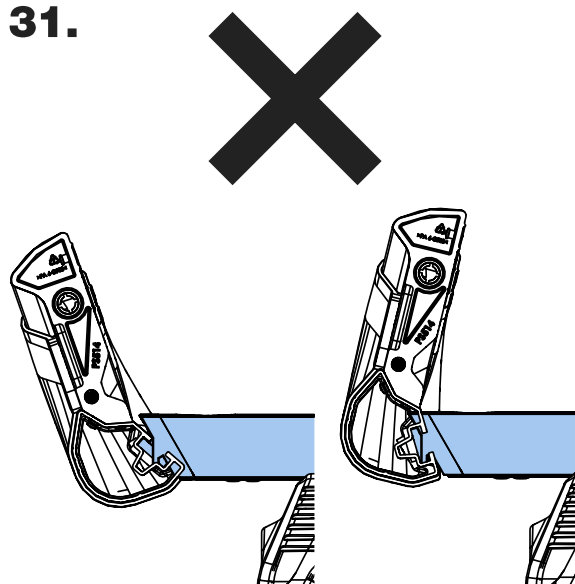


32.

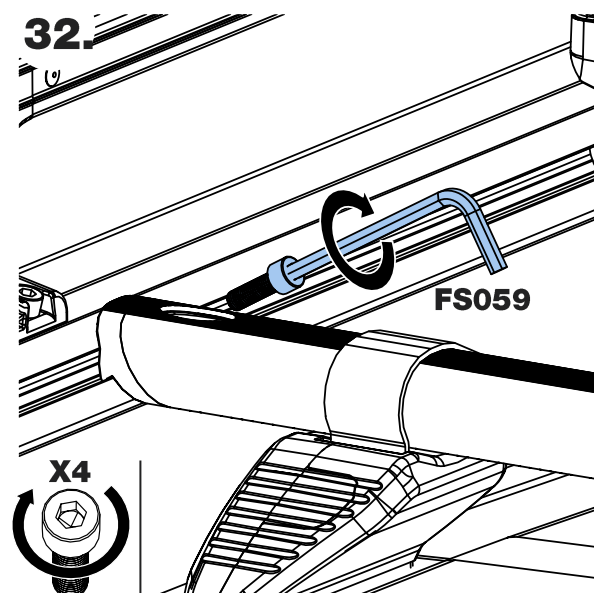


33.

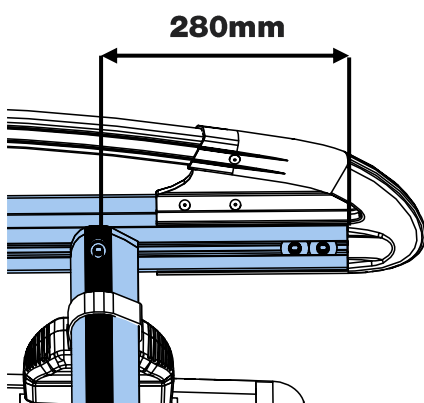


34.

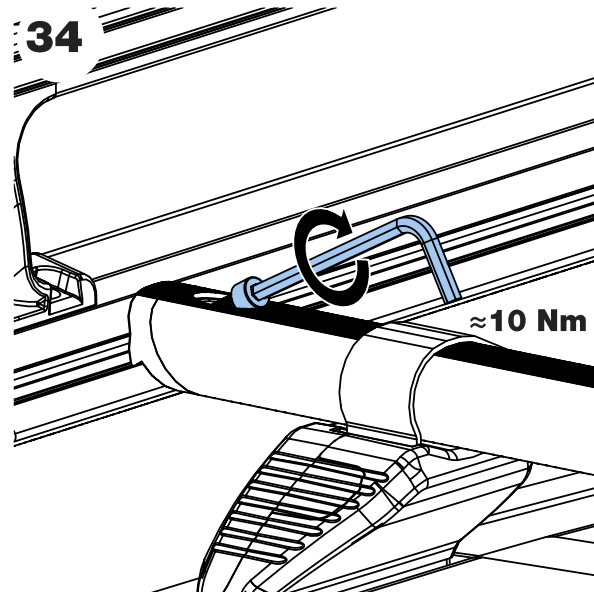


35.

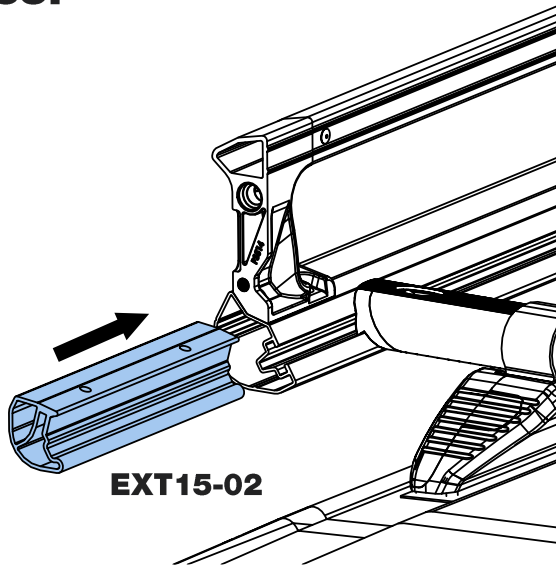


36.

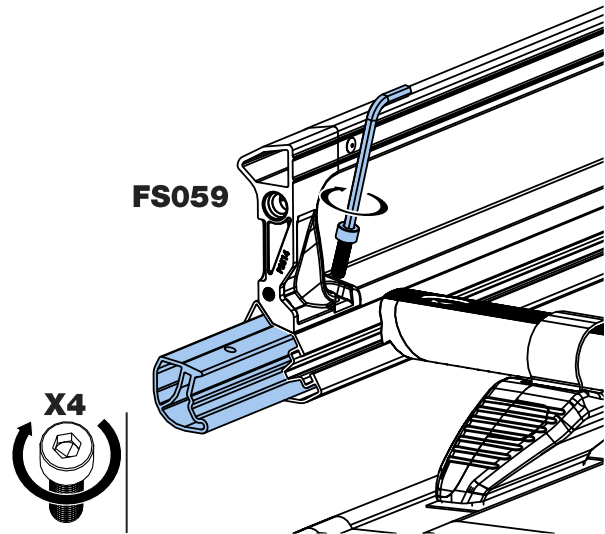


37.

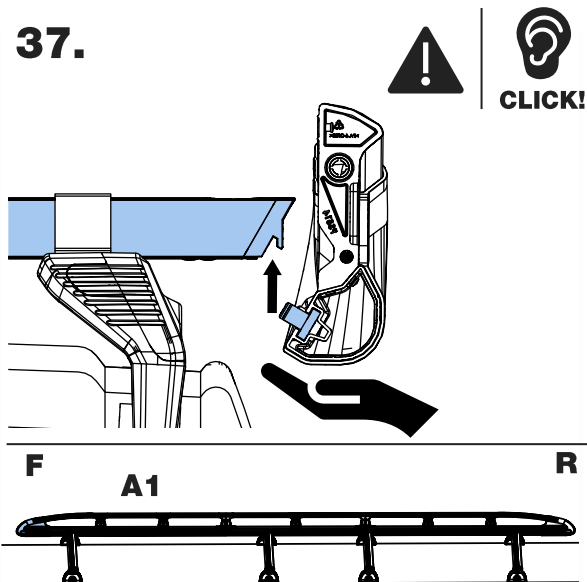


38.

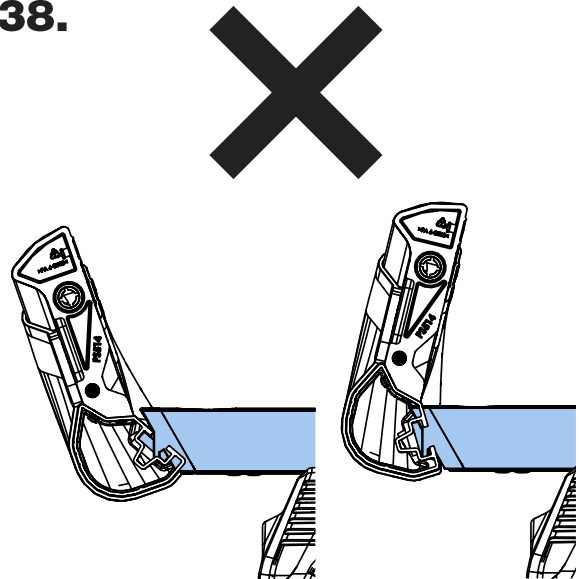


39.

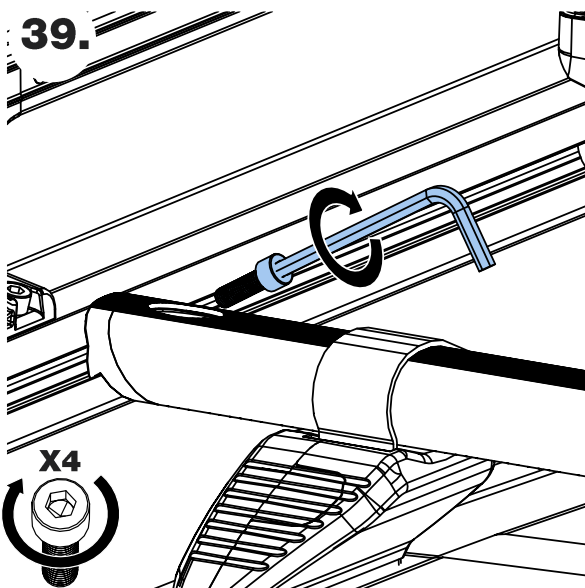


40.

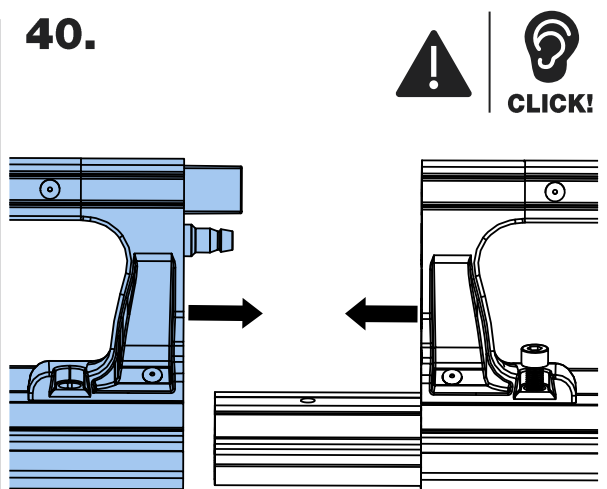


41.

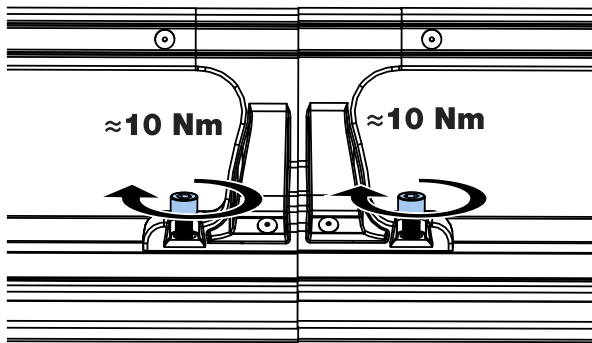



42.

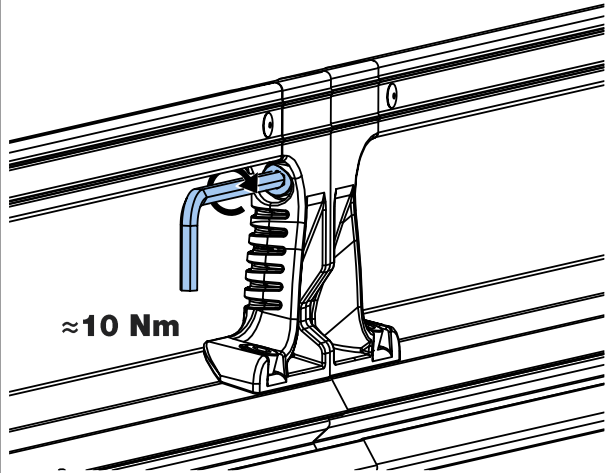



43.

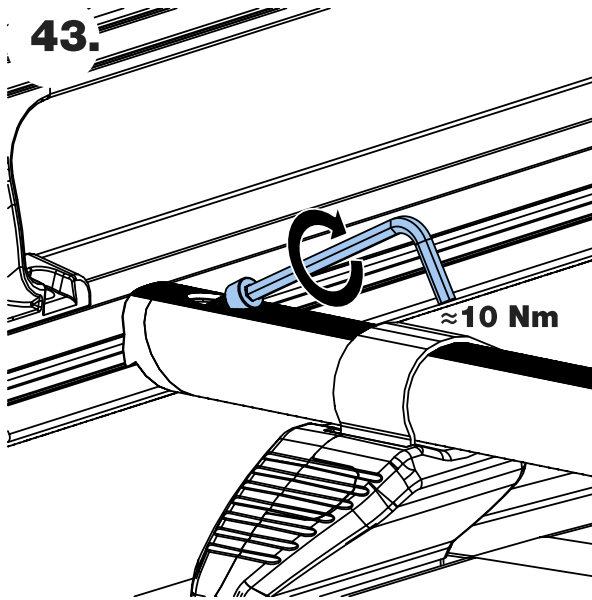


44.





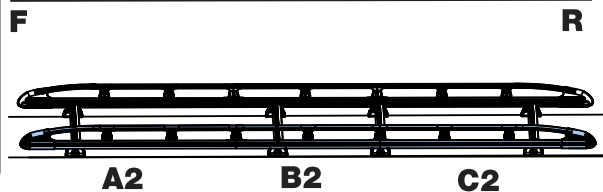
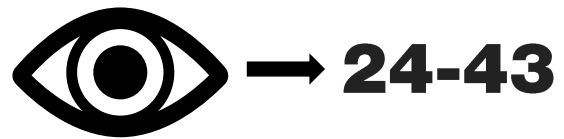


45.

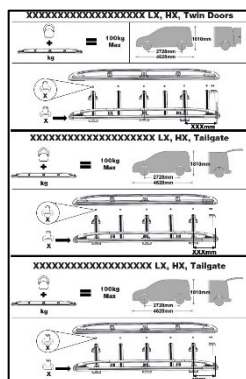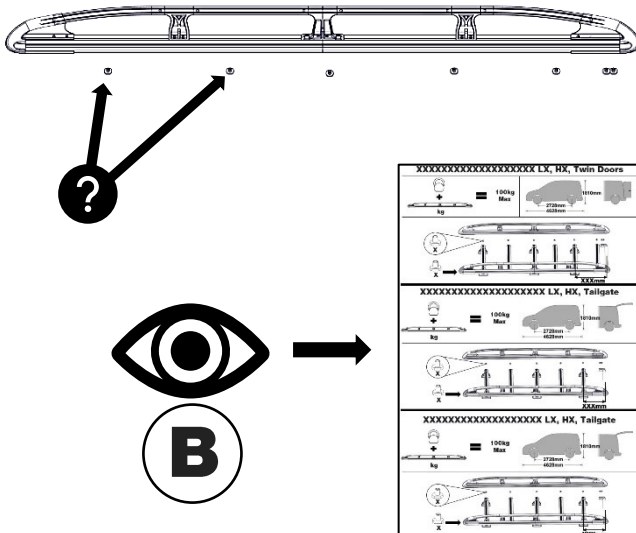


46.

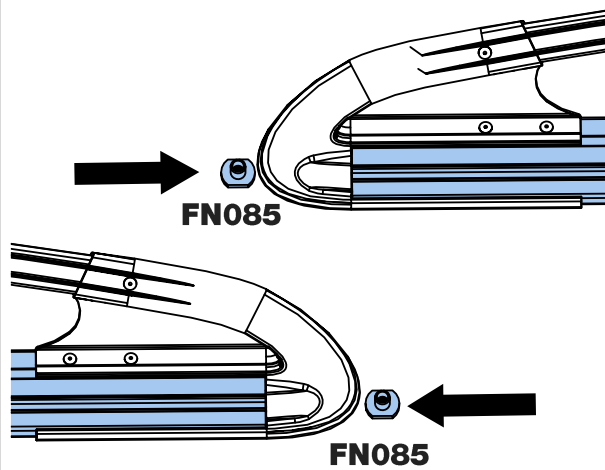


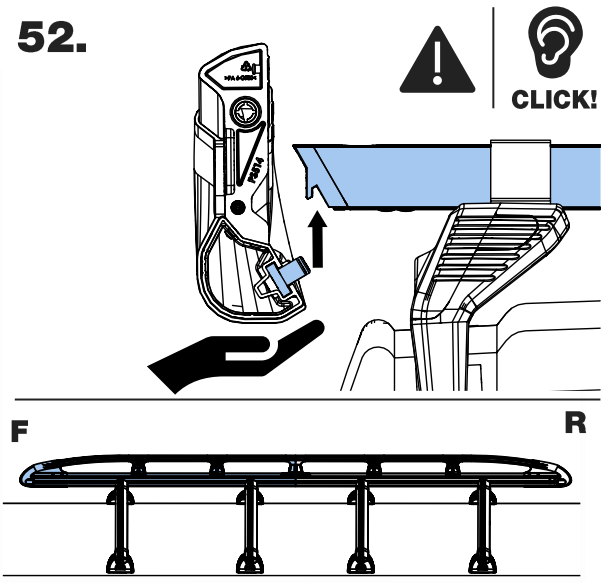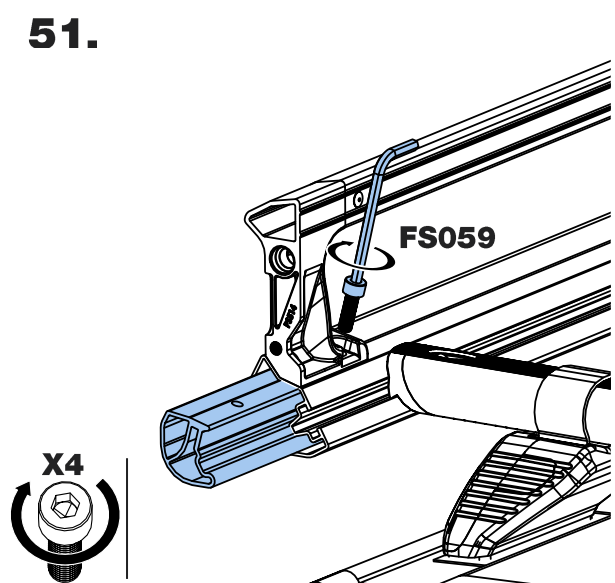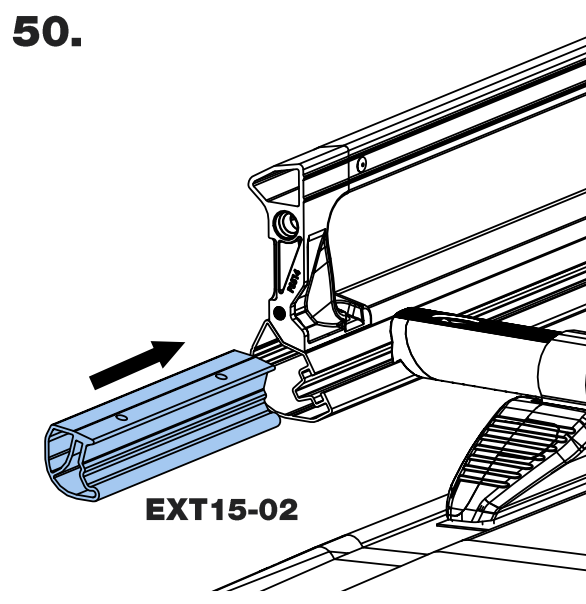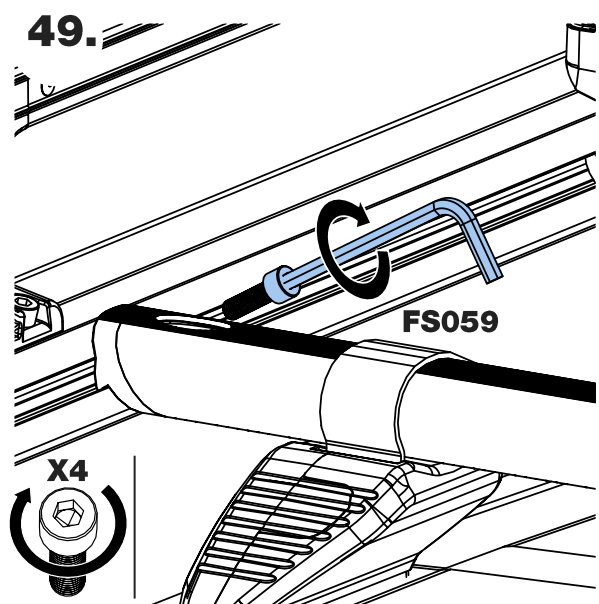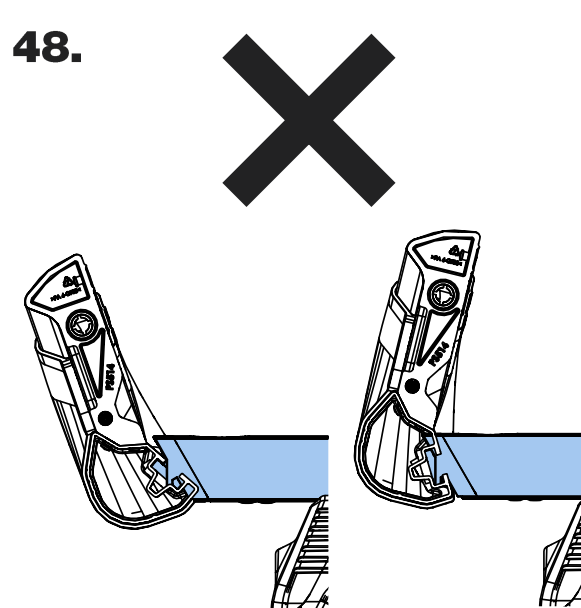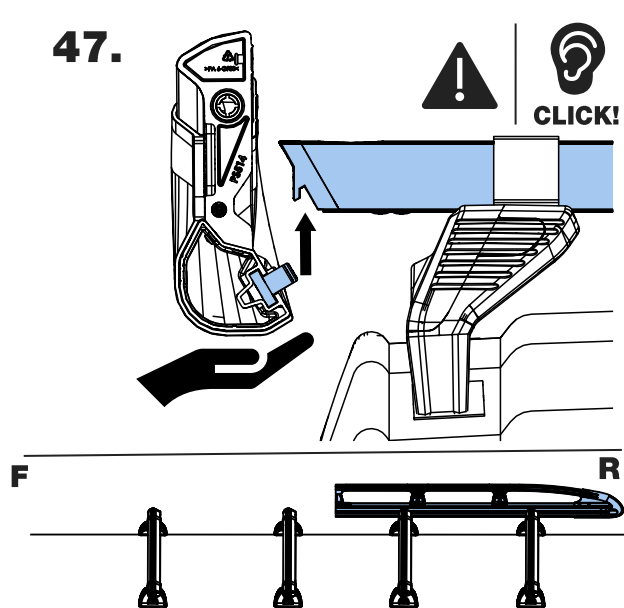


53.

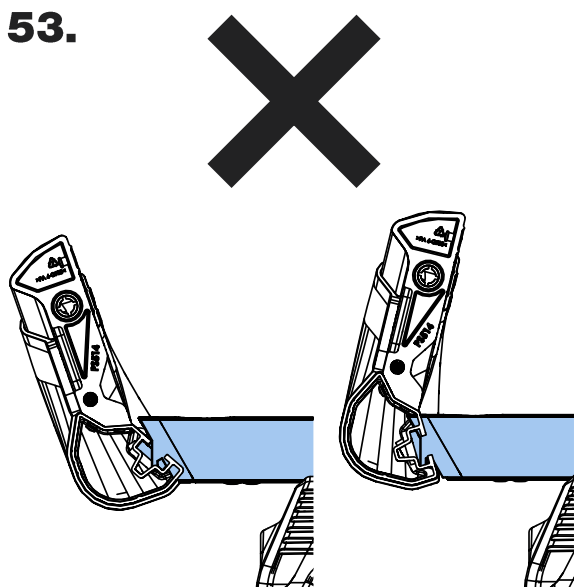


54.

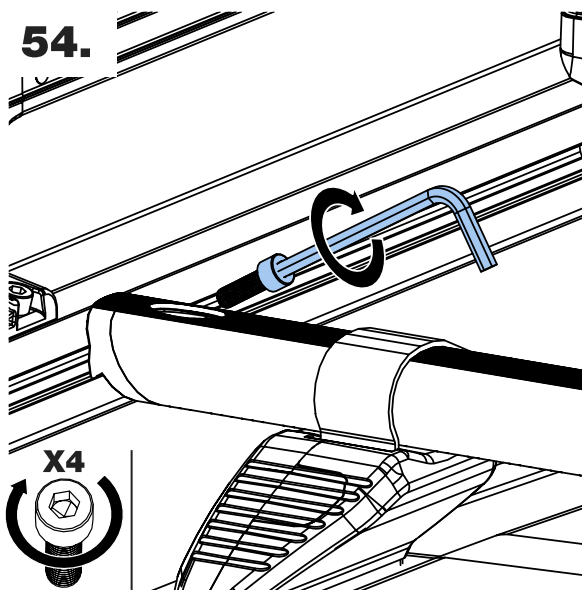


55.

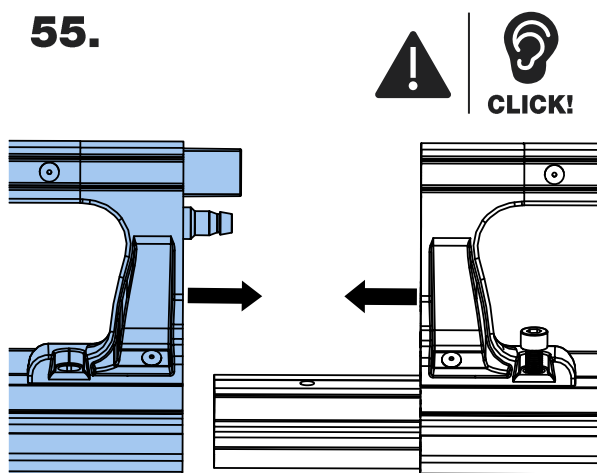


56.

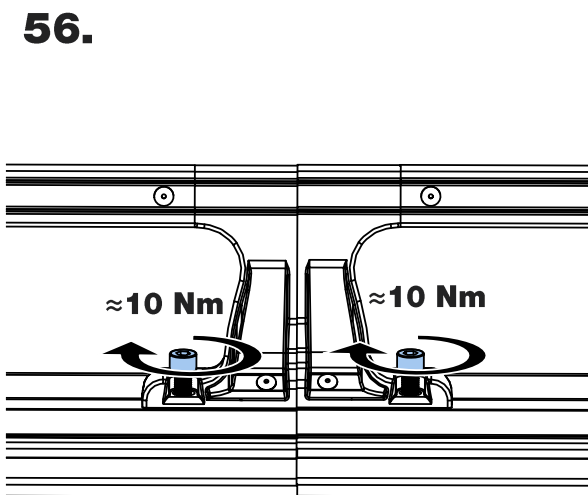


57.


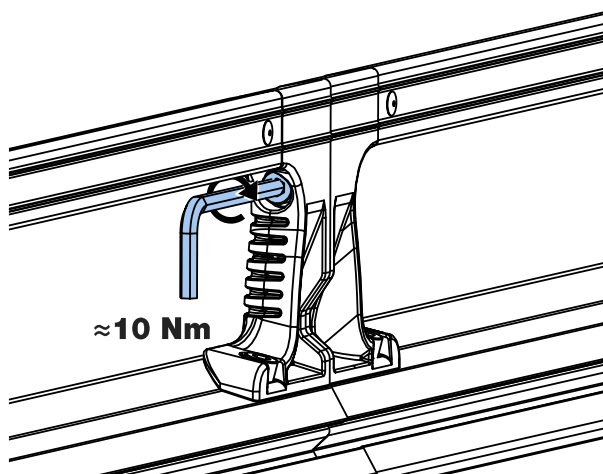


58.

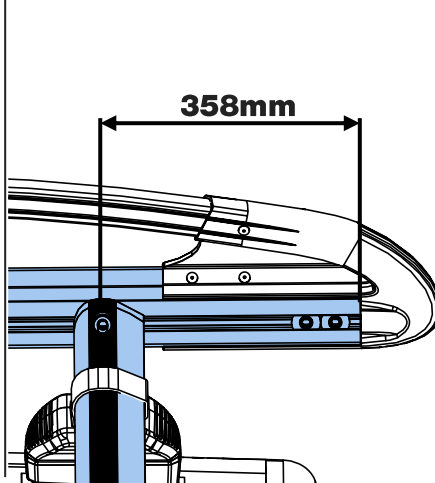


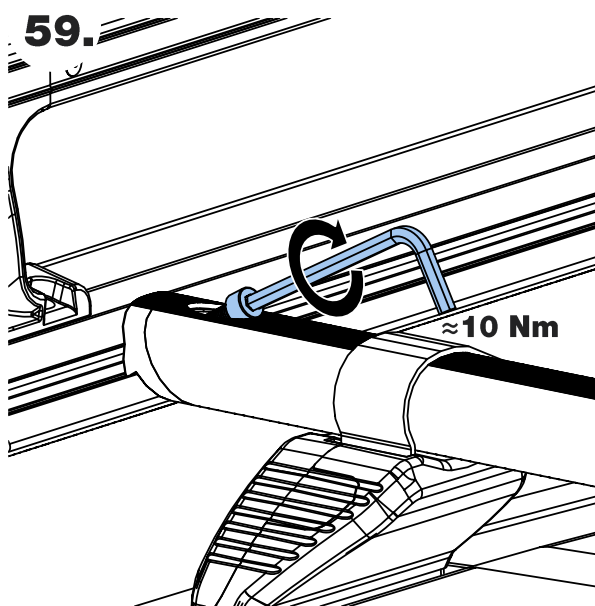


60.

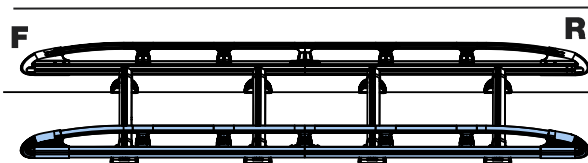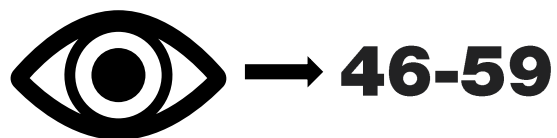


61.

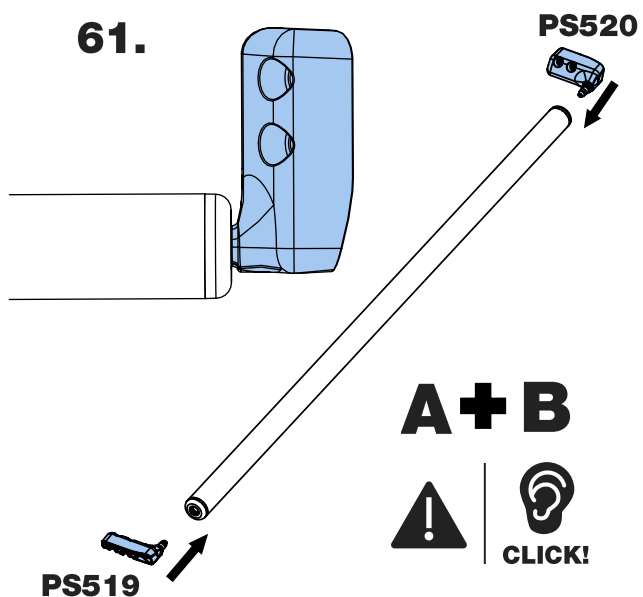


62.

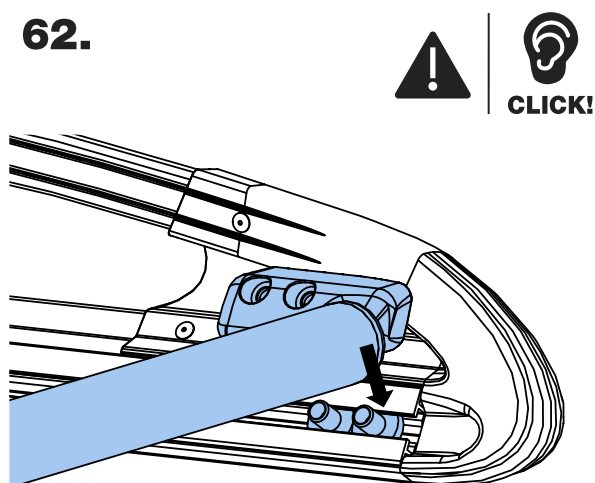

63.

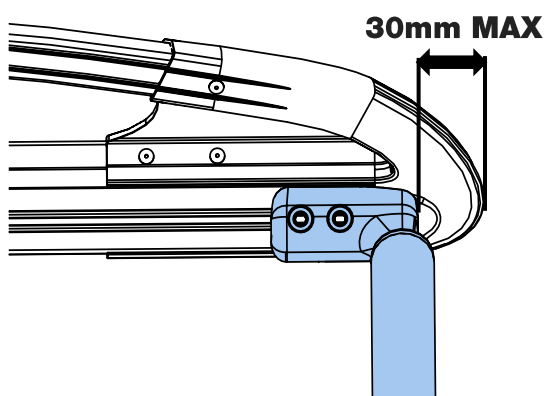


64.

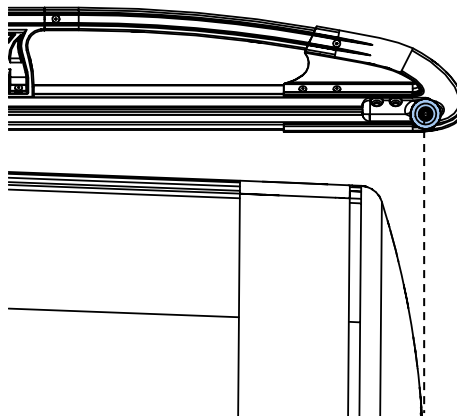





65.

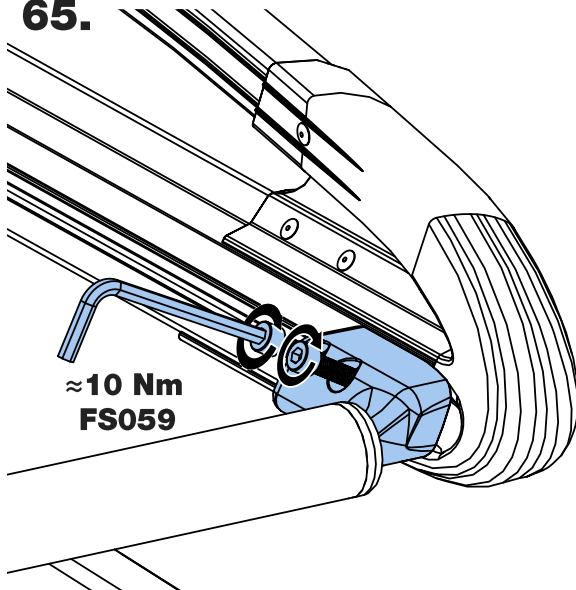


66.

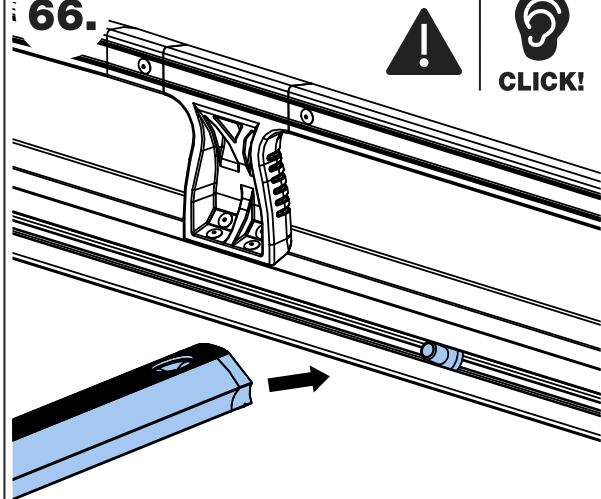


67.

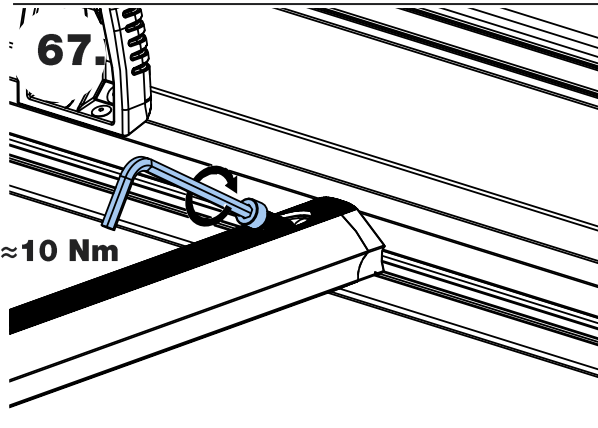

68.

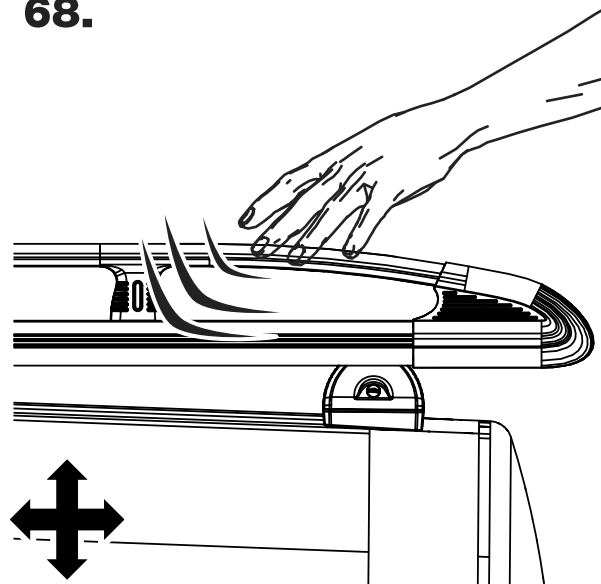

69.

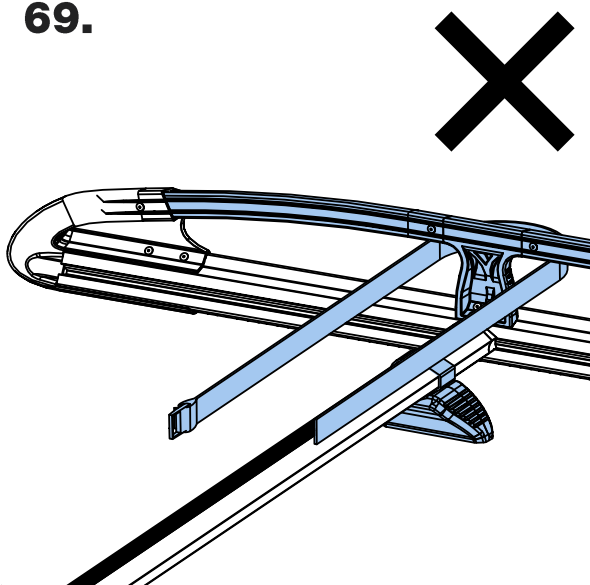

70.

