



VA4PR KammBar

Instructions

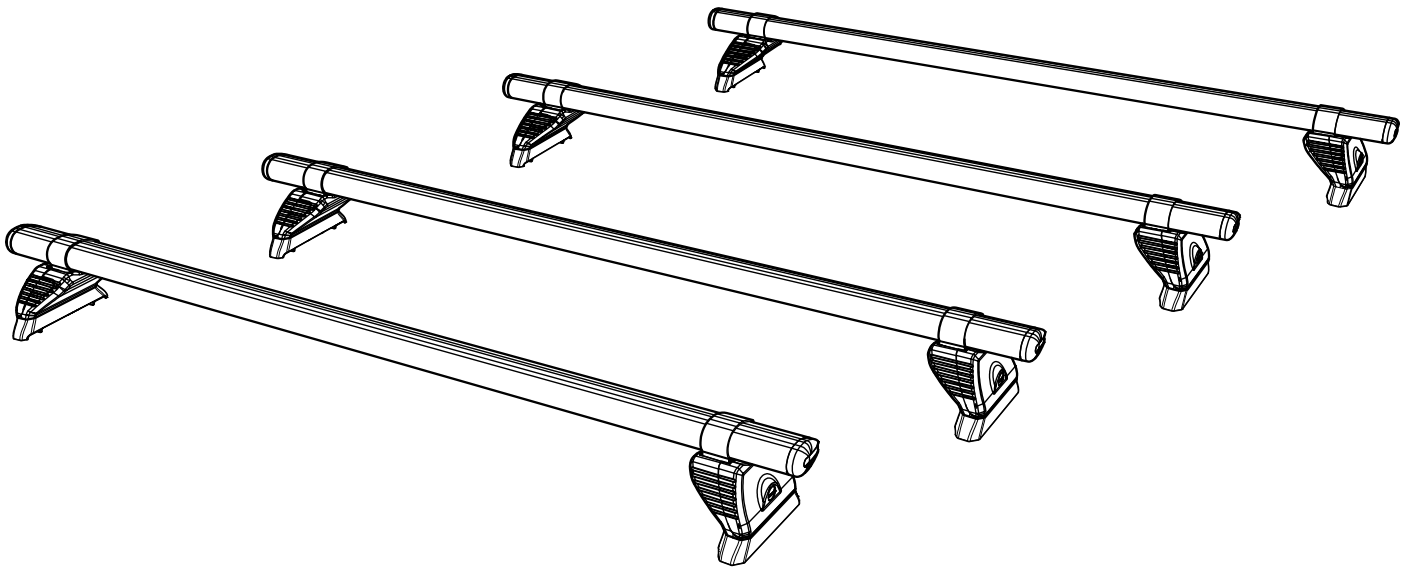

CITY CRASH (✓)

According to ISO/ PAS 11154:2006

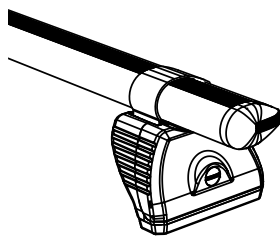


KammBar Pro & Black x 1

2.2kg/4.9lbs



Max

75kg/165lbs

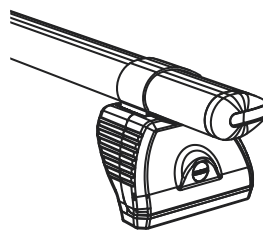




KammBar Fleet x 1

2.5kg/5.5lbs




Max


50kg/110lbs

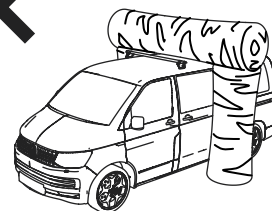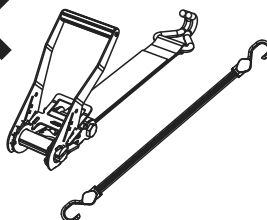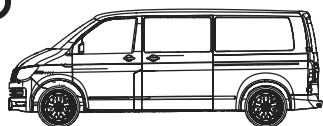


KammBar Pro & Black

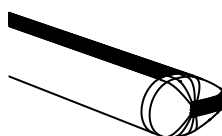


**SA421/
SA539 x 4** ☐

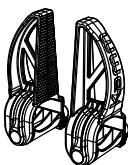

KLS2 x 1 ☐

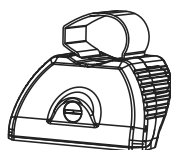


SA397 x 4 ☐

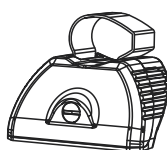


SA398 x 4 ☐


KammBar Fleet

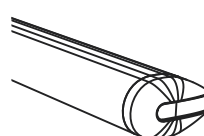


SA395 x 4 ☐



C04 x 4
optional upgrade

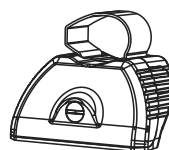


SA397 x 4 ☐

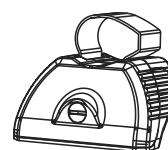


SA398 x 4 ☐

Fitting Kit



PS186 x 8 ☐




PS210 x 8 ☐



FT02 x 1 ☐



FT01 x 1 ☐



PS208 (M6) x 2 ☐




FW036 (M6) x 2 ☐



PS209 (M6) x 12 ☐




FW001 (M6) x 12 ☐



SA069 x 6 ☐




FW002 (M8) x 6 ☐




TP030 (M6) x 2 ☐



**FS103
(M6 x 25) x 12** ☐




**FS062
(M8 x 25) x 6** ☐




**FB001
(M6 x 55) x 2** ☐


1.

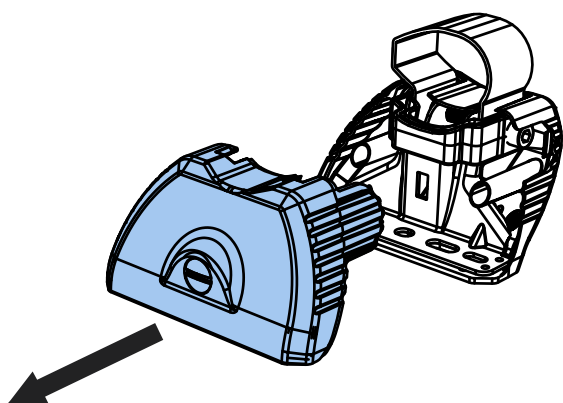

2.

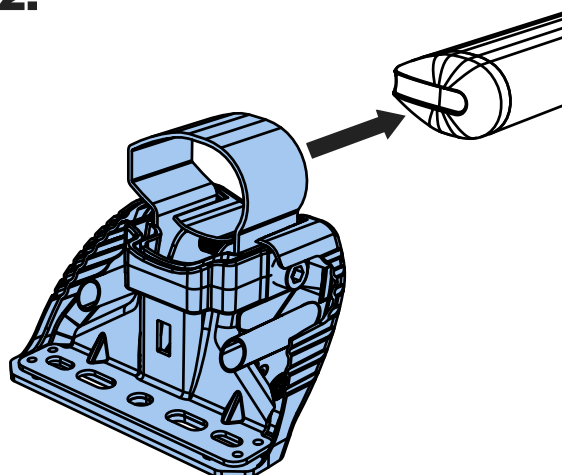

3.




SA397
PS186
SA069




SA397
PS186
SA069




SA397
PS186
SA069



SA397
PS186

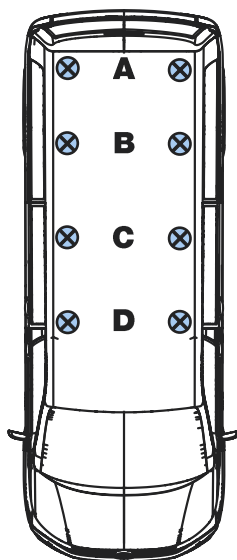


SA398
PS186
SA069




SA398
PS186
SA069





SA398
PS186
SA069




SA398
PS186



4.

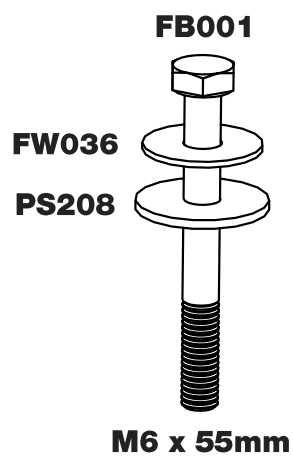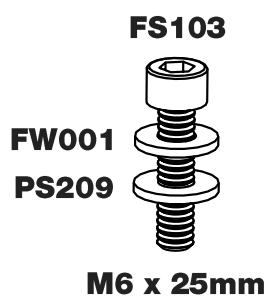

5.

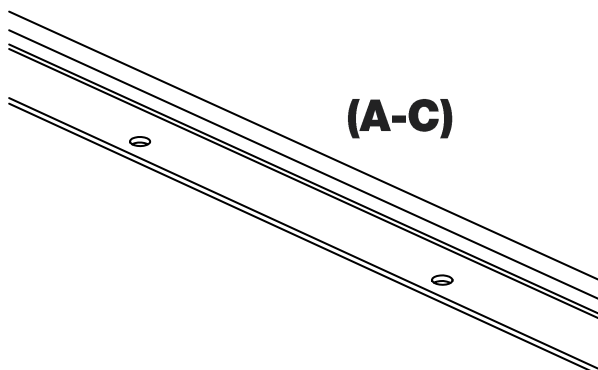


(A-C)



7-13, 17-20.

6.

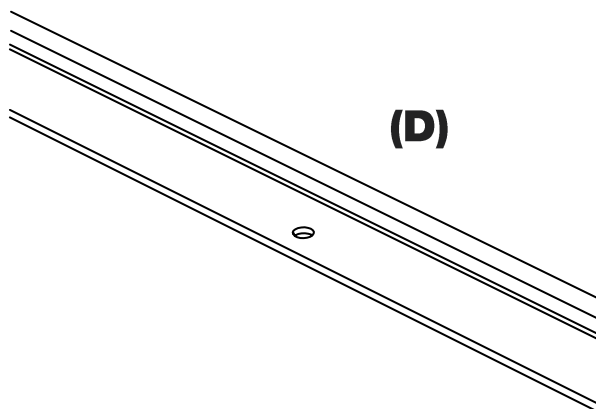


(D)



14-20.


7.

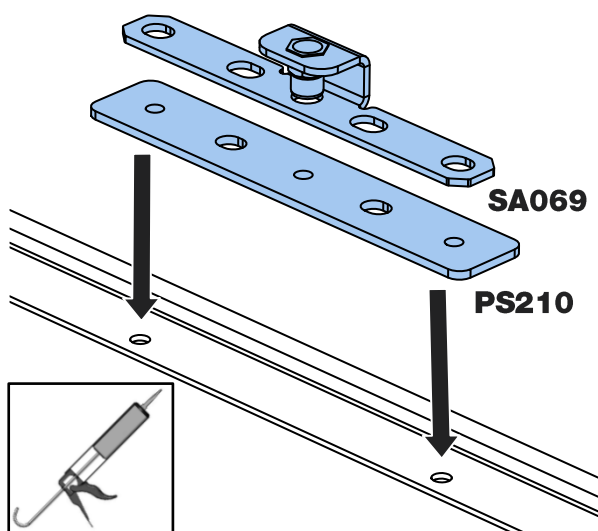

SA069


PS210

8.

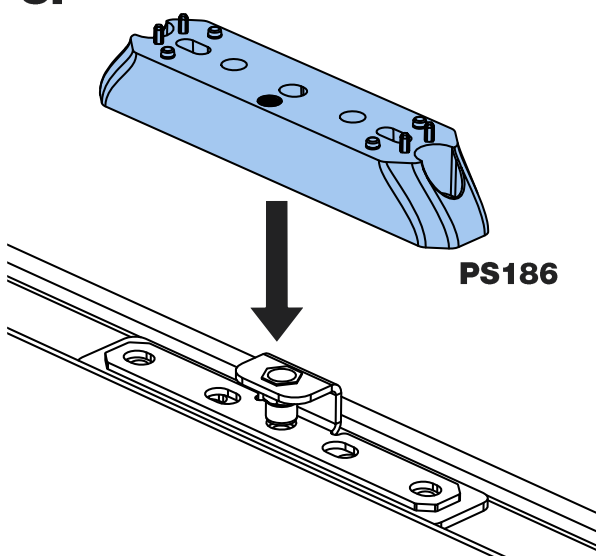


PS186

9.

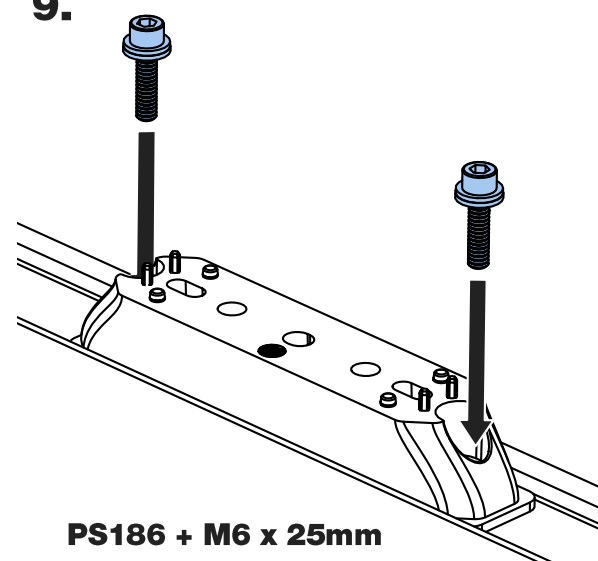

PS186 + M6 x 25mm


10.

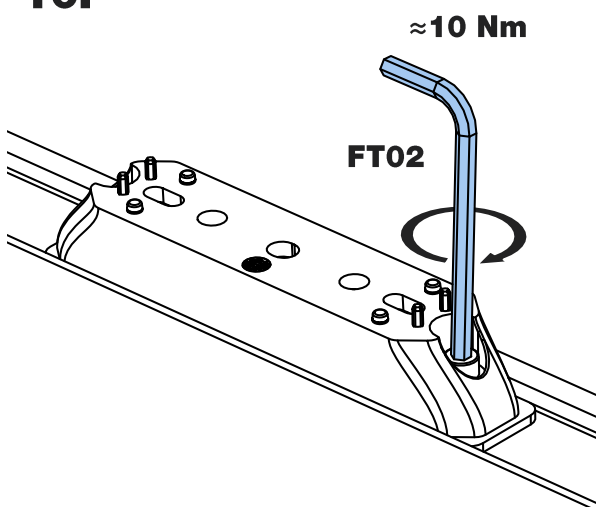


≈10 Nm

FT02

11.

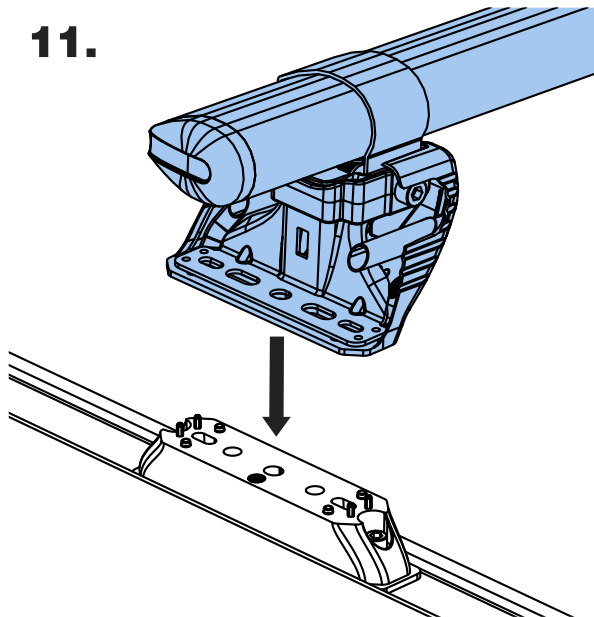


12.

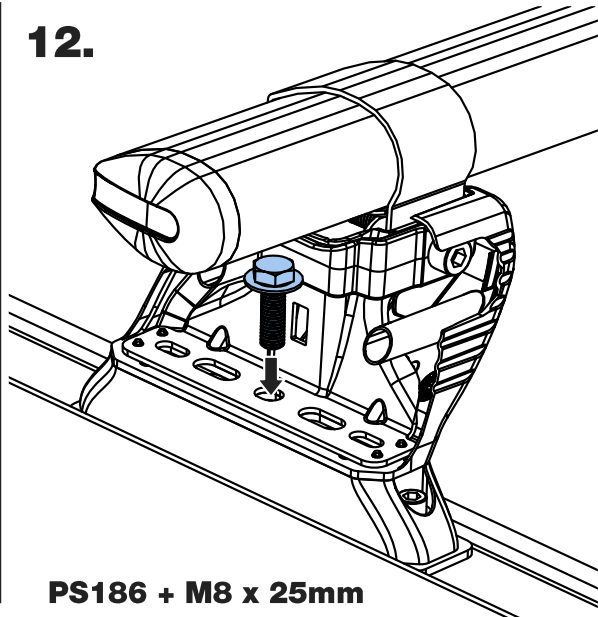

PS186 + M8 x 25mm


13.

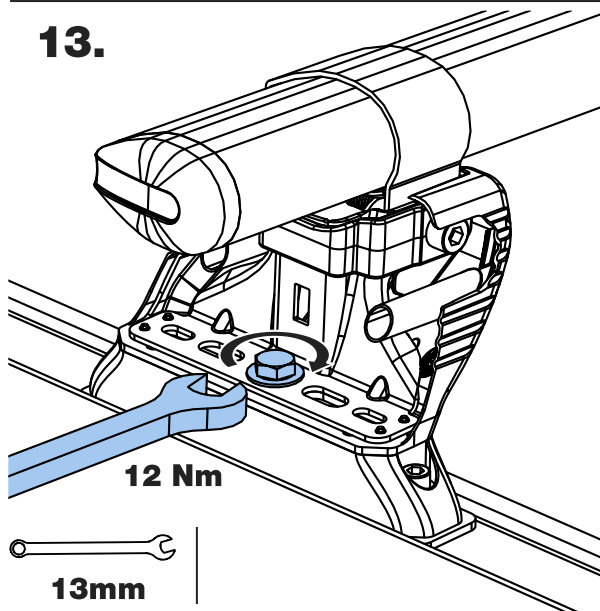

12 Nm

13mm


14.

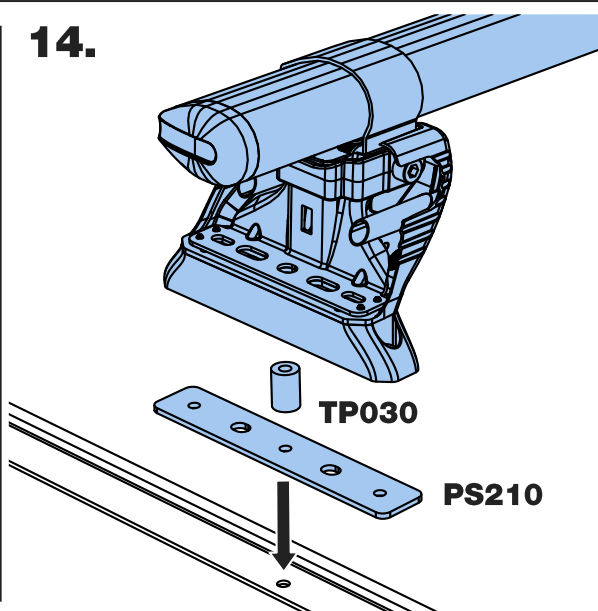

TP030


PS210

15.

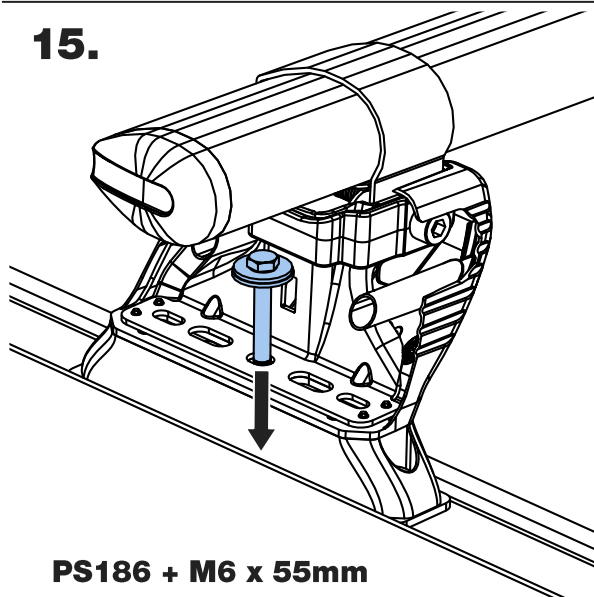

PS186 + M6 x 55mm


16.

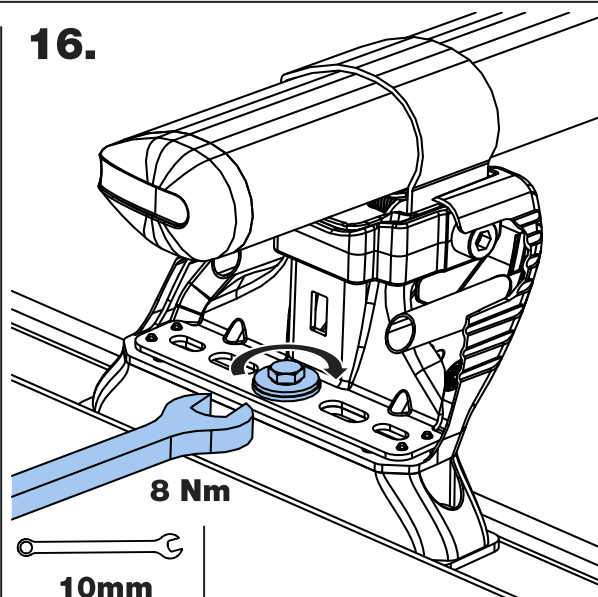


8 Nm

10mm


17.

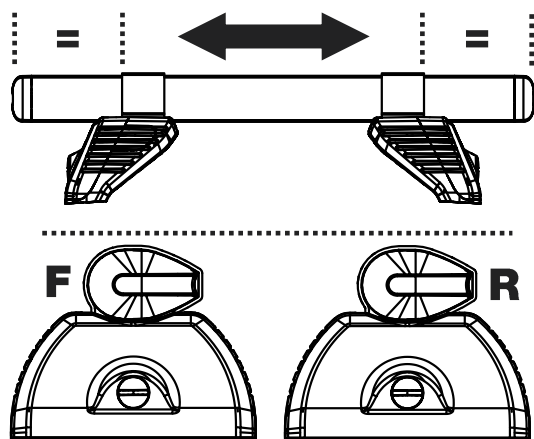

18.

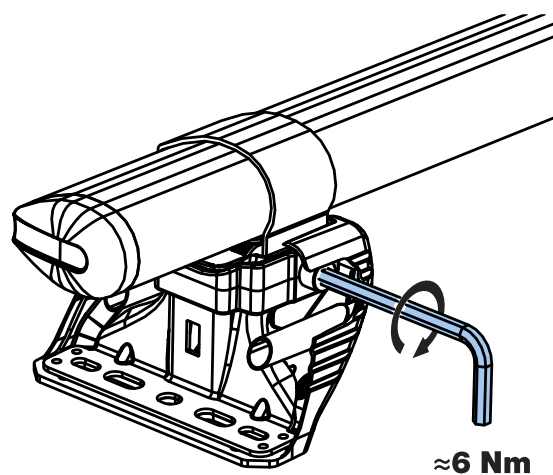

19.

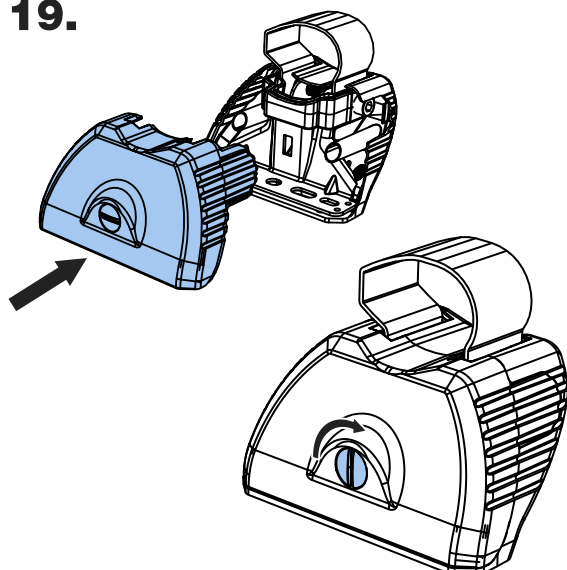

20.

